

8 Control and monitoring system

Error codes machine

Code	Description	Limitation	Action	Connection and component	Diagnostic menu	Group
1	Communication error with Control unit attachment (D791-1).	Attachment functions not working.	Use diagnostic menu to find incorrect segment.	D791-1	CAN/POWER, menu 2	11.6.2 Redundant CAN-bus
2	Communication error with Control unit attachment option (D791-2).	Levelling, tilt, overheight extension not working.	Use diagnostic menu to find incorrect segment.	D791-2	CAN/POWER, menu 2	11.6.2 Redundant CAN-bus
3	Communication error with Control unit attachment left legs (D791-3).	Left side of bottom lift not working.	Use diagnostic menu to find incorrect segment.	D791-3	CAN/POWER, menu 2	11.6.2 Redundant CAN-bus
4	Communication error with Control unit attachment right leg pair (D791-4).	Right side of bottom lift not working.	Use diagnostic menu to find incorrect segment.	D791-4	CAN/POWER, menu 2	11.6.2 Redundant CAN-bus
5	Communication error with Control unit frame rear (D797-R).	Lighting rear, hydraulic oil cooling, overload system, extension not working.	Use diagnostic menu to find incorrect segment.	D797-R	CAN/POWER, menu 2	11.6.2 Redundant CAN-bus
6	Communication error with Control unit frame front (D797-F).	Front lighting, lift, extension, brake light, brake cooling not working.	Use diagnostic menu to find incorrect segment.	D797-F	CAN/POWER, menu 2	11.6.2 Redundant CAN-bus
7	Communication error with Control unit frame option (D797-O).	Sliding cab, support jacks, joystick steering mini-wheel, cab lift and cab tilt not working.	Use diagnostic menu to find incorrect segment.	D797-O	CAN/POWER, menu 2	11.6.2 Redundant CAN-bus
8	Communication error with Control unit KID (D795).	Controls in steering wheel panel and display not working.	Use diagnostic menu to find incorrect segment.	D795	CAN/POWER, menu 2	11.6.2 Redundant CAN-bus

Code	Description	Limitation	Action	Connection and component	Diagnostic menu	Group
9	Communication error with Control unit cab option (D790-3).	Mini-wheel or joystick steering not working	Use diagnostic menu to find incorrect segment.	D790-3	CAN/POWER, menu 2	11.6.2 Redundant CAN-bus
11	Cable defect CAN-net segment 1.	No limitation.	Use diagnostic menu to find incorrect segment.	Varies depending on machine configuration.	CAN/POWER, menu 1 and 21	11.6.2 Redundant CAN-bus
12	Cable defect CAN-net segment 2.	No limitation.	Use diagnostic menu to find incorrect segment.	Varies depending on machine configuration.	CAN/POWER, menu 1 and 21	11.6.2 Redundant CAN-bus
13	Cable defect CAN-net segment 3.	No limitation.	Use diagnostic menu to find incorrect segment.	Varies depending on machine configuration.	CAN/POWER, menu 1 and 21	11.6.2 Redundant CAN-bus
14	Cable defect CAN-net segment 4.	No limitation.	Use diagnostic menu to find incorrect segment.	Varies depending on machine configuration.	CAN/POWER, menu 1 and 21	11.6.2 Redundant CAN-bus
15	Cable defect CAN-net segment 5.	No limitation.	Use diagnostic menu to find incorrect segment.	Varies depending on machine configuration.	CAN/POWER, menu 1 and 21	11.6.2 Redundant CAN-bus
16	Cable defect CAN-net segment 6.	No limitation.	Use diagnostic menu to find incorrect segment.	Varies depending on machine configuration.	CAN/POWER, menu 1 and 21	11.6.2 Redundant CAN-bus
17	Cable defect CAN-net segment 7.	No limitation.	Use diagnostic menu to find incorrect segment.	Varies depending on machine configuration.	CAN/POWER, menu 1 and 21	11.6.2 Redundant CAN-bus
18	Cable defect CAN-net segment 8.	No limitation.	Use diagnostic menu to find incorrect segment.	Varies depending on machine configuration.	CAN/POWER, menu 1 and 21	11.6.2 Redundant CAN-bus

Code	Description	Limitation	Action	Con- nection and compo- nent	Diag- nostic menu	Group
20	Accelerator pedal (B690) not calibrated.	Poor sensitivity in accelerator pedal.	Calibrate the accelerator pedal, see tab 8 <i>Control system</i> , group 8.5.2.3 <i>Calibrate DRIVE-TRAIN</i> .	D790-1/ K6:11 – B690	CALIBRA- TION: DRIVE- TRAIN, menu 1 and 2	1. Engine
21	Communication error with Control unit transmission (D793).	Gear selection not working.	Use diagnostic menu to check communication. Check cable harness between Control unit cab (D790-1) and Control unit transmission (D793).	D790-1/ K13:1 – D793/M2 D790-1/ K13:2 – D793/L2	CAN/ POWER, menu 3	11.6.3 CAN-bus drivetrain
22	Communication error with Control unit engine (D794).	Engine does not react to commands from cab.	Use diagnostic menu to check communication. Check cable harness between Control unit cab (D790-1) and Control unit engine (D794).	Volvo: D790-1/ K13:1, K13:2 – D794/2, 1 Cummins: D790-1/ K13:1, K13:2 – D794/46, 37	CAN/ POWER, menu 3	11.6.3 CAN-bus drivetrain
23	The setup file cannot be read in Control unit cab (D790-1).	No controls working in cab.	Contact Kalmar Industries AB.	D790-1	-	11.5.3.1 Control unit cab
24	Electric power feed to cab fan less than 18 V.	Cab fan not working.	Check fuse F58-5/3.	D790-1/ K2:8 – 58- 5/3:2	-	9.4.3 Cab fan
25	Interference during soft-ware download. Buffer for error codes from Control unit engine (D794), active error code when downloading.	Error code is stored in Control unit engine (D794).	Turn the ignition off and on. Repeat software download.	D794	ENGINE, menu 8	11.5.3.10 Control unit engine
26						
27						
28						
29						
30						

Code	Description	Limitation	Action	Connection and component	Diagnostic menu	Group
31	Incorrect electric power feed to Control unit cab (D790-1). Voltage lower than 18 V or higher than 32 V.	Control in cab not working.	Check fuse F58-5/1. Check cable harness between the control unit and the component with diagnostic menu. Check the control unit.	D790-1/ K1:2, K1:3, K1:4 – F58-5/1:1, 1:2	CAN/ POWER, menu 6	11.5.1.3 Ignition voltage (15)
32	Incorrect 5 V reference voltage to analogue controls in the cab. Voltage lower than 4.9 V or higher than 5.1 V.	Analogue controls in the cab not working (mini-wheel/joy-stick, control lever and controls for air conditioning).	Check cable harness between the control unit and the component with diagnostic menu. Check the component.	D790-1/ K4:5, K 5:11, K5:13, K7:2, K 9:7, K10:3	CAN/ POWER, menu 6	11.5.3.1 Control unit cab
33	No feedback signal for control breaker voltage from Relay control breaker voltage (K3009-1).	Control breaker cannot be disengaged. All hydraulic functions are blocked.	Check fuse F58-3/8. Check cable harness between the control unit and the component with diagnostic menu.	D790-1/ K11:13 – K3009-1/ 87	CAN/ POWER, menu 5	11.5.1.4 Control breaker voltage (15E)
34	Incorrect signal from Switch parking brake (S107), indicates released and applied at same time or not at all.	Parking brake cannot be released.	Check cable harness between the control unit and the component with diagnostic menu. Check the switch.	D791-1/ K8:5 – S107/7 D791-1/ K8:13 – S107/1	HYD, menu 5	4.5 Parking brake
35	Interference during software download. Buffer for error codes from Control unit transmission (D793), active error code when downloading.	Error code is stored in Control unit transmission (D793).	Turn the ignition off and on. Repeat software download.	D793	TRANSM, menu 13	11.5.3.9 Control unit transmission
36						
37						
38						
39						
40						
41	The transistor has been triggered due to short-circuiting in the circuit to Wiper motor, rear (M650-2).	Windshield wiper rear not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the motor.	D790-1/ K2:4 – M650-2/53	CAB, menu 3	9.5.7 Wiper motor rear

Code	Description	Limitation	Action	Connection and component	Diagnostic menu	Group
42	The transistor has been triggered due to short-circuiting in the circuit to Rotating beacon (H428).	Rotating beacon not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the component.	D790-1/ K2:5 – H428	LIGHTS, menu 9	9.6.8 Rotating beacon
43	The transistor has been triggered due to short-circuiting in the circuit to Work light cab left (E404-1L).	Work light cab left not working.	Check the light. Check cable harness between the control unit and the component with diagnostic menu.	D790-1/ K2:6 – E404-1L	LIGHTS, menu 1	9.6.9 Work lights cab
44	The transistor has been triggered due to short-circuiting in the circuit to Work light cab right (E404-1R).	Work light cab right not working.	Check the light. Check cable harness between the control unit and the component with diagnostic menu.	D790-1/ K2:7 – E404-1R	LIGHTS, menu 1	9.6.9 Work lights cab
45	The transistor has been triggered due to short-circuiting in the circuit to Wiper motor, front (M650-1).	Windshield wiper front not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the motor.	D790-1/ K2:1 – M650-1/53	CAB, menu 2	9.5.1 Wiper front
46	The transistor has been triggered due to short-circuiting in the circuit to Fan motor (M657-1).	Cab fan not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the motor.	D790-1/ K2:2 – M657-1/2	CLIMATE, menu 6	9.4.3 Cab fan
47	The transistor has been triggered due to short-circuiting in the circuit to Actuator recirculation (M612).	The recirculation damper for ventilation is not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the motor.	D790-1/ K2:3 – M612/3	CLIMATE, menu 6	9.4.2 Fresh air and recirculation damper
48	The transistor has been triggered due to short-circuiting in the circuit to Water valve (Y673).	Heat in cab cannot be adjusted.	Check cable harness between the control unit and the component with diagnostic menu. Check the motor.	D790-1/ K4:1 – Y673/5	CLIMATE, menu 7	9.4.5 Water valve
49	The transistor has been triggered due to short-circuiting in the circuit to Water valve (Y673).	Heat in cab cannot be adjusted.	Check cable harness between the control unit and the component with diagnostic menu. Check the motor.	D790-1/ K4:2 – Y673/6	CLIMATE, menu 7	9.4.5 Water valve

Code	Description	Limitation	Action	Connection and component	Diagnostic menu	Group
50	The transistor has been triggered due to short-circuiting in the circuit to Damper motor (Y672)	Air distribution in cab cannot be adjusted.	Check cable harness between the control unit and the component with diagnostic menu. Check the motor.	D790-1/ K4:3 – Y672/5	CLIMATE, menu 8	9.4.14 Air distributor
51	The transistor has been triggered due to short-circuiting in the circuit to Damper motor (Y672).	Air distribution in cab cannot be adjusted.	Check cable harness between the control unit and the component with diagnostic menu. Check the motor.	D790-1/ K4:4 – Y672/6	CLIMATE, menu 8	9.4.14 Air distributor
53	The transistor has been triggered due to short-circuiting in the circuit to Washer motor roof and rear (M651-2).	Windshield washer rear and roof not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the motor.	D790-1/ K5:4 – M651-2	CAB, menu 1	9.5.4 Washer motor and reservoir
54	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Switch flashing hazard lights (S109).	Flashing hazard lights not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the switch.	D790-1/ K5:5 – S109/	LIGHTS, menu 7	9.6.7 Flashing hazard lights
55	The transistor has been triggered due to short-circuiting in the circuit to background lighting in switches and instruments.	Reduced or no background lighting in switches and instruments	Check bulbs for background lighting, change if needed. Check cable harness to background lighting.	D7901/ K6:1, K 8:15, K9:2, K 10:5, all inputs type A Digital in	LIGHTS, menu 13	9.1 Controls and instruments
56	The transistor has been triggered due to short-circuiting or open circuit in the circuit to LED-indication for tilt lock in control lever (S815).	Indication for tilt lock in control lever is not illuminated.	Check cable harness between the control unit and the component with diagnostic menu. Check the switch.	D790-1/ K7:8 – S815/5	-	7.1.1 Control lever
57	The transistor has been triggered due to short-circuiting or open circuit in the circuit to LED-indication for levelling lock in control lever (S815).	Indication for levelling lock in control lever is not illuminated.	Check cable harness between the control unit and the component with diagnostic menu. Check the switch.	D790-1/ K7:9 – S815/7	-	7.1.1 Control lever

Code	Description	Limitation	Action	Con- nection and compo- nent	Diag- nostic menu	Group
60	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Relay seat heater (K383).	Seat heater not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the component.	D790-1/ K10:7 – K383/86	CAB, menu 8	9.3.3 Heat- ing coils
61	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Relay extra work light boom (K304).	Extra work light boom not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the component.	D790-1/ K10:8 – K304/86	LIGHTS, menu 3	9.6.10 Work light boom
62	The transistor has been triggered due to short-circuiting or open circuit in the circuit to simulated D+ feed to hour meter (P708) and Relay compressor air-suspended seat (K358).	Hour meter and air-suspended seat not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the component.	D790-1/ K10:9 – P708, K358/86	CAN/ POWER, menu 7	9.3.5 Air suspension
63	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Relay ignition voltage (K315-1).	No ignition voltage to the machine's Control units.	Check cable harness between the control unit and the component with diagnostic menu. Check the component.	D790-1/ K10:10 – K315-1/86	CAN/ POWER, menu 4	11.5.1.3 Ig- nition volt- age (15)
64	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Relay control breaker voltage (K3009-1).	No control breaker voltage to the machine's Control units.	Check cable harness between the control unit and the component with diagnostic menu. Check the component.	D790-1/ K10:11 – K3009-1/ 86	CAN/ POWER, menu 5	11.5.1.4 Control breaker voltage
65	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Relay control breaker voltage (K3009-2).	No control breaker voltage to the machine's Control units.	Check cable harness between the control unit and the component with diagnostic menu. Check the component.	D790-1/ K10:11 – K3009-1/ 86	CAN/ POWER, menu 5	11.5.1.4 Control breaker voltage
66	The transistor has been triggered due to short-circuiting in the circuit to Washer motor windshield (M651-1).	Windshield washer not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the component.	D790-1/ K10:13 – M651-1	CAB, menu 1	9.5.4 Washer motor and reservoir

Code	Description	Limitation	Action	Connection and component	Diagnostic menu	Group
67	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Wiper motor, roof (M650-3).	Wiper roof not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the motor.	D790-1/ K10:14 – M650-3/53	CAB, menu 4	9.5.6 Wiper motor roof
68	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Circulation pump pause heater (M667).	Pause heater not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the motor.	D790-1/ K10:15 – M667	-	9.4 Heating, ventilation and air conditioning
69	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Relay ignition voltage drivetrain (K315-2).	No voltage feed to engine and transmission.	Check cable harness between the control unit and the component with diagnostic menu. Check the component.	D790-1/ K10:16 – K315-2/86	CAN/ POWER, menu 4	11.5.1.3 Ignition voltage (15)
71	The transistor has been triggered due to short-circuiting in the circuit to Interior lighting cab (E434-1).	Interior lighting in cab not working.	Check the light. Check cable harness between the control unit and the component with diagnostic menu.	D790-1/ K11:6 – E434-1	LIGHTS, menu 12	9.6.12 Interior lighting cab
74	The transistor has been triggered due to short-circuiting in the circuit to Horn (H850) or Relay compressed air horn (K3016)	Horn / compressed air horn not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the component.	D790-1/ K11:11 – H850/1, K3016/86	CAB, menu 5	9.7.1 Horn
75	Relay ignition voltage (K315-1) has jammed in position on.	Control unit cab (D790-1) is still supplied with voltage and thus active.	Check cable harness between the control unit and the component with diagnostic menu. Check the component.	-	CAN/ POWER, menu 4	11.5.1.3 Ignition voltage
80	No signal from Pressure switch air conditioning (S246), despite the AC compressor being activated.	Air conditioning not working.	Check drive belt for air conditioning compressor. Check that compressor for air conditioning is activated. Check cable harness between the control unit and the component with diagnostic menu.	D797-R/ K1:37 – S246	CLIMATE, menu 3	9.4.10 Pressure monitor

Code	Description	Limitation	Action	Connection and component	Diagnostic menu	Group
81	Incorrect signal from-Damper motor (Y672). Signal voltage lower than 0.2 V or higher than 4.8 V.	Air distribution cannot be changed.	Check cable harness between the control unit and the component with diagnostic menu. Check the motor.	D790-1/ K4:7 – Y672/9	CLIMATE, menu 4	9.4.6 Fresh air and re-circulation damper
85	Incorrect signal from accelerator pedal (R690). Signal voltage lower than 0.2 V or higher than 4.8 V.	Engine rpm limited to idle.	Check cable harness between the control unit and the component with diagnostic menu. Check the component.	D790-1/ K6:11 – R690/2	ENGINE, menu 1	1 Engine
87	Incorrect signal from Control lever (S815-P1) for lift and lower. Signal voltage lower than 0.2 V or higher than 4.8 V.	Lift and lower not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the switch.	D790-1/ K7:3 – S815-P1/8	BOOM, menu 1	7.1.1 Control lever
88	Incorrect signal from Control lever (S815-P2) for extension. Signal voltage lower than 0.2 V or higher than 4.8 V.	Extension not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the switch.	D790-1/ K7:4 – S815-P2/4	BOOM, menu 1	7.1.1 Control lever
89	Incorrect signal from Control lever (S815-P3) for rotation. Signal voltage lower than 0.2 V or higher than 4.8 V.	Rotation not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the switch.	D790-1/ K7:5 – S815-P3/ 11	ATTACH, menu 1	7.1.1 Control lever
90	Incorrect signal from Control lever (S815-P4) for tilt. Signal voltage lower than 0.2 V or higher than 4.8 V.	Controllable tilt not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the switch.	D790-1/ K7:6 – S815-P4/1	ATTACH, menu 1	7.1.1 Control lever
92	Incorrect signal from Joystick (R825-1) or Mini-wheel (R825-1). Signal voltage lower than 0.2 V or higher than 4.8 V.	Joystick steering or mini-wheel not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the switch.	D790-1/ K9:8 – R825-1/P2	STEERING, menu 1	5.1.2 Mini-wheel 5.1.3 Joystick
93	Incorrect signal from Mini-wheel (R825-2). Signal voltage lower than 0.2 V or higher than 4.8 V.	Joystick steering or mini-wheel not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the switch.	D790-1/ K9:9 – R825-2/H2	STEERING, menu 1	5.1.2 Mini-wheel

Code	Description	Limitation	Action	Connection and component	Diagnostic menu	Group
94	Incorrect signal from Water valve cab heat (Y673). Signal voltage lower than 0.2 V or higher than 4.8 V.	Cab heat cannot be adjusted.	Check cable harness between the control unit and the component with diagnostic menu. Check the motor.	D790-1/ K10:4 – Y673/9	CLIMATE, menu 4	9.4.5 Water valve
96	Incorrect signal from Sensor cab temperature (B775-1). The sensor indicates temperature below -43 °C or above 105 °C.	Air conditioning not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the sensor.	D790-1/ K4:8 – B775-1/2	CLIMATE, menu 1	9.4.17 Sensor cab temperature
97	Incorrect signal from Sensor outdoor temperature (B774). Temperature signal above 105 °C.	Air conditioning not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the sensor.	D790-1/ K4:9 – B774/2	CLIMATE, menu 2	9.4.18 Sensor outdoor temperature
98	Incorrect signal from Sensor temperature outlet fan (B775-2). The sensor indicates temperature below -43 °C or above 105 °C.	Air conditioning not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the sensor.	D790-1/ K4:10 – B775-2/2	CLIMATE, menu 2	9.4.16 Sensor temperature outlet fan
99	Incorrect signal from Sensor temperature refrigerant (B775-3). The sensor indicates temperature below -43 °C or above 105 °C.	Air conditioning not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the sensor.	D790-1/ K4:11 – B775-3/2	CLIMATE, menu 2	9.4.12 Sensor temperature refrigerant
101	Redundant voltage feed left to Control unit frame front (D797-F) does not arrive.	-	Check cable harness between the control unit and the component with diagnostic menu. Check the control unit.	D797-F/ K2:7	CAN/ POWER, menu 8	11.5.1.2 Redundant voltage feed of Control units
102	Redundant voltage feed right to Control unit frame front (D797-F) does not arrive.	-	Check cable harness between the control unit and the component with diagnostic menu. Check the control unit.	D797-F/ K2:8	CAN/ POWER, menu 8	11.5.1.2 Redundant voltage feed of Control units

Code	Description	Limitation	Action	Connection and component	Diagnostic menu	Group
103	Incorrect electric power feed to Control unit frame front (D797-F). Voltage lower than 18 V or higher than 32 V.	No electric power feed to components.	Check fuse F58-2/1, change if needed. Check cable harness between the control unit and the component with diagnostic menu.	D797-F/ K2:1, K2:9, K2:10 – F58-2/1:1, 1:2	CAN/ POWER, menu 8	11.5.1.3 Ignition voltage (15)
104	Incorrect control breaker voltage to Control unit frame front (D797-F).	Functions supplied with control breaker voltage have no feed. All hydraulic functions are blocked.	Check fuse F58-3/2, change if needed. Check cable harness between the control unit and the component with diagnostic menu.	D797-F/ K2:11 – F58-3/2:1	CAN/ POWER, menu 8	11.5.1.4 Control breaker voltage
105	Incorrect 5 V reference voltage to pressure sensor. Voltage lower than 4.9 V or higher than 5.1 V.	Regeneration lift, weight indicator and overload system not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the sensor.	D797-F/ K1:8 – B768-R1/1, B768-R2/1, B768-L1/1, B768-L2/1	CAN/ POWER, menu 9	8.2.1.7 Sensor hydraulic pressure lift cylinder
106	The transistor has been triggered due to short-circuiting in the circuit to Cooling fan, brake oil (M674).	Cooling fan brake oil not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the motor.	D797-F/ K1:14 – M674/1	HYD, menu 2	4.8.8 Cooling fan
107	The transistor has been triggered due to short-circuiting or open circuit in the circuit to High beam light left (E402L).	Left high beam not working.	Check the light. Check the bulb holder. Check cable harness between the control unit and the component with diagnostic menu.	D797-F/ K1:1 – E402L/1	LIGHTS, menu 6	9.6.1 Headlights
108	The transistor has been triggered due to short-circuiting or open circuit in the circuit to High beam light right (E402R).	Right high beam not working.	Check the light. Check the bulb holder. Check cable harness between the control unit and the component with diagnostic menu.	D797-F/ K1:15 – E402R/1	LIGHTS, menu 6	9.6.1 Headlights
110	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Low beam light (E400L/E400R).	Low beams not working.	Check the light. Check the bulb holder. Check cable harness between the control unit and the component with diagnostic menu.	D797-F/ K1:42 – E400L/1, E400R/1	LIGHTS, menu 6	9.6.1 Headlights

Code	Description	Limitation	Action	Connection and component	Diagnostic menu	Group
111	The transistor has been triggered due to short-circuiting in the circuit to Solenoid valve boom up (Y6005).	Lift not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D797-F/ K1:2 – Y6005/1	BOOM, menu 4	7.2.5 Control valve lift, lower and extension
112	The transistor has been triggered due to short-circuiting in the circuit to Solenoid valve boom down (Y6004).	Lower not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D797-F/ K1:3 – Y6004/1	BOOM, menu 5	7.2.5 Control valve lift, lower and extension
113	The transistor has been triggered due to short-circuiting in the circuit to Solenoid valve boom out (Y6006).	Extension out not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D797-F/ K1:4 – Y6006/1	BOOM, menu 7	7.3.5 Control valve lift, lower and extension
114	The transistor has been triggered due to short-circuiting in the circuit to Solenoid valve boom in (Y6007).	Extension in not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D797-F/ K1:5 – Y6007/1	BOOM, menu 6	7.3.5 Control valve lift, lower and extension
115	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Solenoid valve blocking lift left (Y6002).	Lift and lower not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D797-F/ K1:30 – Y6002/1	BOOM, menu 2	7.2.7 Valve block lift cylinder
116	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Solenoid valve blocking lift right (Y6001).	Lift and lower not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D797-F/ K1:31 – Y6001/1	BOOM, menu 2	7.2.7 Valve block lift cylinder
117	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Solenoid valve regeneration lift right (Y6051).	Regenerating lift not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D797-F/ K1:32 – Y6051/1	BOOM, menu 3	7.2.7 Valve block lift cylinder

Code	Description	Limitation	Action	Connection and component	Diagnostic menu	Group
118	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Solenoid valve regeneration lift left (Y6052).	Regenerating lift not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D797-F/ K1:33 – Y6052/1	BOOM, menu 3	7.2.7 Valve block lift cylinder
119	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Solenoid valve parking brake (Y642).	Parking brake cannot be released.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D797-F/ K1:7 – Y642/1	HYD, menu 5	4.5.3 Solenoid valve parking brake
120	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Light bulb direction indicator left front (H422).	Direction indicator left front not working.	Check the light. Check the bulb holder. Check cable harness between the control unit and the component with diagnostic menu.	D797-F/ K1:9 – H422/1	LIGHTS, menu 8	9.6.6 Direction indicators
121	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Light bulb direction indicator right front (H423).	Direction indicator right front not working.	Check the light. Check the bulb holder. Check cable harness between the control unit and the component with diagnostic menu.	D797-F/ K1:10 – H423/1	LIGHTS, menu 8	9.6.6 Direction indicators
122	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Light bulb running light left front H416-1).	Running light left front not working.	Check the light. Check the bulb holder. Check cable harness between the control unit and the component with diagnostic menu.	D797-F/ K1:25 – H416-1/1	LIGHTS, menu 5	9.6.2 Running lights
123	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Light bulb running light right front (H417-1).	Running light right front not working.	Check the light. Check the bulb holder. Check cable harness between the control unit and the component with diagnostic menu.	D797-F/ K1:29 – H417-1/1	LIGHTS, menu 5	9.6.2 Running lights

Code	Description	Limitation	Action	Connec- tion and compo- nent	Diag- nostic menu	Group
124	Incorrect 24 V reference voltage to Break-contact parking brake (S200), Break-contact low brake pressure (S204), Make-contact brake lights (S216) and Break-contact declutch (S220-2).	Indicator light parking brake and warning for low brake pressure do not go off. Brake lights and declutch not working. Gear cannot be engaged since the signal for released parking brake is not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the sensor.	D797-F/ K1:39 – S200/1, S204/1, S216/1, S220/1	CAN/ POWER, menu 9	4.5.5 Break-con- tact parking brake 4.3.8 Make-con- tact brake lights 4.3.7 Break-con- tact brake pressure
133	Incorrect signal from Sensor hydraulic pressure lift cylinder left (B768-L1). Signal voltage lower than 0.2 V or higher than 4.8 V.	Overload system not working. All lift functions operate with reduced speed. Error code 150 is activated.	Check cable harness between the control unit and the component with diagnostic menu. Check the sensor.	D797-F/ K1:21 – B768-L1/3	OP, menu 3 [V] HYD, menu 6 [bar]	7.2.9 Sen- sor hydrau- lic pressure lift cylinder
134	Incorrect signal from Sensor hydraulic pressure lift cylinder left (B768-L2). Signal voltage lower than 0.2 V or higher than 4.8 V.	Overload system not working. All lift functions operate with reduced speed. Error code 150 is activated.	Check cable harness between the control unit and the component with diagnostic menu. Check the sensor.	D797-F/ K1:22 – B768-L2/3	OP, menu 3 [V] HYD, menu 6 [bar]	7.2.9 Sen- sor hydrau- lic pressure lift cylinder
135	Incorrect signal from Sensor hydraulic pressure lift cylinder right (B768-R1). Signal voltage lower than 0.2 V or higher than 4.8 V.	Overload system not working. All lift functions operate with reduced speed. Error code 150 is activated.	Check cable harness between the control unit and the component with diagnostic menu. Check the sensor.	D797-F/ K1:23 – B768-R1/3	OP, menu 3 [V] HYD, menu 6 [bar]	7.2.9 Sen- sor hydrau- lic pressure lift cylinder
136	Incorrect signal from Sensor hydraulic pressure lift cylinder right (B768-R2). Signal voltage lower than 0.2 V or higher than 4.8 V.	Overload system not working. All lift functions operate with reduced speed. Error code 150 is activated.	Check cable harness between the control unit and the component with diagnostic menu. Check the sensor.	D797-F/ K1:24 – B768-R2/3	OP, menu 3 [V] HYD, menu 6 [bar]	7.2.9 Sen- sor hydrau- lic pressure lift cylinder

Code	Description	Limitation	Action	Con- nection and compo- nent	Diag- nostic menu	Group
137	Incorrect signal from Solenoid valve boom up (Y6005). The return current does not match the control current.	Lift not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D797-F/ K1:16 – Y6005/2	BOOM, menu 4	7.2.5 Con- trol valve lift, lower and exten- sion
138	Incorrect signal from Solenoid valve boom down (Y6004). The return current does not match the control current.	Lower not work- ing.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D797-F/ K1:17 – Y6004/2	BOOM, menu 5	7.2.5 Con- trol valve lift, lower and exten- sion
139	Incorrect signal from Solenoid valve boom out (Y6006). The return current does not match the control current.	Extension out not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D797-F/ K1:18 – Y6006/2	BOOM, menu 7	7.3.5 Con- trol valve lift, lower and exten- sion
140	Incorrect signal from Solenoid valve boom in (Y6007). The return current does not match the control current.	Extension in not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D797-F/ K1:19 – Y6007/2	BOOM, menu 6	7.3.5 Con- trol valve lift, lower and exten- sion
145	Incorrect signal from Sensor boom angle (B771). Logic error, signal does not change when lift or lower is activated.	Overload sys- tem not working. All lift functions operate with re- duced speed. Error code 150 is activated.	Check sensor arm's at- tachment. Check the sensor. Check cable harness between the control unit and the component with diagnostic menu.	-	OP, menu 4	8.2.1.5 Sensor boom an- gle
146	Incorrect signal from Sensor boom length (B777). Logic error, signal does not change when extension is activated.	Overload sys- tem not working. All lift functions operate with re- duced speed. Error code 150 is activated.	Check the line to the sensor. Check the sensor. Check cable harness between the control unit and the component with diagnostic menu.	-	OP, menu 4	8.2.1.6 Sensor boom length

Code	Description	Limitation	Action	Connection and component	Diagnostic menu	Group
147	High brake oil temperature.	Reduced braking capacity.	Check that cooling fan is working. Check that cooler isn't clogged. Check the sensor.	D797-F/ K2:13 – B762/1	HYD, menu 2	4.8 Temperature control, cleaning and brake oil
148	Incorrect signal from Sensor brake oil temperature (B762). Signal voltage lower than 0.2 V or higher than 4.8 V.	-	Check the sensor. Check cable harness between the control unit and the component with diagnostic menu.	D797-F/ K2:13 – B762/1	HYD, menu 2	4.8.10 Sensor brake oil temperature
149	Incorrect load curve or load curve missing.	Lift, lower and extension not working.	Contact Kalmar Industries AB.	-	-	7.2 Lift and lower. 7.3 Extension
150	Defective overload protection. This error code cannot be removed with Reset.	Overload system not working. All lift functions operate with reduced speed.	Check if there are error codes for sensors in the overload system.	-	OP, menu 1 - 5	8.2.1 Overload system
151	Redundant voltage feed left to Control unit frame rear (D797-R) does not arrive.	-	Check cable harness between the control unit and the component with diagnostic menu. Check the control unit.	D797-R/ K2:7	CAN/ POWER, menu 10	11.5.1.2 Redundant voltage feed of Control units
152	Redundant voltage feed right to Control unit frame rear (D797-R) does not arrive.	-	Check cable harness between the control unit and the component with diagnostic menu. Check the control unit.	D797-R/ K2:8	CAN/ POWER, menu 10	11.5.1.2 Redundant voltage feed of Control units
153	Incorrect electric power feed to Control unit frame rear (D797-R). Voltage lower than 18 V or higher than 32 V.	-	Check fuse F58-2/3, change if needed. Check cable harness between the control unit and the component with diagnostic menu.	D797-R/ K2:1, K2:9, K2:10 – F58-2/3:1	CAN/ POWER, menu 10	11.5.1.3 Ignition voltage (15)
154	Incorrect electric power feed to Control unit frame rear (D797-R).	-	Check fuse F58-2/3, change if needed. Check cable harness between the control unit and the component with diagnostic menu.	D797-R/ K2:11 – F58-2/3:2	CAN/ POWER, menu 10	11.5.1.4 Control breaker voltage

Code	Description	Limitation	Action	Connection and component	Diagnostic menu	Group
155	Incorrect 5 V reference voltage to analogue sensor. Voltage lower than 4.9 V or higher than 5.1 V.	Overload system and weight indicator not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the sensor.	D797-R/ K1:8 – B771/1, B777/1	CAN/ POWER, menu 11	8.2.1.5 Sensor boom angle 8.2.1.6 Sensor boom length (an- alogue sensor)
156	The transistor has been triggered due to short-circuiting in the circuit to Cooling fan hydraulic oil (M668).	Cooling fan hydraulic oil not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the motor.	D797-R/ K1:14 – M668/1	HYD, menu 1	10.6.3 Cooling fan
157	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Light bulb work light boom left (E404-3L).	Work light boom left not working.	Check the light. Check the bulb holder. Check cable harness between the control unit and the component with diagnostic menu.	D797-R/ K1:1 – E404-3L	LIGHTS, menu 3	9.6.10 Work light boom
158	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Light bulb work light boom right (E404-3R).	Work light boom right not working.	Check the light. Check the bulb holder. Check cable harness between the control unit and the component with diagnostic menu.	D797-R/ K1:15 – E404-3R	LIGHTS, menu 3	9.6.10 Work light boom
159	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Light bulb back-up light left (E405L).	Back-up light left not working.	Check the light. Check the bulb holder. Check cable harness between the control unit and the component with diagnostic menu.	D797-R/ K1:28 – E405L	LIGHTS, menu 11	9.6.5 Back- up light
160	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Light bulb back-up light right (E405R).	Back-up light right not working.	Check the light. Check the bulb holder. Check cable harness between the control unit and the component with diagnostic menu.	D797-R/ K1:42 – E405R	LIGHTS, menu 11	9.6.5 Back- up light

Code	Description	Limitation	Action	Connection and component	Diagnostic menu	Group
161	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Sensor steering axle load (B7221L and b7221R).	Overload system indicates overload.	Check cable harness between the control unit and the component with diagnostic menu. Check the sensor.	D797-R/ K1:2 – B7221L/A, B7221R/A	OP, menu 1	8.2.1.4 Sensor steering axle load
162	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Sensor position sensor boom length	Damping in/out/ 1.5m not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the sensor.	D797-R/ K1:2 – B777/A, B769-3/A, B769-4/A	OP, menu 1 BOOM, menu 8	8.2.1.6 Sensor boom length description (position sensor)
163	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Solenoid valve regeneration extension (Y6046).	Regeneration extension not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D797-R/ K1:4 – Y6046/1	BOOM, menu 3	7.3.7 Valve block extension cylinder
164	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Solenoid valve blocking extension (Y6050).	Extension not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D797-R/ K1:5 – Y6050/1	BOOM, menu 2	7.3.7 Valve block extension cylinder
165	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Back-up warning (H965).	Back-up alarm not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the component.	D797-R/ K1:30 – H965/1	LIGHTS, menu 11	9.7.5 Back-up alarm
166	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Solenoid valve top hydraulics (Y6003).	Attachment functions not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D797-R/ K1:31 – Y6003/1	HYD, menu 6	7.4.2 Valve block top lift hydraulics
167	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Light bulb brake light left (H411L).	Brake light left not working.	Check the light. Check the bulb holder. Check cable harness between the control unit and the component with diagnostic menu.	D797-R/ K1:32 – H411L/1	LIGHTS, menu 11	9.6.4 Brake lights

Code	Description	Limitation	Action	Connection and component	Diagnostic menu	Group
168	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Light bulb brake light right (H411R).	Brake light right not working.	Check the light. Check the bulb holder. Check cable harness between the control unit and the component with diagnostic menu.	D797-R/ K1:33 – H411R/1	LIGHTS, menu 11	9.6.4 Brake lights
169	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Light bulb running light left (H416-2).	Running light left rear not working.	Check the light. Check the bulb holder. Check cable harness between the control unit and the component with diagnostic menu.	D797-R/ K1:7 – H416-2/1	LIGHTS, menu 5	9.6.2 Running lights
170	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Light bulb running light right (H417-2).	Running light right rear not working.	Check the light. Check the bulb holder. Check cable harness between the control unit and the component with diagnostic menu.	D797-R/ K1:9 – H417-2/1	LIGHTS, menu 5	9.6.2 Running lights
171	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Light bulb rear light left (H421L).	Rear light left not working.	Check the light. Check the bulb holder. Check the bulb holder.	D797-R/ K1:10 – H412L/1	LIGHTS, menu 5	9.6.3 Rear lights
172	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Light bulb rear light right (H421R).	Rear light left not working.	Check the light. Check the bulb holder. Check cable harness between the control unit and the component with diagnostic menu.	D797-R/ K1:25 – H412R/1	LIGHTS, menu 5	9.6.3 Rear lights
173	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Light bulb direction indicator left rear (H426).	Direction indicator left rear not working.	Check the light. Check the bulb holder. Check cable harness between the control unit and the component with diagnostic menu.	D797-R/ K1:29 – H426/1	LIGHTS, menu 8	9.6.6 Direction indicators

Code	Description	Limitation	Action	Connection and component	Diagnostic menu	Group
174	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Light bulb direction indicator right rear (H426).	Direction indicator right rear not working.	Check the light. Check the bulb holder. Check cable harness between the control unit and the component with diagnostic menu.	D797-R/ K1:39 – H427/1	LIGHTS, menu 8	9.6.6 Direction indicators
175	Different signal from Sensor steering axle load (B7221L and B722R) for more than 10 seconds.	Overload system indicates overload.	Check sensor's adjustment. Check the sensor.	D797-R/ K1:11 – B7221L/C D797-R/ K1:12 – B7221R/C	OP, menu 1	8.2.1.4 Sensor steering axle load
178	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Solenoid valve pump unloading (Y6062).	Unloading of hydraulic oil pumps at boom in not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D797-R/ K1:40 – Y6062/1	BOOM, menu 2	7.3.8 Valve block pump unloading
183	Incorrect signal from Sensor boom angle (771). Signal voltage lower than 0.2 V or higher than 4.8 V.	Overload system not working. All lift functions operate with reduced speed. Error code 150 is activated.	Check cable harness between the control unit and the component with diagnostic menu. Check the sensor.	D797-R/ K1:21 – B771/3	OP, menu 4	8.2.1.5 Sensor boom angle
184	Incorrect signal from Sensor length (777). Signal voltage lower than 0.2 V or higher than 4.8 V.	Overload system not working. All lift functions operate with reduced speed. Error code 150 is activated.	Check cable harness between the control unit and the component with diagnostic menu. Check the sensor.	D797-R/ K1:22 – B777/3	OP, menu 4	8.2.1.6 Sensor boom length
191	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Magnetic clutch on AC compressor (M677).	Air conditioning not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the component.	D797-R/ K1:11 – M645/1	CLIMATE, menu 6	9.4.8 Compressor
192	NOTE! Error code 191 and 192 here go to the same user.			D797-R/ K1:26 – M645/1		

Code	Description	Limitation	Action	Connection and component	Diagnostic menu	Group
193	Only engine alternative Cummins QSM11: The transistor has been triggered due to short-circuiting or open circuit in the circuit to Relay starter motor (K360).	Starter motor not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the component.	D797-R/ K1:36 – K360/86	ENGINE, menu 5	1 Engine
197	High temperature hydraulic oil.	No limitation.	Check that cooling fan is working. Check that cooler isn't clogged. Check the sensor.	D797-R/ K2:13 – B776/1	HYD, menu 1	10.6 Temperature control, cleaning and hydraulic oil
198	Incorrect signal from-Sensor hydraulic oil temperature (B776).	Incorrect temperature display.	Check the sensor. Check cable harness between the control unit and the component with diagnostic menu.	D797-R/ K2:13 – B776/1	HYD, menu 1	10.6.4 Sensor hydraulic oil temperature
199	Incorrect signal from Sensor fuel level (B757). Resistance higher than 180 Ω .	Incorrect display of fuel amount (empty or full).	Check the sensor. Check cable harness between the control unit and the component with diagnostic menu.	D797-R/ K2:15 – B757	CAB, menu 7	1.2.2 Sensor fuel level
201	Redundant voltage feed left to Control unit frame option (D797-O) does not arrive.	-	Check cable harness between the control unit and the component with diagnostic menu. Check the control unit.	D797-O/ K2:7	CAN/ POWER, menu 12	11.5.1.2 Redundant voltage feed of Control units
202	Redundant voltage feed right to Control unit frame option (D797-O) does not arrive.	-	Check cable harness between the control unit and the component with diagnostic menu. Check the control unit.	D797-O/ K2:8	CAN/ POWER, menu 12	11.5.1.2 Redundant voltage feed of Control units
203	Incorrect electric power feed to Control unit frame option (D797-O). Voltage lower than 18 V or higher than 32 V.	-	Check fuse F58-2/4, change if needed. Check cable harness between the control unit and the component with diagnostic menu.	D797-O/ K2:10 – F58-2/4:1	CAN/ POWER, menu 12	11.5.1.3 Ignition voltage (15)

Code	Description	Limitation	Action	Connection and component	Diagnostic menu	Group
204	Incorrect control breaker voltage to Control unit frame option (D797-O).	Functions supplied with control breaker voltage have no feed. All hydraulic functions are blocked.	Check fuse F58-3/4, change if needed. Check cable harness between the control unit and the component with diagnostic menu.	D797-O/ K2:11 – F58-3/4:1	CAN/ POWER, menu 12	11.5.1.4 Control breaker voltage
211	The transistor has been triggered due to short-circuiting in the circuit to Solenoid valve cab front/up (Y6016).	Hydraulic sliding cab or cab lift not working	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D797-O/ K1:2 – Y6016/1	SLIDING CAB, menu 3	9.10.4.3 Control valve op- tion frame 9.10.5.2 Control valve op- tion frame
212	The transistor has been triggered due to short-circuiting in the circuit to Solenoid valve cab rear/down (Y6017).	Hydraulic sliding cab or cab lift not working	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D797-O/ K1:3 – Y6017/1	SLIDING CAB, menu 4	9.10.4.3 Control valve op- tion frame 9.10.5.2 Control valve op- tion frame
213	The transistor has been triggered due to short-circuiting in the circuit to Solenoid valve steering left (Y636L).	Joystick steering or mini-wheel not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D797-O/ K1:4 – Y636L1/1	EL- STEER- ING, menu 4	5.2.10 Control valve joy- stick steer- ing/mini- wheel
214	The transistor has been triggered due to short-circuiting in the circuit to Solenoid valve steering right (Y636R).	Joystick steering or mini-wheel not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D797-O/ K1:5 – Y636R1/1	EL- STEER- ING, menu 5	5.2.10 Control valve joy- stick steer- ing/mini- wheel
215	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Solenoid valve support jacks up (Y6053).	Support jacks not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D797-O/ K1:30 – Y6063/1	SUP- PORT JACKS, menu 3	7.10.1.2 Control valve op- tion frame

Code	Description	Limitation	Action	Conne- tion and compo- nent	Diag- nostic menu	Group
216	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Solenoid valve support jacks down (Y6064).	Support jacks not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D797-O/ K1:31 – Y6064/1	SUP- PORT JACKS, menu 3	7.10.1.2 Control valve op- tion frame
217	Solenoid valve cab tilt up (Y6047).	Cab tilt not work- ing.	Check cable harness between the controlunit and the component with diganostic menu. Check the solenoid valve.	D797-O/ K1:32 – Y6047/1	SLIDING CAB, menu 3	MISSING
218	Solenoid valve cab tilt down (Y6048).	Cab tilt not work- ing.	Check cable harness between the controlunit and the component with diganostic menu. Check the solenoid valve.	D797-O/ K1:33 – Y6048/1	SLIDING CAB, menu 4	MISSING
219	Solenoid valve disen- gagement of hydraulic oil pumps (Y6057).	Disengagement of hydraulic oil pump when low- ering tiltable cab not working.	Check cable harness between the controlunit and the component with diganostic menu. Check the solenoid valve.	D797-O/ K1:7 – Y6057/1	HYD, menu 6	MISSING
220	Incorrect 24 V reference voltage to Position sen- sor support jacks (B7222L, B7222R, B7223L and B7223R).	Indication sup- port jacks up not working. Gear cannot be se- lected to operate the machine.	Check cable harness between the control unit and the component with diagnostic menu. Check the sensor.	D797-O/ K1:9 – B7222L, B7222R, B7223L, B7223R	SUP- PORT JACKS, menu 2	7.10.1.5 Sensor raised sup- port jacks 7.10.1.6 Sensor lowered support jacks
221	Incorrect 24 V reference voltage to Position sen- sor cab lift (B777-2).	Indication Low- ered cab not working. Door must be closed to allow lowering of boom. Speed limitation is acti- vated.	Check cable harness between the control unit and the component with diagnostic menu. Check the sensor.	D797-O/ K1:10 – B777-2/1	SLIDING CAB, menu 4	9.10.5.8 Sensor lowered cab

Code	Description	Limitation	Action	Connection and component	Diagnostic menu	Group
237	Incorrect signal from Solenoid valve cab front/up (Y6016). The return current does not match the control current.	Hydraulic sliding cab or cab lift not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D797-O/ K1:16 – Y6016/2	SLIDING CAB, menu 3	9.10.4.3 Control valve op- tion frame 9.10.5.2 Control valve op- tion frame
238	Incorrect signal from Solenoid valve cab rear/down (Y6017). The return current does not match the control current.	Hydraulic sliding cab or cab lift not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D797-O/ K1:17 – Y6017/2	SLIDING CAB, menu 4	9.10.4.3 Control valve op- tion frame 9.10.5.2 Control valve op- tion frame
239	Incorrect signal from Solenoid valve steering left (Y636L). The return current does not match the control current.	Joystick steering or mini-wheel not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D797-O/ K1:18 – Y636L/2	EL- STEER- ING, menu 4	5.2.10 Control valve joy- stick steer- ing/mini- wheel
240	Incorrect signal from Solenoid valve steering right (Y636R). The return current does not match the control current.	Joystick steering or mini-wheel not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D797-O/ K1:19 – Y636R/2	EL- STEER- ING, menu 5	5.2.10 Control valve joy- stick steer- ing/mini- wheel
251	Redundant voltage feed left to Control unit attachment (D791-1) does not arrive.	-	Check cable harness between the control unit and the component with diagnostic menu.	D791-1/ K2:7	CAN/ POWER, menu 16	11.5.1.2 Redundant voltage feed of Control units
252	Redundant voltage feed left to Control unit attachment (D791-1) does not arrive.	-	Check cable harness between the control unit and the component with diagnostic menu.	D791-1/ K2:8	CAN/ POWER, menu 16	11.5.1.2 Redundant voltage feed of Control units

Code	Description	Limitation	Action	Connection and component	Diagnostic menu	Group
253	Incorrect electric power feed to Control unit attachment (D791-1). Voltage lower than 18 V or higher than 32 V.	Functions supplied with control breaker voltage have no feed. No attachment functions working.	Check fuse F58-3/1, change if needed. Check fuse F52-1, change if needed. Check cable harness between the control unit and the component with diagnostic menu.	D791-1/ K2:1/9/10 – F52-1 – F58-3/1:1	CAN/ POWER, menu 16	11.5.1.4 Control breaker voltage
254	Incorrect control breaker voltage to Control unit attachment (D791-1).	Functions supplied with control breaker voltage have no feed. No attachment functions working.	Check fuse F58-3/1, change if needed. Check fuse F52-1, change if needed. Check cable harness between the control unit and the component with diagnostic menu.	D791-1/ K2:11 – F58-3/1	CAN/ POWER, menu 16	11.5.1.4 Control breaker voltage
257	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Light bulb work light attachment right (E406R).	Work light attachment right not working.	Check the light. Check the bulb holder. Check cable harness between the control unit and the component with diagnostic menu.	D791-1/ K1:1 – E406R	LIGHTS, menu 2	9.6.11 Work light attachment
258	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Light bulb work light attachment left (E406L).	Work light attachment left not working.	Check bulb. Check the bulb holder. Check cable harness between the control unit and the component with diagnostic menu.	D791-1/ K1:15 – E406L	LIGHTS, menu 2	9.6.11 Work light attachment
259	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Buzzer automatic positioning 20'-40' (H4009).	Automatic positioning 20'-40' not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the component.	D791-1/ K1:28 – H9003/1	ATTACH, menu 15	7.5 Spreading
260	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Light bulb extra work light attachment (E404-4L and E404-4R).	Extra work light attachment not working.	Check the light. Check the bulb holder. Check cable harness between the control unit and the component with diagnostic menu.	D791-1/ K1:42 – E404-4L, E404-4R	LIGHTS, menu 2	9.6.11 Work light attachment

Code	Description	Limitation	Action	Connection and component	Diagnostic menu	Group
261	The transistor has been triggered due to short-circuiting in the circuit to Solenoid valve rotation clockwise (Y6008).	Rotation of attachment not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D791-1/ K1:2 – Y6008/1	ATTACH, menu 11	7.6.3 Control valve attachment
262	The transistor has been triggered due to short-circuiting in the circuit to Solenoid valve rotation counter-clockwise (Y6009)	Rotation of attachment not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D791-1/ K1:3 – Y6009/1	ATTACH, menu 12	7.6.3 Control valve attachment
263	The transistor has been triggered due to short-circuiting in the circuit to Solenoid valve positioning out (Y6018).	Spreading not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D791-1/ K1:4 – Y6018/1	ATTACH, menu 13	7.5.3 Control valve attachment
264	The transistor has been triggered due to short-circuiting in the circuit to Solenoid valve positioning in (Y6019).	Spreading not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D791-1/ K1:5 – Y6019/1	ATTACH, menu 14	7.5.3 Control valve attachment
265	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Solenoid valve sideshift right (Y6021).	Sideshift of attachment not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D791-1/ K1:30 – Y6021/1	ATTACH, menu 8	7.4.3 Control valve attachment
266	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Solenoid valve sideshift left (Y6020).	Sideshift of attachment not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D791-1/ K1:31 – Y6020/1	ATTACH, menu 8	7.4.3 Control valve attachment
267	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Solenoid valve lock twistlock (Y6040).	Twistlock not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D791-1/ K1:32 – Y6040/1	ATTACH, menu 9	7.9.1.3 Control valve attachment

Code	Description	Limitation	Action	Con- nection and compo- nent	Diag- nostic menu	Group
268	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Solenoid valve open twistlock (Y6039).	Twistlock not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D791-1/ K1:33 – Y6039/1	ATTACH, menu 9	7.9.1.3 Control valve at- tachment
269	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Solenoid valve tilt lock 1 (Y6012-1).	Tilt locked, tilt damping and controllable tilt not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D791-1/ K1:7 – Y6012-1/1	ATTACH, menu 15	7.7.4 Lock valve tilt
270	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Solenoid valve tilt lock 2 (Y6012-2).	Tilt locked, tilt damping and controllable tilt not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D791-1/ K1:9 – Y6012-2/1	ATTACH, menu 15	7.7.4 Lock valve tilt
271	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Voltage feed Position sensor attachment.	Twistlocks, rotation stop, and positioning not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the sensor.	D791-1/ K1:10 – B769/A, B777-2/A, B7225/A, B7202R/A, B7204R/A, B7205R/A, B7203R/A, B7202L/A, B7204L/A, B7205L/A, B7203L/A, B7224/A	ATTACH, menu 5, 6, 7, 21	7.5.10 Po- sition sen- sor positioning 7.6.10 Sen- sor rotation stop 7.9.1.8 Sensor alignment 7.9.1.9 Sensor twistlocks 8.2.1.6 Sensor boom length de- scription (position sensor)

Code	Description	Limitation	Action	Connection and component	Diagnostic menu	Group
272	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Indicator light twistlock open (H562).	Indicator light open twistlock not working.	Check the light. Check the bulb holder. Check cable harness between the control unit and the component with diagnostic menu.	D791-1/ K1:25 – H562/1	ATTACH, menu 10	7.9.1 Twistlocks
273	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Indicator light alignment (H564).	Indicator light alignment twistlock not working.	Check the light. Check the bulb holder. Check cable harness between the control unit and the component with diagnostic menu.	D791-1/ K1:29 – H564/1	ATTACH, menu 10	7.9.1 Twistlocks
274	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Indicator light twistlock locked (H563).	Indicator light locked twistlock not working.	Check the light. Check the bulb holder. Check cable harness between the control unit and the component with diagnostic menu.	D791-1/ K1:39 – H563/1	ATTACH, menu 10	7.9.1 Twistlocks
287	Incorrect signal from Solenoid valve rotation clockwise (Y6008). The return current does not match the control current.	Rotation of attachment not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D791-1/ K1:16 – Y6008/2	ATTACH, menu 11	7.6.3 Control valve attachment
288	Incorrect signal from Solenoid valve rotation counter-clockwise (Y6009). The return current does not match the control current.	Rotation of attachment not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D791-1/ K1:17 – Y6009/2	ATTACH, menu 12	7.6.3 Control valve attachment
289	Incorrect signal from Solenoid valve positioning out (Y6018). The return current does not match the control current.	Spreading not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D791-1/ K1:18 – Y6018/2	ATTACH, menu 13	7.5.3 Control valve attachment

Code	Description	Limitation	Action	Con- nection and compo- nent	Diag- nostic menu	Group
290	Incorrect signal from Solenoid valve positioning in (Y6019). The return current does not match the control current.	Spreading not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D791-1/ K1:19 – Y6019/2	ATTACH, menu 14	7.5.3 Con- trol valve attachment
298	Sensor twistlock indicates that left twistlock is between open and locked position.	Lift and extension not working.	Check that Sensors twistlock are clean and correctly adjusted. Check cable harness between the control unit and the component with diagnostic menu.	-	ATTACH, menu 7	7.9.1.9 Sensor twistlocks
299	Sensor twistlock indicates that right twistlock is between open and locked position.	Lift and extension not working.	Check that Sensors twistlock are clean and correctly adjusted. Check cable harness between the control unit and the component with diagnostic menu.	-	ATTACH, menu 7	7.9.1.9 Sensor twistlocks
300	Sensor alignment indicates unreasonable condition.	Twistlock not working.	Check that Sensors alignment are clean and correctly adjusted. Check that contact pin runs freely. Check cable harness between the control unit and the component with diagnostic menu.	-	ATTACH, menu 6	7.9.1.8 Sensor alignment
301	Redundant voltage feed left to Control unit attachment option (D791-2) does not arrive.	-	Check cable harness between the control unit and the component with diagnostic menu. Check the control unit.	D791-2/ K2:7	CAN/ POWER, menu 17	11.5.1.2 Redundant voltage feed of Control units
302	Redundant voltage feed left to Control unit attachment option (D791-2) does not arrive.	-	Check cable harness between the control unit and the component with diagnostic menu. Check the control unit.	D791-2/ K2:8	CAN/ POWER, menu 17	11.5.1.2 Redundant voltage feed of Control units

Code	Description	Limitation	Action	Connection and component	Diagnostic menu	Group
303	Incorrect electric power feed to Control unit attachment option (D791-2). Voltage lower than 18 V or higher than 32 V.	Levelling, tilt and special function not working.	Check fuse F58-3/1 and F52-1, change if needed. Check cable harness between the control unit and the component with diagnostic menu.	D791-2/ K2:1, K2:9, K2:10 – F52-1 – F58-3/1	CAN/ POWER, menu 17	11.5.1.4 Control breaker voltage
304	Incorrect control breaker voltage to Control unit attachment option (D791-2).	Functions supplied with control breaker voltage have no feed. Levelling, tilt and special function not working.	Check fuse F58-3/1 and F52-1, change if needed. Check cable harness between the control unit and the component with diagnostic menu.	D791-2/ K2:11 – F52-1 – F58-3/1	CAN/ POWER, menu 17	11.5.1.4 Control breaker voltage
311	The transistor has been triggered due to short-circuiting in the circuit to Solenoid valve levelling right (Y6035).	Levelling not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D791-2/ K1:2 – Y6035/1	ATTACH, menu 19	7.8.3 Control valve attachment
312	The transistor has been triggered due to short-circuiting in the circuit to Solenoid valve levelling left (Y6036).	Levelling not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D791-2/ K1:3 – Y6036/1	ATTACH, menu 20	7.8.3 Control valve attachment
313	The transistor has been triggered due to short-circuiting in the circuit to Solenoid valve tilt out (Y6010).	Controllable tilt not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D791-2/ K1:4 – Y6010/1	ATTACH, menu 16	7.7.5 Control valve attachment
314	The transistor has been triggered due to short-circuiting in the circuit to Solenoid valve tilt in (Y6011).	Controllable tilt not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D791-2/ K1:5 – Y6011/1	ATTACH, menu 17	7.7.5 Control valve attachment

Code	Description	Limitation	Action	Connection and component	Diagnostic menu	Group
315	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Solenoid valve levelling lock (Y6034-1).	Levelling is locked, controllable levelling and float mode not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D791-2/ K1:30 – Y6034-1/1	ATTACH, menu 18	7.8.6 Valve block levelling cylinders
316	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Solenoid valve levelling lock (Y6034-2).	Levelling is locked, controllable levelling and float mode not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D791-2/ K1:31 – Y6034-2/1	ATTACH, menu 18	7.8.6 Valve block levelling cylinders
317	Incorrect output signal special function.		WARNING	D791-2/ K1:32		
318	Incorrect output signal special function.		WARNING	D791-2/ K1:33		
319	Incorrect output signal special function.		WARNING	D791-2/ K1:7		
320	Incorrect output signal special function.		WARNING	D791-2/ K1:9		
321	Incorrect output signal special function.		WARNING	D791-2/ K1:10		
322	Incorrect output signal special function.		WARNING	D791-2/ K1:25		
337	Incorrect signal from Solenoid valve levelling right (Y6035). The return current does not match the control current.	Levelling not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D791-2/ K1:16 – Y6035/2	ATTACH, menu 17	7.8.3 Control valve attachment
338	Incorrect signal from Solenoid valve levelling left (Y6036). The return current does not match the control current.	Levelling not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D791-2/ K1:17 – Y6036/2	ATTACH, menu 18	7.8.3 Control valve attachment

Code	Description	Limitation	Action	Connection and component	Diagnostic menu	Group
339	Incorrect signal from Solenoid valve tilt out (Y6010). The return current does not match the control current.	Controllable tilt not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D791-2/ K1:18 – Y6010/2	ATTACH, menu 14	7.7.5 Control valve attachment
340	Incorrect signal from Solenoid valve tilt in (Y6011). The return current does not match the control current.	Controllable tilt not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D791-2/ K1:19 – Y6011/2	ATTACH, menu 15	7.7.5 Control valve attachment
351	Redundant voltage feed left to Control unit attachment left legs (D791-3) does not arrive.	-	Check cable harness between the control unit and the component with diagnostic menu. Check the control unit.	D791-3/ K2:7	CAN/ POWER, menu 18	11.5.1.2 Redundant voltage feed of Control units
352	Redundant voltage feed right to Control unit attachment left legs (D791-3) does not arrive.	-	Check cable harness between the control unit and the component with diagnostic menu. Check the control unit.	D791-3/ K2:8	CAN/ POWER, menu 18	11.5.1.2 Redundant voltage feed of Control units
353	Incorrect electric power feed to Control unit attachment left legs (D791-3). Voltage lower than 18 V or higher than 32 V.	Left lift leg not working.	Check fuse F58-3/1 and F52-2, change if needed. Check cable harness between the control unit and the component with diagnostic menu.	D791-3/ K2:1 – F52-2 – F58-3/1	CAN/ POWER, menu 18	11.5.1.4 Control breaker voltage
354	Incorrect control breaker voltage to Control unit attachment left legs (D791-3).	Functions supplied with control breaker voltage have no feed. Left lift leg not working.	Check fuse F58-3/1 and F52-2, change if needed. Check cable harness between the control unit and the component with diagnostic menu.	D791-3/ K2:11 – F52-2 – F58-3/1	CAN/ POWER, menu 18	11.5.1.4 Control breaker voltage

Code	Description	Limitation	Action	Connection and component	Diagnostic menu	Group
357	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Work light left lift leg (E404-6L).	Work light left lift leg not working.	Check the light. Check the bulb holder. Check cable harness between the control unit and the component with diagnostic menu.	D791-3/ K1:1 – E404-6L/1	-	9.6.11 Work light attachment
358	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Solenoid valve levelling lock (Y6034-1) and Solenoid valve levelling lock (Y6034-2).	Levelling is locked, control-able levelling and float mode not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D791-3/ K1:15 – Y6034-1/1, Y6034-2/1	ATTACH, menu 18	7.8.6 Valve block levelling cylinders
360	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Solenoid valve operating position (Y6053L).	Left lift leg not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D791-3/ K1:42 – Y6053L/1	COMBI, menu 16	7.9.2.5 Valve operating position
361	The transistor has been triggered due to short-circuiting in the circuit to Solenoid valve levelling right (Y6035).	Levelling not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D791-3/ K1:2 – Y6035/1	ATTACH, menu 19	7.8.3 Control valve attachment
362	The transistor has been triggered due to short-circuiting in the circuit to Solenoid valve levelling left (Y6036).	Levelling not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D791-3/ K1:3 – Y6036/1	ATTACH, menu 20	7.8.3 Control valve attachment
363	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Solenoid valve front knee in (Y6057L).	Left lift leg not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D791-3/ K1:4 – Y6057L/1	COMBI, menu 11	7.9.2.3 Control valve lift legs

Code	Description	Limitation	Action	Connection and component	Diagnostic menu	Group
364	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Solenoid valve front knee out (Y6056L).	Left lift leg not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D791-3/ K1:5 – Y6056L/1	COMBI, menu 10	7.9.2.3 Control valve lift legs
365	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Solenoid valve rear knee in (Y6059L).	Left lift leg not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D791-3/ K1:30 – Y6059L/1	COMBI, menu 13	7.9.2.3 Control valve lift legs
366	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Solenoid valve rear knee out (Y6058L).	Left lift leg not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D791-3/ K1:31 – Y6058L/1	COMBI, menu 12	7.9.2.3 Control valve lift legs
367	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Solenoid valve lowering front leg (Y6013L).	Left lift leg not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D791-3/ K1:32 – Y6013L/1	COMBI, menu 10	7.9.2.3 Control valve lift legs
368	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Solenoid valve front leg up (Y6060L).	Left lift leg not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D791-3/ K1:33 – Y6060L/1	COMBI, menu 11	7.9.2.3 Control valve lift legs
369	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Solenoid valve lowering rear leg (Y6014L).	Left lift leg not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D791-3/ K1:7 – Y6014L/1	COMBI, menu 12	7.9.2.3 Control valve lift legs
370	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Solenoid valve rear leg up (Y6061L).	Left lift leg not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D791-3/ K1:9 – Y6061L/1	COMBI, menu 13	7.9.2.3 Control valve lift legs

Code	Description	Limitation	Action	Connection and component	Diagnostic menu	Group
371	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Indicator light (H566R).	Indicator light alignment lift leg right front not working.	Check the light. Check the bulb holder. Check cable harness between the control unit and the component with diagnostic menu.	D791-3/ K1:10 – H566R/1	COMBI, menu 7	7.9.2 Lift legs
372	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Indicator light (H567R).	Indicator light alignment lift leg right rear not working.	Check the light. Check the bulb holder. Check cable harness between the control unit and the component with diagnostic menu.	D791-3/ K1:25 – H567R/1	COMBI, menu 7	7.9.2 Lift legs
373	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Indicator light (H556L).	Indicator light alignment lift leg left front not working.	Check the light. Check the bulb holder. Check cable harness between the control unit and the component with diagnostic menu.	D791-3/ K1:29 – H566L/1	COMBI, menu 7	7.9.2 Lift legs
374	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Indicator light (H556L).	Indicator light alignment lift leg left rear not working.	Check the light. Check the bulb holder. Check cable harness between the control unit and the component with diagnostic menu.	D791-3/ K1:39 – H567L/1	COMBI, menu 7	7.9.2 Lift legs
375	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Solenoid valve clamp shut (Y6054L).	Left lift leg not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D791-3/ K1:11 – Y6054L/1	COMBI, menu 15	7.9.2.3 Control valve lift legs
376	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Solenoid valve clamp open (Y6055L).	Left lift leg not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D791-3/ K1:12 – Y6055L/1	COMBI, menu 15	7.9.2.3 Control valve lift legs

Code	Description	Limitation	Action	Connection and component	Diagnostic menu	Group
377	The transistor has been triggered due to short-circuiting or open circuit in the circuit to voltage feed position sensor left leg pair.	Left lift leg not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the sensor.	D791-3/ K1:26 – B7212L/A, B7213L/A, B7214L/A, B7215L/A, B7216L/A, B7217L/A, B7218L/A, B7219L/A, B7220L/A	COMBI, menu 2, 3, 4, 5, 6	7.9.2.9 Sensor operating position 7.9.2.10 Sensor knee 7.9.2.13 Sensor lift leg 7.9.2.15 Sensor alignment 7.9.2.16 Sensor clamping position
387	Incorrect signal from Solenoid valve levelling right (Y6035). The return current does not match the control current.	Levelling not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D791-3/ K1:16 – Y6035/2	ATTACH, menu 19	7.8.3 Control valve attachment
388	Incorrect signal from Solenoid valve levelling left (Y6036). The return current does not match the control current.	Levelling not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D791-3/ K1:17 – Y6036/2	ATTACH, menu 20	7.8.3 Control valve attachment
401	Redundant voltage feed left to Control unit attachment right leg pair (D791-4) does not arrive.	-	Check cable harness between the control unit and the component with diagnostic menu. Check the control unit.	D791-4/ K2:7	CAN/ POWER, menu 19	11.5.1.2 Redundant voltage feed of Control units
402	Redundant voltage feed right to Control unit attachment right leg pair (D791-4) does not arrive.	-	Check cable harness between the control unit and the component with diagnostic menu. Check the control unit.	D791-4/ K2:8	CAN/ POWER, menu 19	11.5.1.2 Redundant voltage feed of Control units

Code	Description	Limitation	Action	Connection and component	Diagnostic menu	Group
403	Incorrect electric power feed to Control unit attachment right leg pair (D791-4). Voltage lower than 18 V or higher than 32 V.	Right lift leg and controllable tilt not working.	Check fuse F58-3/1 and F52-2, change if needed. Check cable harness between the control unit and the component with diagnostic menu.	D791-4/ K2:1 – F52-2 – F58-3/1	CAN/ POWER, menu 19	11.5.1.4 Control breaker voltage
404	Incorrect control breaker voltage to Control unit attachment right leg pair (D791-4).	Control breaker cannot be disengaged. Right lift leg and controllable tilt not working.	Check fuse F58-3/1 and F52-2, change if needed. Check cable harness between the control unit and the component with diagnostic menu.	D791-4/ K2:11 – F52-2 – F58-3/1	CAN/ POWER, menu 19	11.5.1.4 Control breaker voltage
407	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Work light left lift leg (E404-6R).	Work light left lift leg not working.	Check the light. Check the bulb holder. Check cable harness between the control unit and the component with diagnostic menu.	D791-4/ K1:1 – E404-6R	-	9.1.11 Work light attachment
410	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Solenoid valve operating position (Y6053R).	Right lift leg not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D791-4/ K1:42 – Y6053R/1	COMBI, menu 16	7.9.2.5 Valve oper- ating posi- tion
411	The transistor has been triggered due to short-circuiting in the circuit to Solenoid valve tilt out (Y6010).	Controllable tilt not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D791-4/ K1:15 – Y6010/1	ATTACH, menu 16	7.7.5 Con- trol valve attachment
412	The transistor has been triggered due to short-circuiting in the circuit to Solenoid valve tilt in (Y6010).	Controllable tilt not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D791-4/ K1:15 – Y6011/1	ATTACH, menu 17	7.7.5 Con- trol valve attachment

Code	Description	Limitation	Action	Connection and component	Diagnostic menu	Group
413	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Solenoid valve front knee in (Y6057R).	Right lift leg not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D791-4/ K1:4 – Y6057R/1	COMBI, menu 11	7.9.2.3 Control valve lift legs
414	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Solenoid valve front knee out (Y6056R).	Right lift leg not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D791-4/ K1:5 – Y6056R/1	COMBI, menu 10	7.9.2.3 Control valve lift legs
415	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Solenoid valve rear knee in (Y6059R).	Right lift leg not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D791-4/ K1:30 – Y6059R/1	COMBI, menu 13	7.9.2.3 Control valve lift legs
416	The transistor has been triggered due to short-circuiting in the circuit to Solenoid valve rear knee out (Y6058L).	Right lift leg not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D791-4/ K1:31 – Y6058R/1	COMBI, menu 12	7.9.2.3 Control valve lift legs
417	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Solenoid valve lowering front leg (Y6013R).	Right lift leg not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D791-4/ K1:32 – Y6013R/1	COMBI, menu 10	7.9.2.3 Control valve lift legs
418	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Solenoid valve front leg up (Y6060R).	Right lift leg not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D791-4/ K1:33 – Y6060R/1	COMBI, menu 11	7.9.2.3 Control valve lift legs
419	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Solenoid valve lowering rear leg (Y6014R).	Right lift leg not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D791-4/ K1:7 – Y6014R/1	COMBI, menu 12	7.9.2.3 Control valve lift legs

Code	Description	Limitation	Action	Connection and component	Diagnostic menu	Group
420	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Solenoid valve rear leg up (Y6061R).	Right lift leg not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D791-4/ K1:9 – Y6061R/1	COMBI, menu 13	7.9.2.3 Control valve lift legs
421	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Indicator light (H580).	Indicator light front legs raised not working.	Check the light. Check the bulb holder. Check cable harness between the control unit and the component with diagnostic menu.	D791-4/ K1:10 – H580/1	COMBI, menu 9	7.9.2 Lift legs
422	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Indicator light (H581).	Indicator light front legs lowered not working.	Check the light. Check the bulb holder. Check cable harness between the control unit and the component with diagnostic menu.	D791-4/ K1:25 – H581/1	COMBI, menu 9	7.9.2 Lift legs
423	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Indicator light (H578).	Indicator light clamping position lift legs front not working.	Check the light. Check the bulb holder. Check cable harness between the control unit and the component with diagnostic menu.	D791-4/ K1:29 – H578/1	COMBI, menu 8	7.9.2 Lift legs
424	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Indicator light (H579).	Indicator light clamping position lift legs rear not working.	Check the light. Check the bulb holder. Check cable harness between the control unit and the component with diagnostic menu.	D791-4/ K1:39 – H579/1	COMBI, menu 8	7.9.2 Lift legs
425	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Solenoid valve clamp shut (Y6054R).	Right lift leg not working.		D791-4/ K1:2 – Y6054R	COMBI, menu 15	7.9.2.3 Control valve lift legs
426	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Solenoid valve clamp open (Y6055R).	Right lift leg not working.		D791-4/ K1:3 – Y6055R	COMBI, menu 15	7.9.2.3 Control valve lift legs

Code	Description	Limitation	Action	Connection and component	Diagnostic menu	Group
427	The transistor has been triggered due to short-circuiting or open circuit in the circuit to Voltage feed position sensor right leg pair.	Right lift leg not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the sensor.	D791-4/ K1:26 – B7212R/A, B7213R/A, B7214R/A, B7215R/A, B7216R/A, B7217R/A, B7218R/A, B7219R/A, B7220R/A	COMBI, menu 2, 3, 4, 5, 6	7.9.2.9 Sensor operating position 7.9.2.10 Sensor knee 7.9.2.13 Sensor lift leg 7.9.2.15 Sensor alignment 7.9.2.16 Sensor clamping position
437	Incorrect signal from Solenoid valve tilt out (Y6010). The return current does not match the control current.	Controllable tilt not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D791-4/ K1:16 – Y6010/2	ATTACH, menu 16	7.7.5 Control valve attachment
438	Incorrect signal from Solenoid valve tilt in (Y6010). The return current does not match the control current.	Controllable tilt not working.	Check cable harness between the control unit and the component with diagnostic menu. Check the solenoid valve.	D791-4/ K1:17 – Y6011/2	ATTACH, menu 17	7.7.5 Control valve attachment
451	Redundant voltage feed left to Control unit KID (D795) does not arrive.	-	Check cable harness between the control unit and the component with diagnostic menu.	795/K1:7	CAN/ POWER, menu 14	11.5.1.2 Redundant voltage feed of Control units
452	Redundant voltage feed right to Control unit KID (D795) does not arrive.	-	Check cable harness between the control unit and the component with diagnostic menu.	795/K1:8	CAN/ POWER, menu 14	11.5.1.2 Redundant voltage feed of Control units

Code	Description	Limitation	Action	Connection and component	Diagnostic menu	Group
460	No messages received on CAN-buffer 1.	Incorrect values in operating menus.	Use diagnostic menu to check CAN-bus	D795/ K1:10, K1:11, K1:12, K1:13	CAN/ POWER, menu 1, 2, 21	11.6.2 Redundant CAN-bus
461	No messages received on CAN-buffer 2.	Error codes from other Control units cannot be shown.	Use diagnostic menu to check CAN-bus	D795/K1:5, K1:6	CAN/ POWER, menu 1, 2, 21	11.6.2 Redundant CAN-bus
500	Time for service.	-	Check that service has been performed. If service is done according to Kalmar Industries service intervals, reset the service indicator, see tab 8 <i>Control system</i> , group 8.2.6 <i>Service indicator</i> .	-	-	8.2.6 Service indicator

Table of Contents E Schematics


10	Common hydraulics.....	3
	Hydraulic diagrams, compilation.....	3
	Hydraulic diagram basic machine.....	4
	Hydraulic diagram top lift.....	6
	Hydraulic diagram top lift, tilt lock and controllable tilt.....	8
	Hydraulic diagram top lift, tilt lock, controllable tilt and hydraulic levelling.....	10
	Hydraulic diagram joystick steering.....	12
	Hydraulic diagram sliding cab.....	14
	Hydraulic diagram cab lift and support jacks.....	16
	Hydraulic diagram sliding cab and support jacks.....	18
	Hydraulic diagram combi attachment (part 1 of 3).....	20
	Hydraulic diagram combi attachment (part 2 of 3).....	22
	Hydraulic diagram combi attachment (part 3 of 3).....	24
11	Common electric.....	26
	Wiring diagrams, description.....	26
	Component designations.....	27
	Circuit diagrams, compilation.....	28

10 Common hydraulics

Hydraulic diagrams, compilation


Designation	Drawing number
<i>Hydraulic diagram basic machine page 4</i>	A40740.0100
<i>Hydraulic diagram top lift page 6</i>	A40853.0100
<i>Hydraulic diagram top lift, tilt lock and controllable tilt page 8</i>	A40853.0200
<i>Hydraulic diagram top lift, tilt lock, controllable tilt and hydraulic levelling page 10</i>	A43123.0100
<i>Hydraulic diagram joystick steering page 12</i>	A48056.0100
<i>Hydraulic diagram sliding cab page 14</i>	A40855.0100
<i>Hydraulic diagram cab lift and support jacks page 16</i>	A43276.0100
<i>Hydraulic diagram sliding cab and support jacks page 18</i>	A40854.0100
<i>Hydraulic diagram combi attachment (part 1 of 3) page 20</i>	A41791.0100
<i>Hydraulic diagram combi attachment (part 2 of 3) page 22</i>	A41791.0100
<i>Hydraulic diagram combi attachment (part 3 of 3) page 24</i>	A41791.0100

Hydraulic diagram basic machine

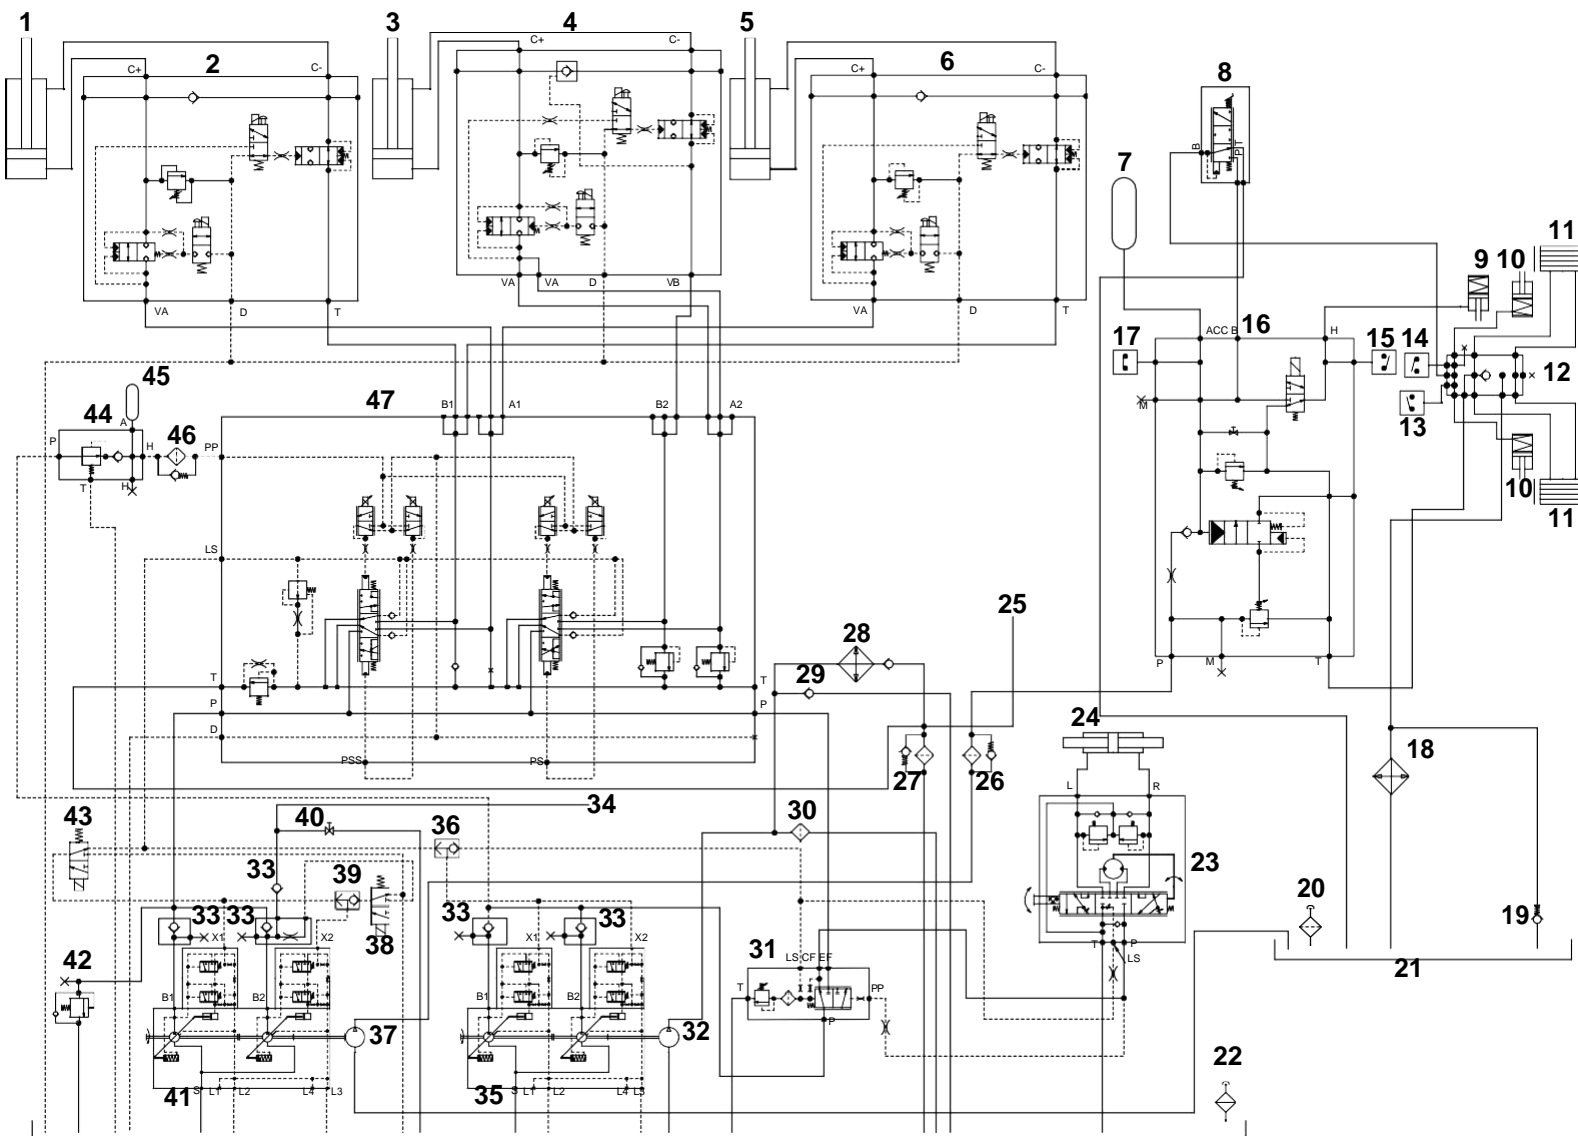


-
1. Lift cylinder
 2. Valve block lift cylinder
 3. Extension cylinder
 4. Valve block extension cylinder
 5. Lift cylinder
 6. Valve block lift cylinder
 7. Accumulator brake pressure
 8. Brake valve
 9. Parking brake caliper
 10. Brake cylinder
 11. Wheel brake
 12. Drive axle block
 13. Make-contact declutch
 14. Make-contact brake light
 15. Make-contact parking brake
 16. Accumulator charging valve
 17. Breaking contact brake pressure
 18. Cooler brake oil
 19. Thermal by-pass valve
 20. Breather filter brake oil tank
 21. Brake oil tank
 22. Breather filter hydraulic oil tank
 23. Steering valve
 24. Steering cylinder
 25. Oil return from attachment
 26. Brake oil filter
 27. Hydraulic oil filter
 28. Cooler hydraulic oil
 29. By-pass valve hydraulic oil cooler
 30. Fine filter hydraulic oil
 31. Priority valve
 32. Pump cooling and filtering of hydraulic oil
 33. Non-return valve
 34. Pressure feed to attachment
 35. Hydraulic oil pump 3 and 4
 36. Shuttle valve
 37. Pump brake system
 38. Valve block top lift hydraulics
 39. Shuttle valve
 40. Unloading valve attachment
 41. Hydraulic oil pump 1 and 2
 42. Pressure limiting valve
 43. Valve block pump unloading
 44. Pressure reducer
 45. Accumulator servo pressure
 46. Servo filter
 47. Control valve lift and lower as well as extension

003183 (A40740.0100 ver. 8)

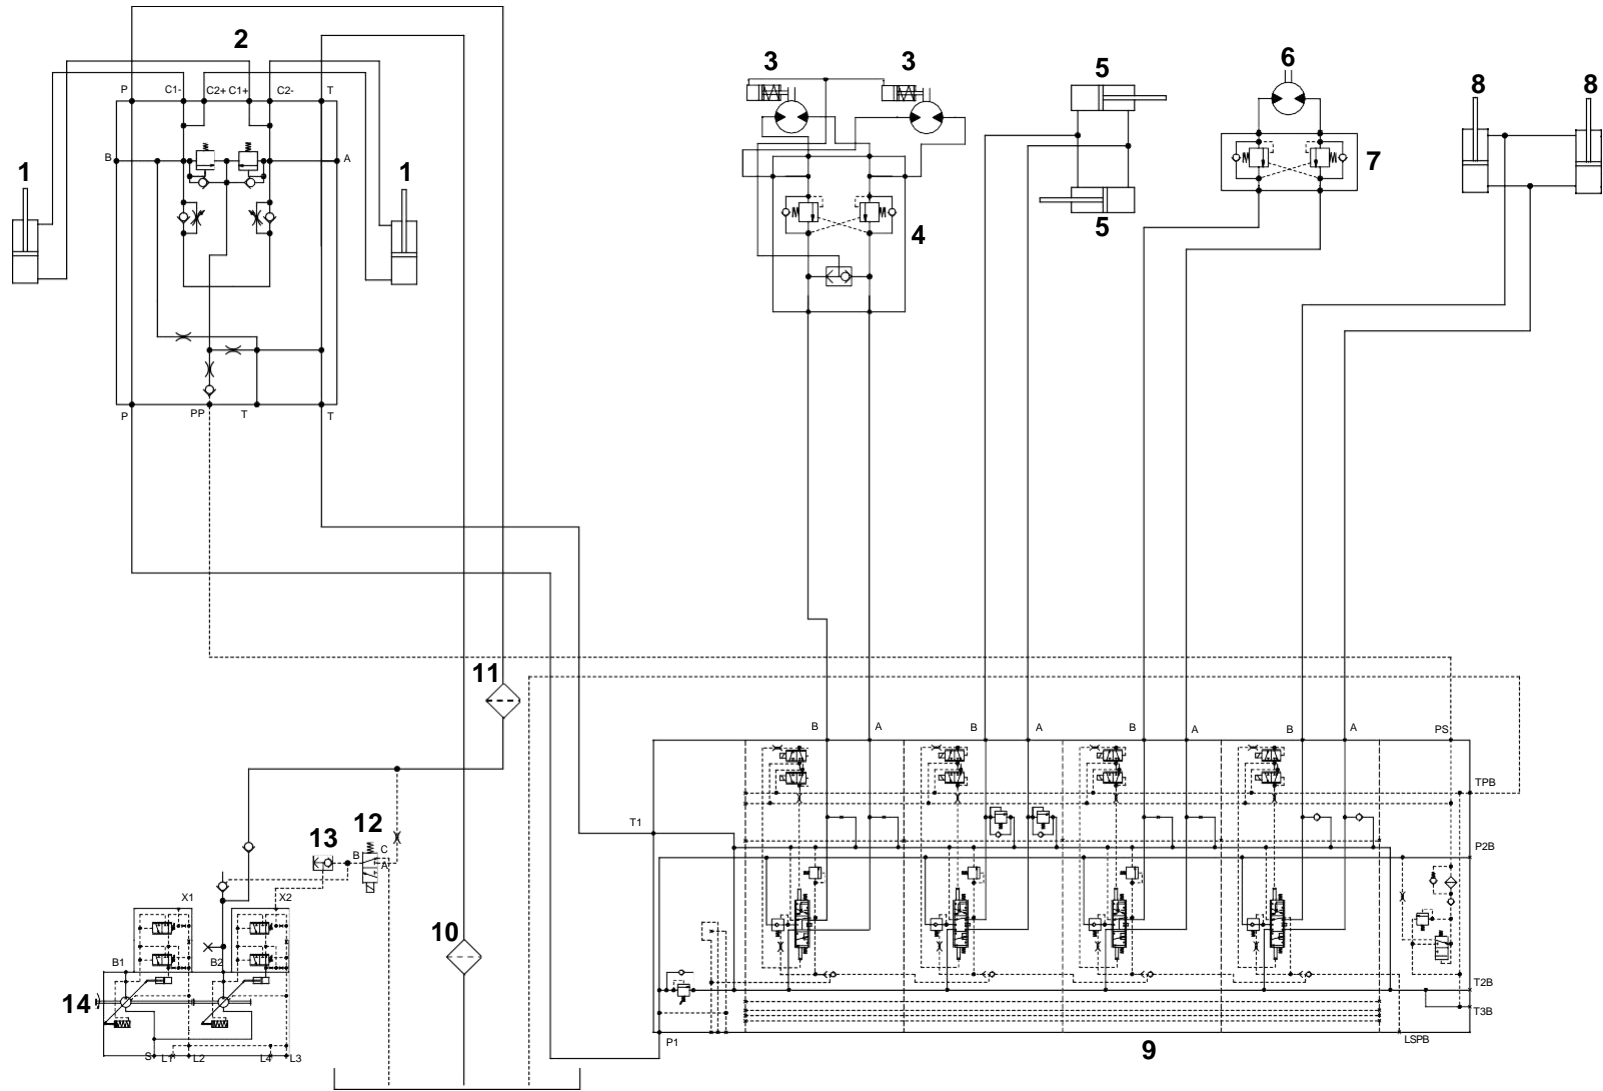


Hydraulic diagram top lift


1. Tilt cylinder
2. Damping block
3. Rotation motor unit
4. Valve block rotation motor
5. Sideshift cylinders
6. Spreader motor
7. Valve block spreader motor
8. Twistlock cylinders
9. Control valve attachment
10. Filter hydraulic oil
11. Filter hydraulic oil (high pressure filter) 
12. Solenoid valve engagement hydraulic pressure
13. Shuttle valve
14. Hydraulic oil pump 1 and 2

003184 (A40853.0100 ver. 4)


Hydraulic diagram top lift, tilt lock and controllable tilt

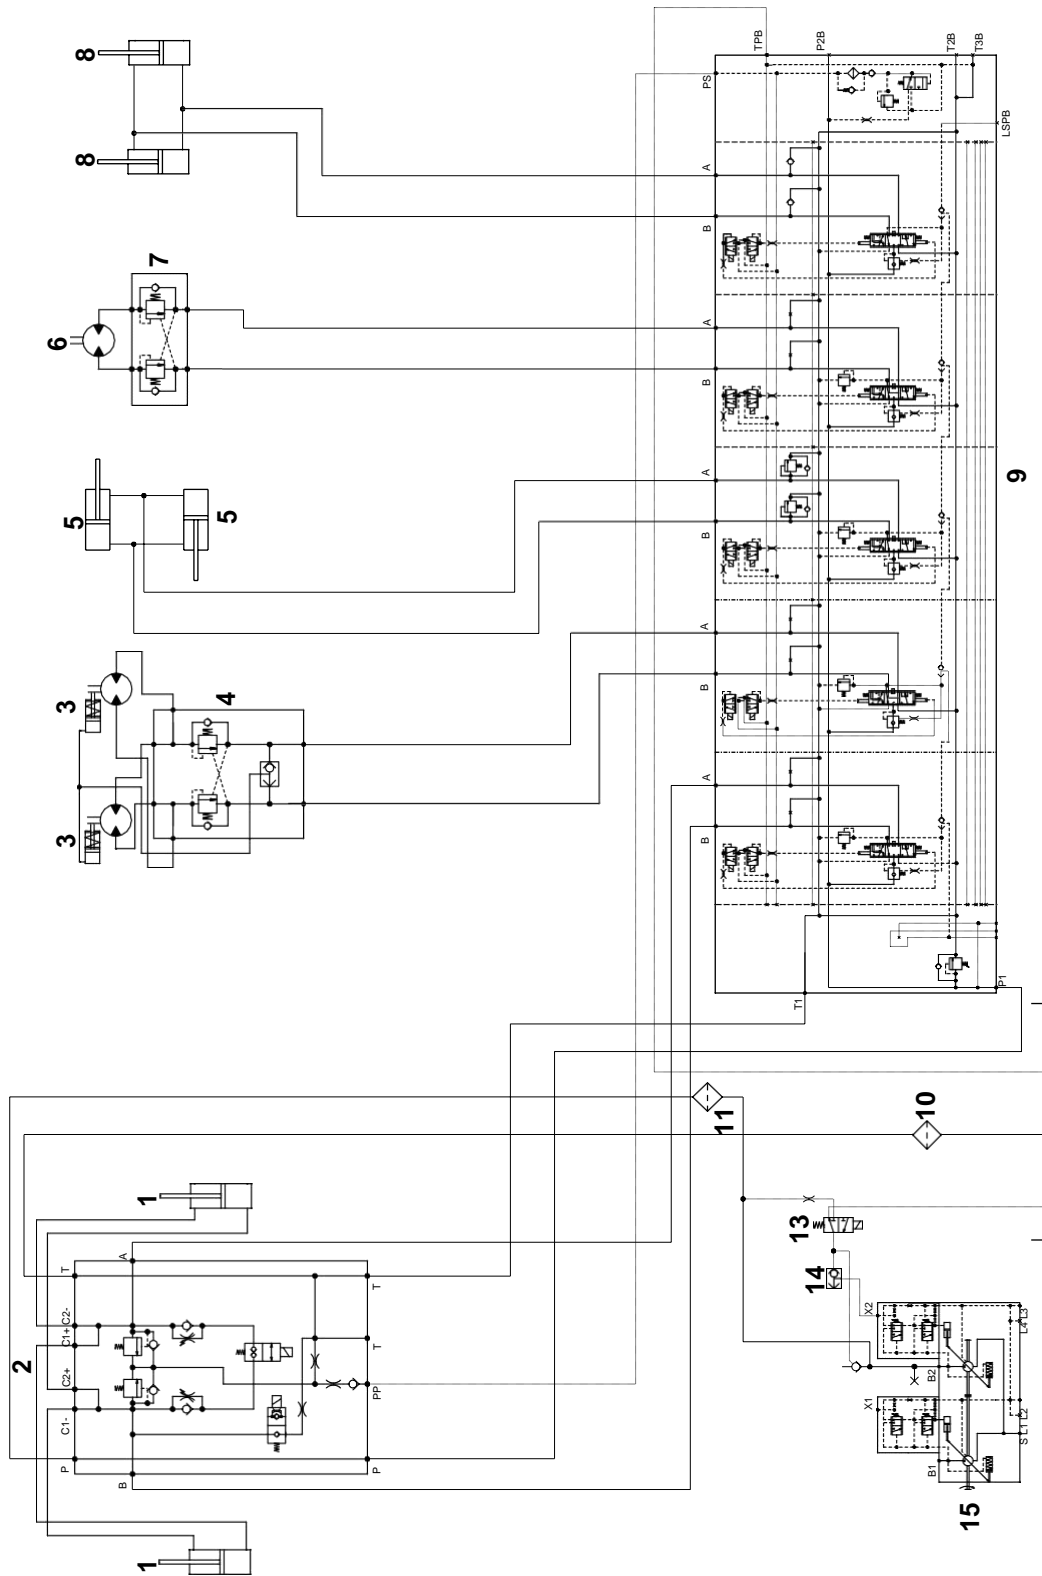

003185 (A40853.0200 ver. 5)

1. Tilt cylinder
2. Damping block
3. Rotation motor unit
4. Valve block rotation motor
5. Sideshift cylinders
6. Spreader motor
7. Valve block spreader motor
8. Twistlock cylinders
9. Control valve attachment
10. Filter hydraulic oil
11. Filter hydraulic oil (high pressure filter) 
12. Solenoid valve engagement hydraulic pressure
13. Shuttle valve
14. Hydraulic oil pump 1 and 2


Hydraulic diagram top lift, tilt lock, controllable tilt and hydraulic levelling

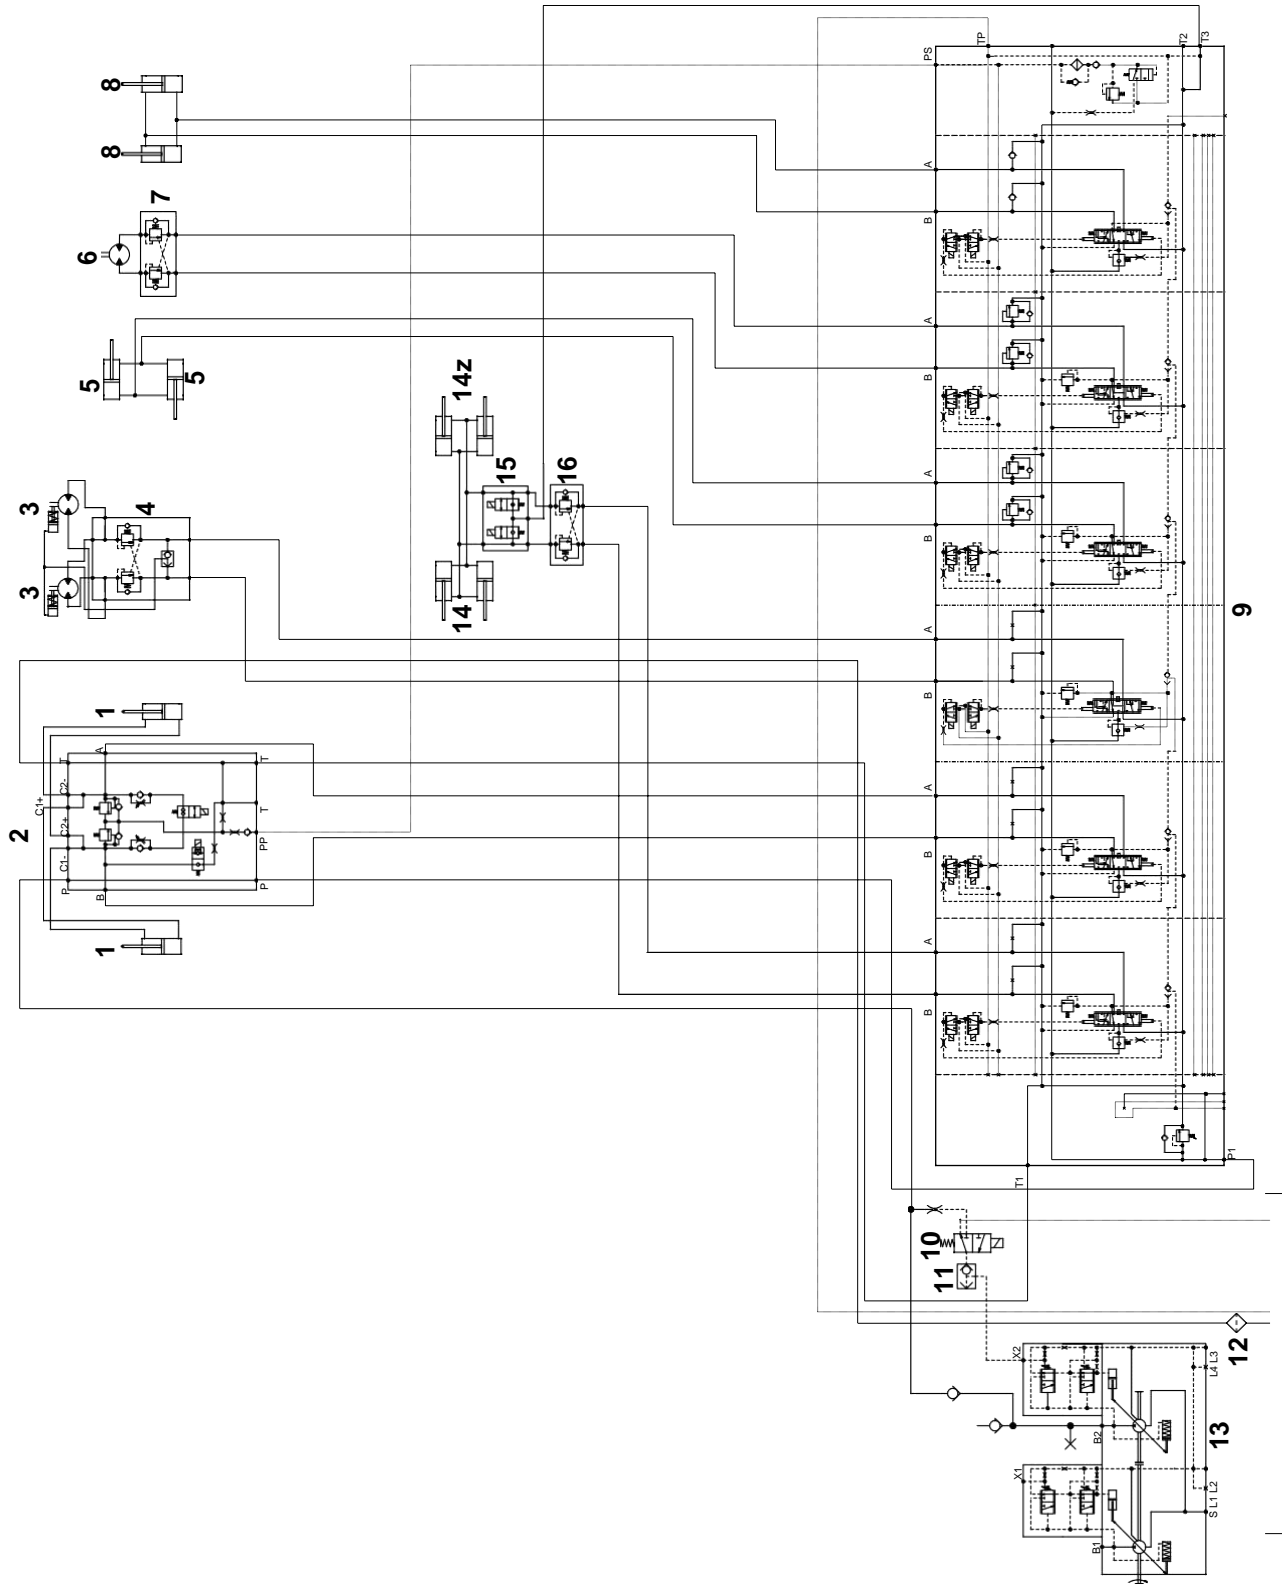

003186 (A431213.0100 ver. 3)

1. Tilt cylinder
2. Damping block
3. Rotation motor unit
4. Valve block rotation motor
5. Sideshift cylinders
6. Spreader motor
7. Valve block spreader motor
8. Twistlock cylinders
9. Control valve attachment
10. Solenoid valve engagement hydraulic pressure
11. Shuttle valve
12. Hydraulic oil filter
13. Hydraulic oil pump 1 and 2
14. Levelling cylinders
15. Valve block levelling cylinders
16. Over-centre valve levelling


Hydraulic diagram joystick steering

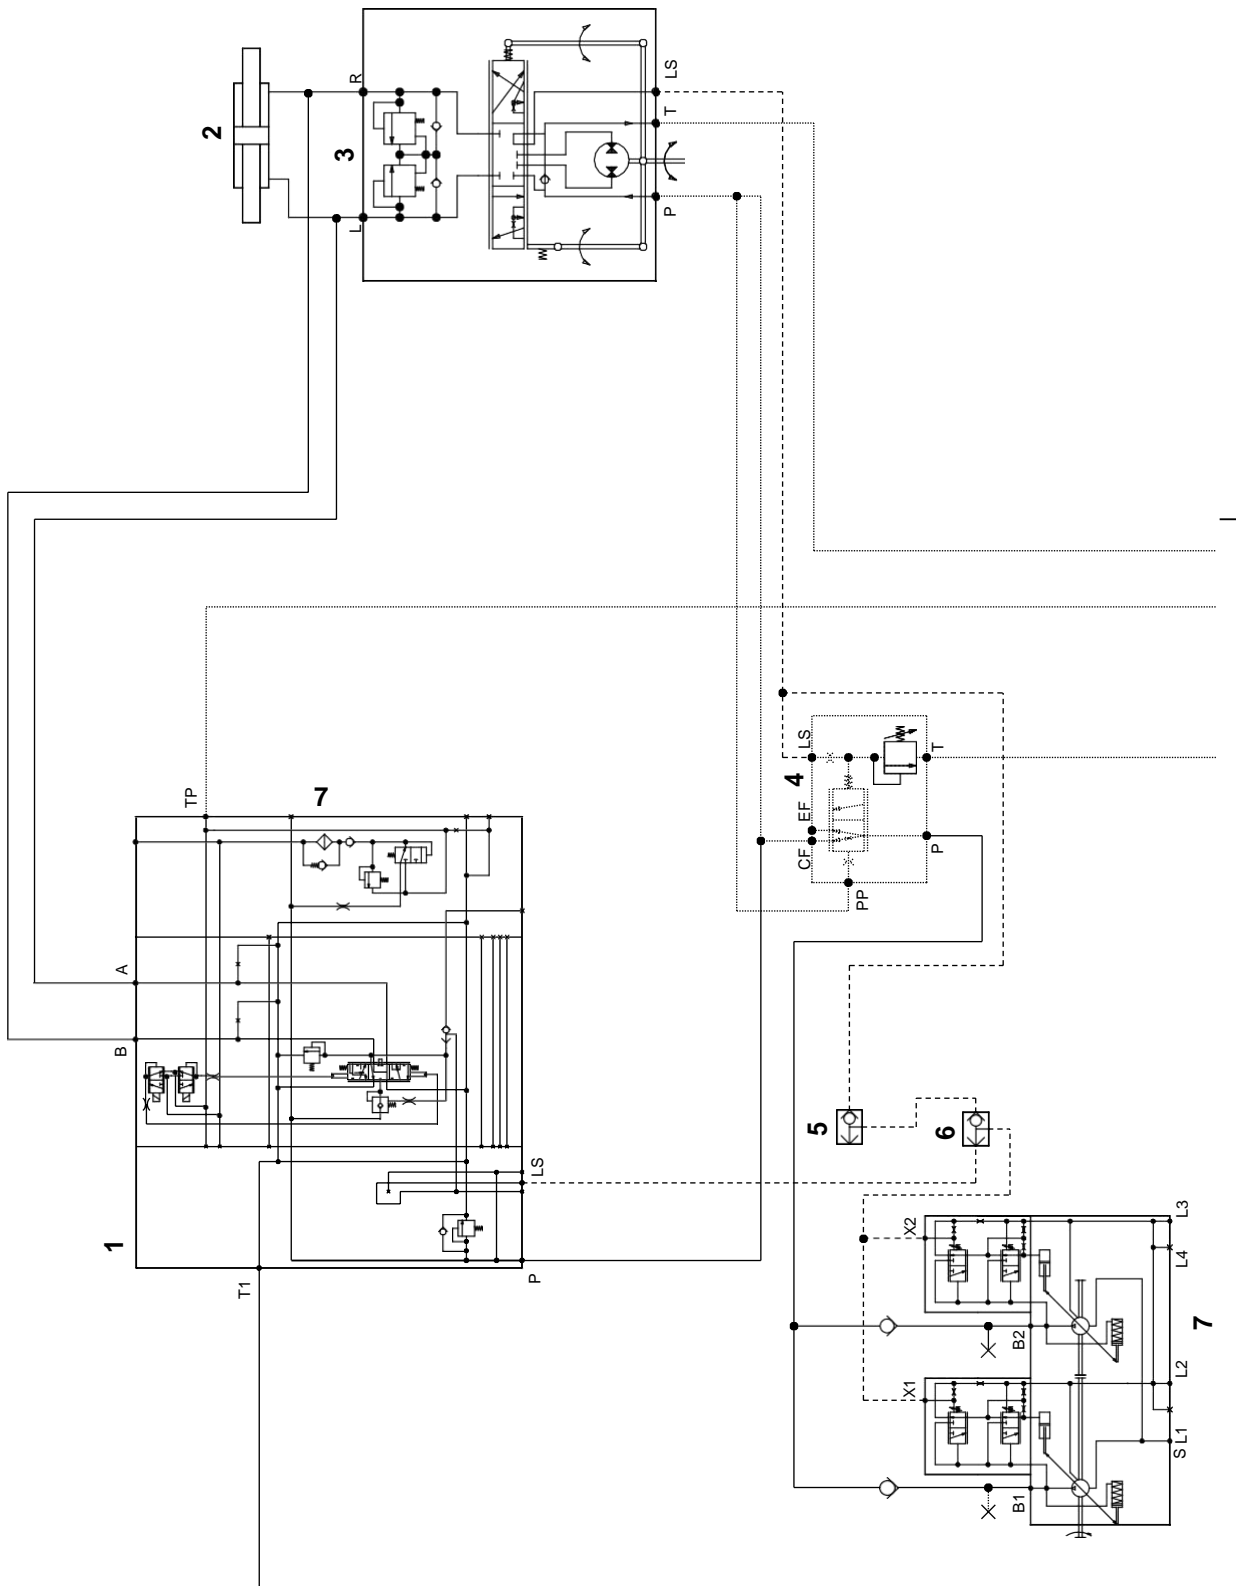

001986 (A40856.0100 ver. 2)

1. Control valve option frame
2. Steering cylinder
3. Steering valve
4. Priority valve
5. Shuttle valve
6. Shuttle valve joystick steering
7. Hydraulic oil pumps 3 and 4


Hydraulic diagram sliding cab

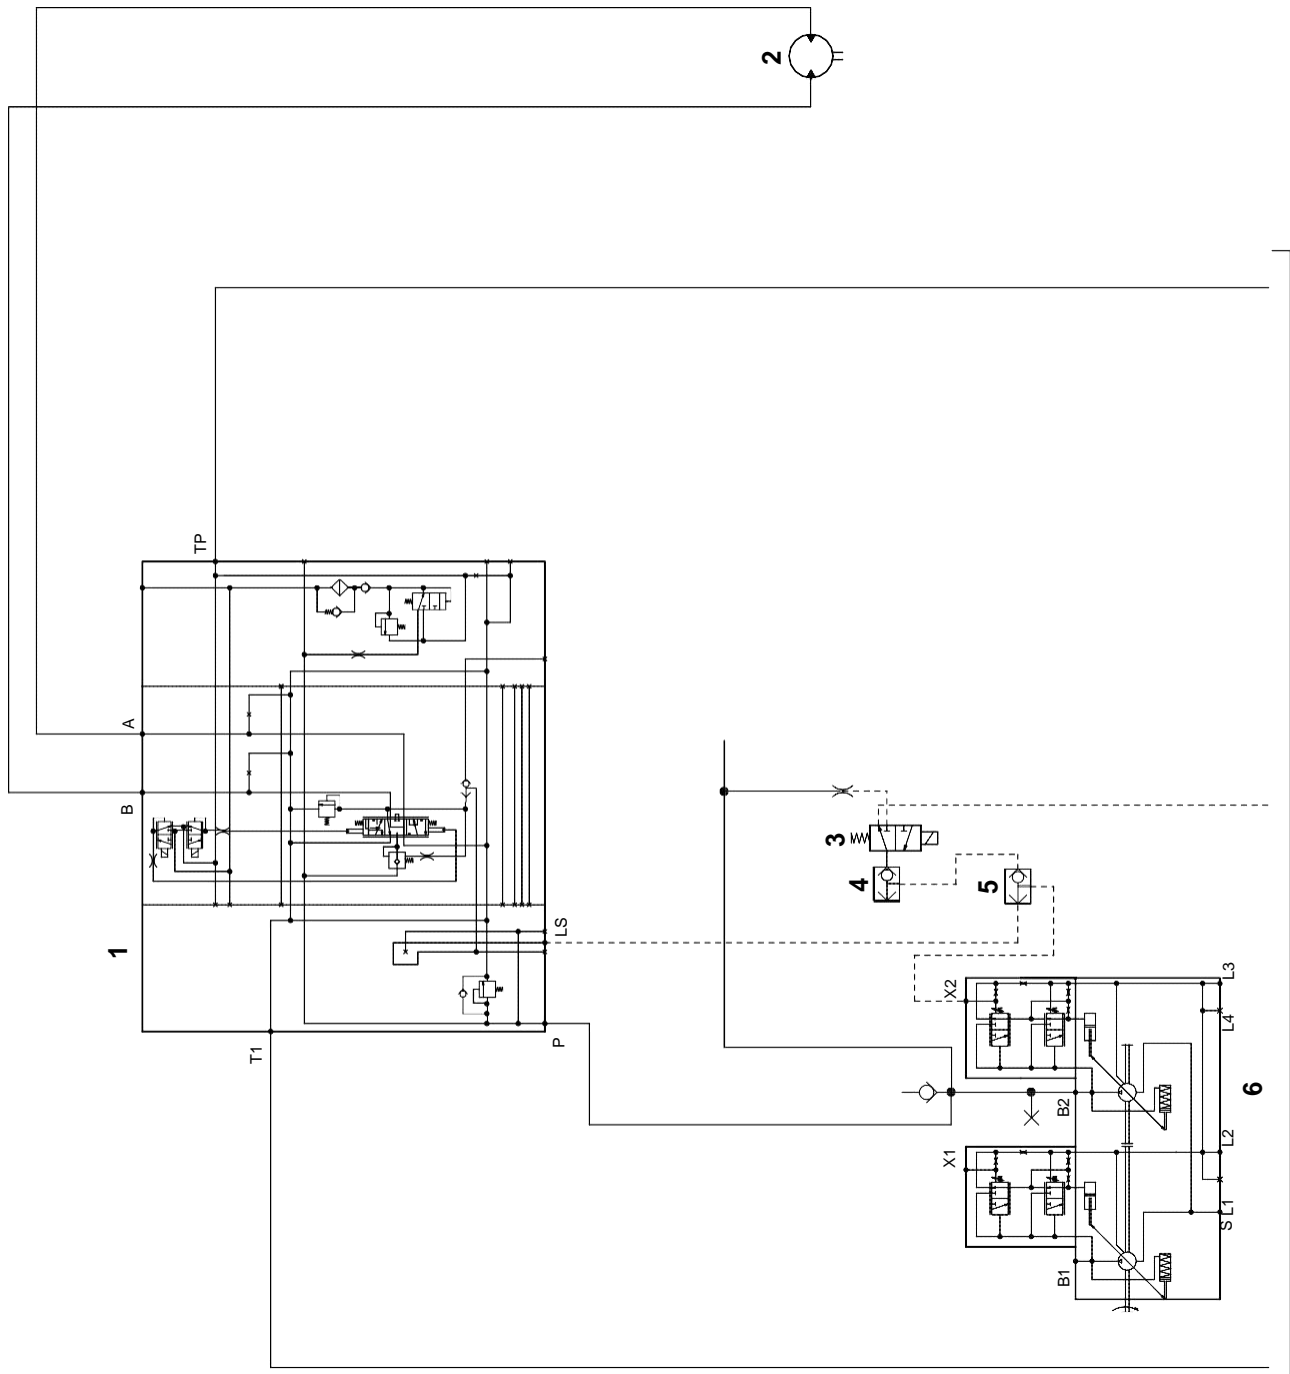

002394 (A40855.0100 ver. 1)

1. Control valve option frame
2. Hydraulic motor sliding cab
3. Solenoid valve engagement hydraulic pressure
4. Shuttle valve
5. Shuttle valve option
6. Hydraulic oil pump 1 and 2


Hydraulic diagram cab lift and support jacks

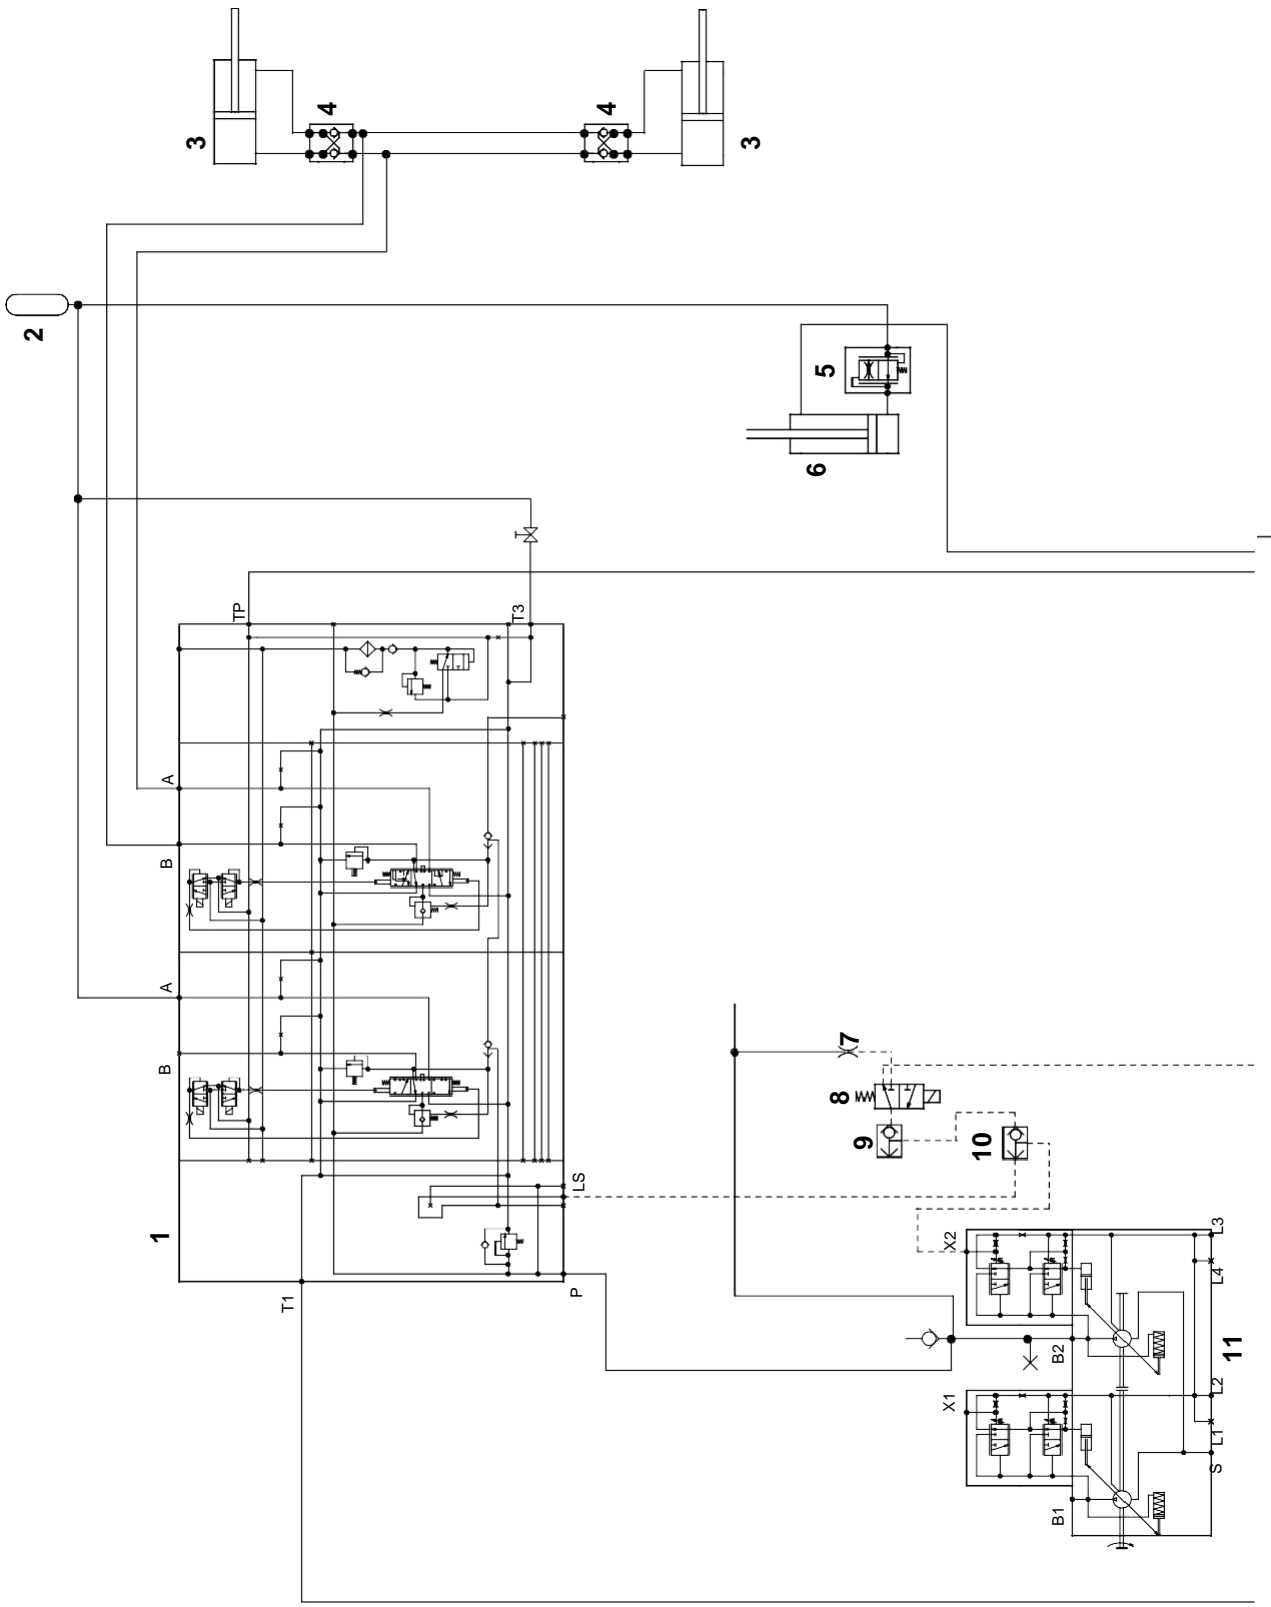

001987 (A43276.0100 ver. 1)


1. Control valve option frame
2. Accumulator
3. Hydraulic cylinder support jacks
4. Valve block support jacks
5. Load control valve
6. Hydraulic cylinder cab lift/lowering
7. Restriction
8. Valve block top lift hydraulics
9. Shuttle valve
10. Shuttle valve option frame
11. Hydraulic oil pump 1 and 2

Hydraulic diagram sliding cab and support jacks

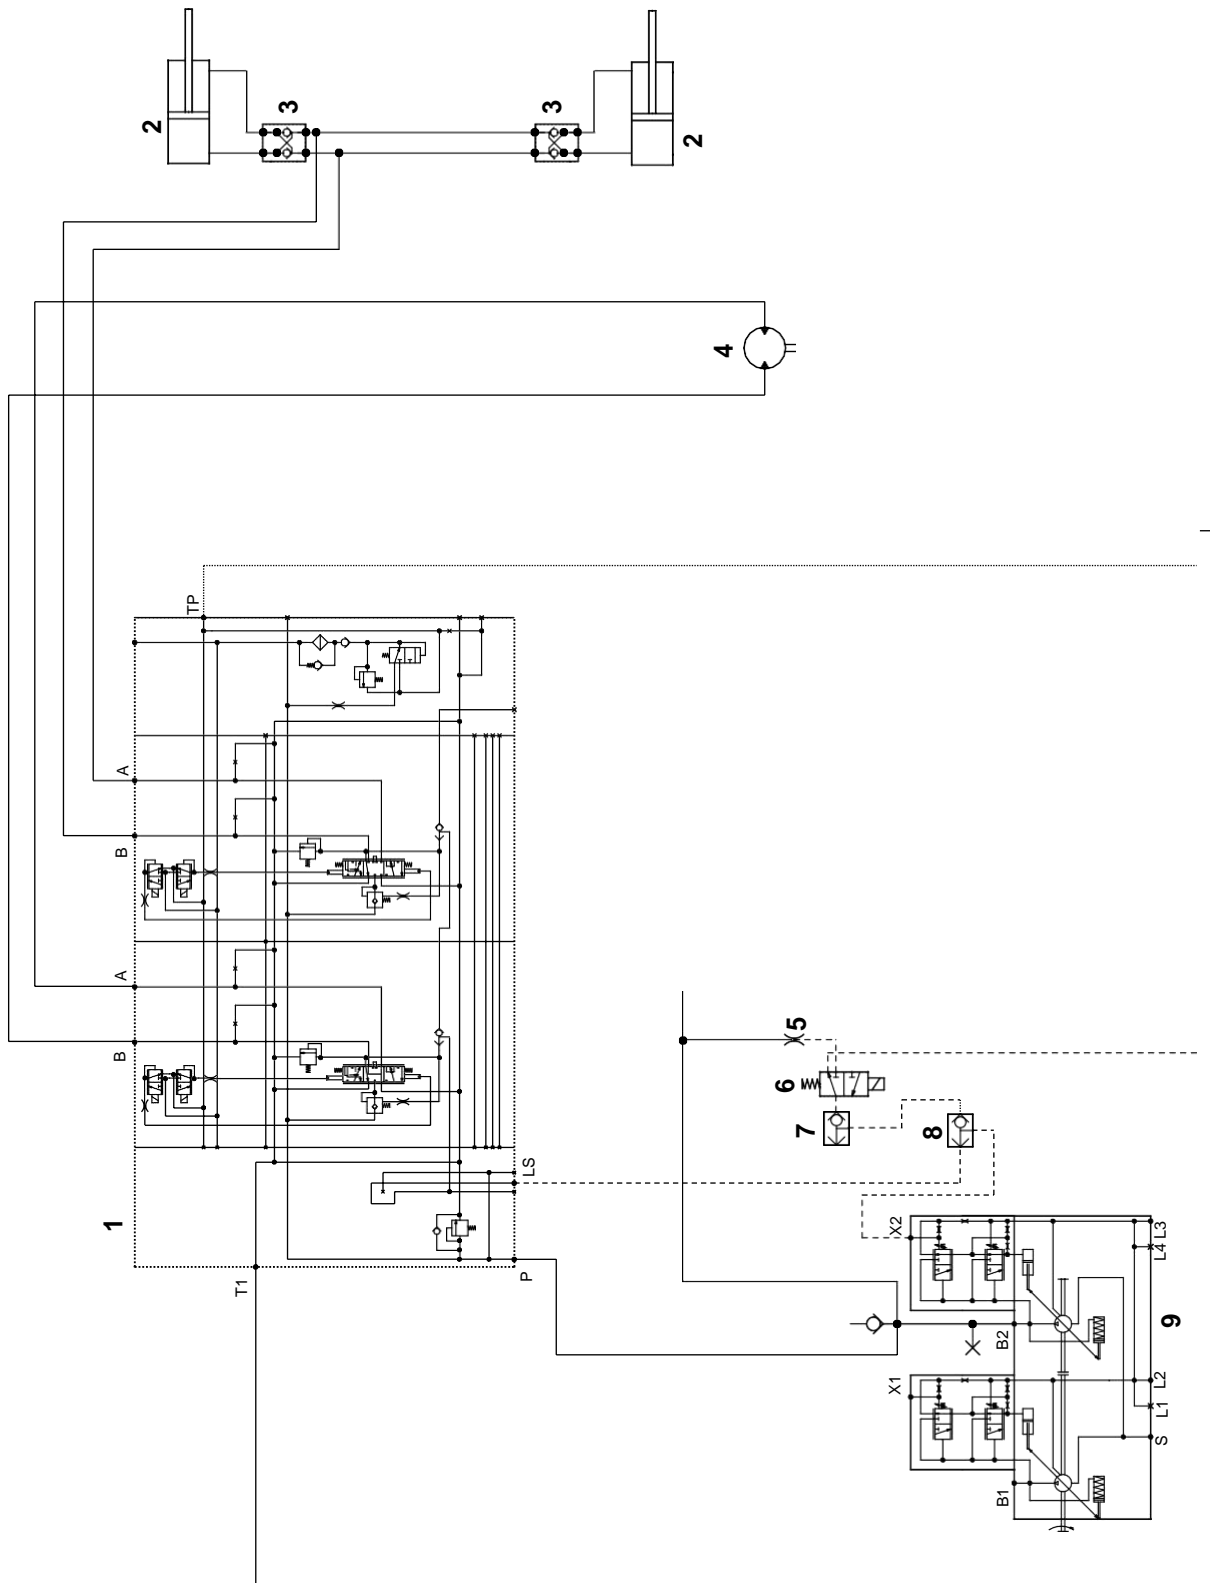

001985 (A40854.0100 ver.1)

1. Control valve option frame
2. Hydraulic cylinder support jacks
3. Over-centre valve support jacks
4. Hydraulic motor sliding cab
5. Restriction
6. Solenoid valve engagement hydraulic pressure
7. Shuttle valve
8. Shuttle valve option
9. Hydraulic oil pump 1 and 2

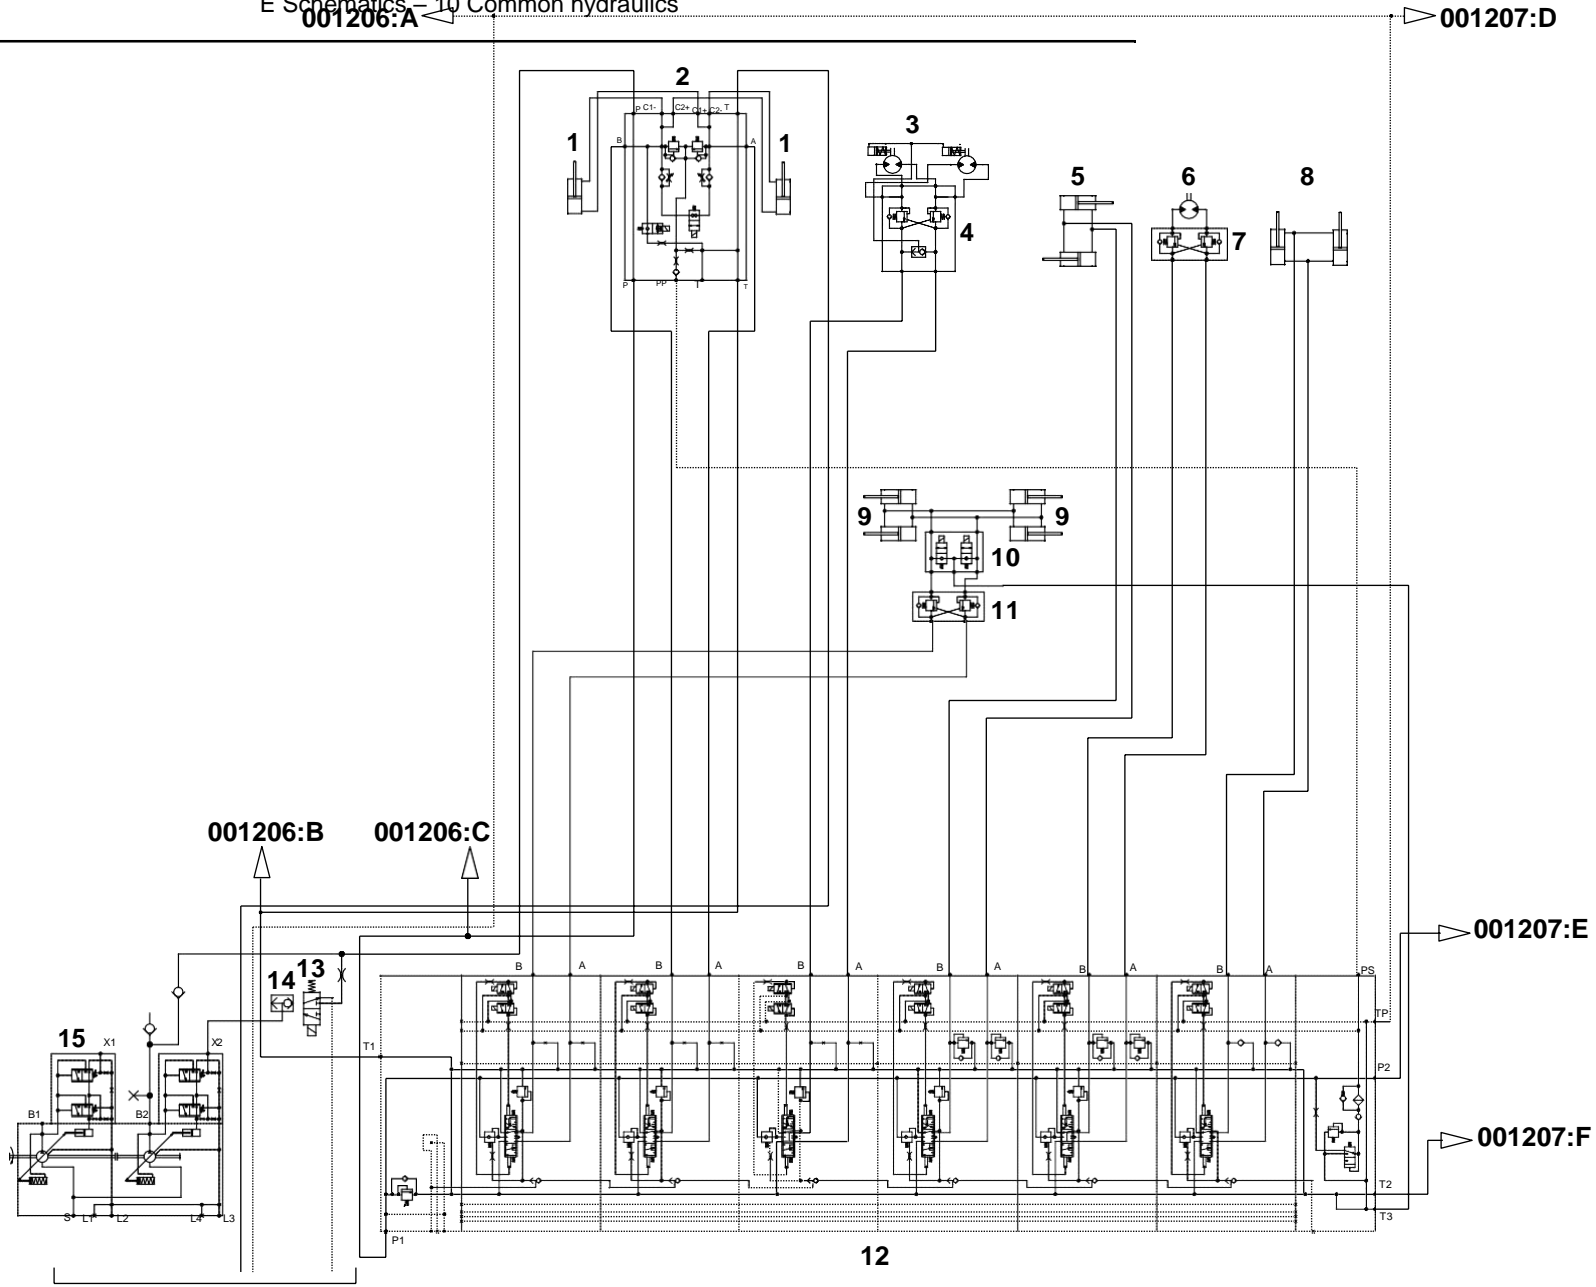


001205 (A41791.0100 ver. 1 - part 1/3)

Hydraulic diagram combi attachment (part 1 of 3)

1. Tilt cylinder
2. Damping block
3. Rotation motor unit
4. Valve block rotation motor
5. Sideshift cylinders
6. Spreader motor
7. Valve block spreader motor
8. Twistlock cylinders
9. Valve block levelling cylinders
10. Over-centre valve levelling
11. Levelling cylinders
12. Control valve attachment
13. Solenoid valve engagement hydraulic pressure
14. Shuttle valve
15. Hydraulic oil pump 1 and 2


Hydraulic diagram combi attachment (part 2 of 3)

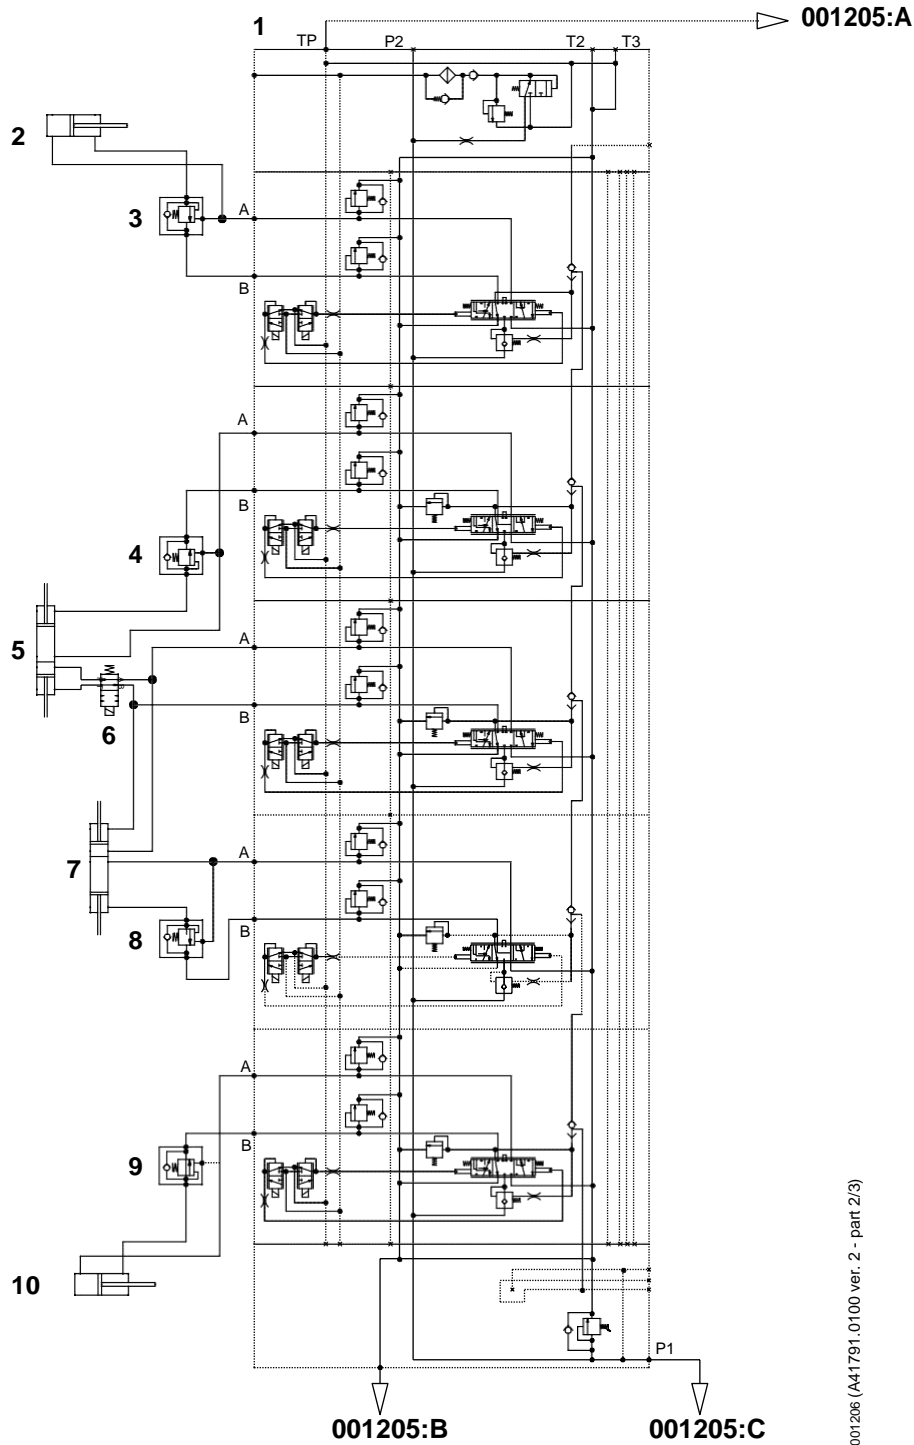

001205 (A41791.0100 ver. 2 - part 2/3)

1. Control valve lift leg left
2. Lowering cylinder front lift leg
3. Valve block lowering front lift leg
4. Valve block lowering front lift leg
5. Clamping cylinder front lift leg
6. Valve block operating position front lift leg
7. Clamping cylinder rear lift leg
8. Valve block lowering rear lift leg
9. Valve block lowering rear lift leg
10. Lowering cylinder rear lift leg

Hydraulic diagram combi attachment (part 3 of 3)

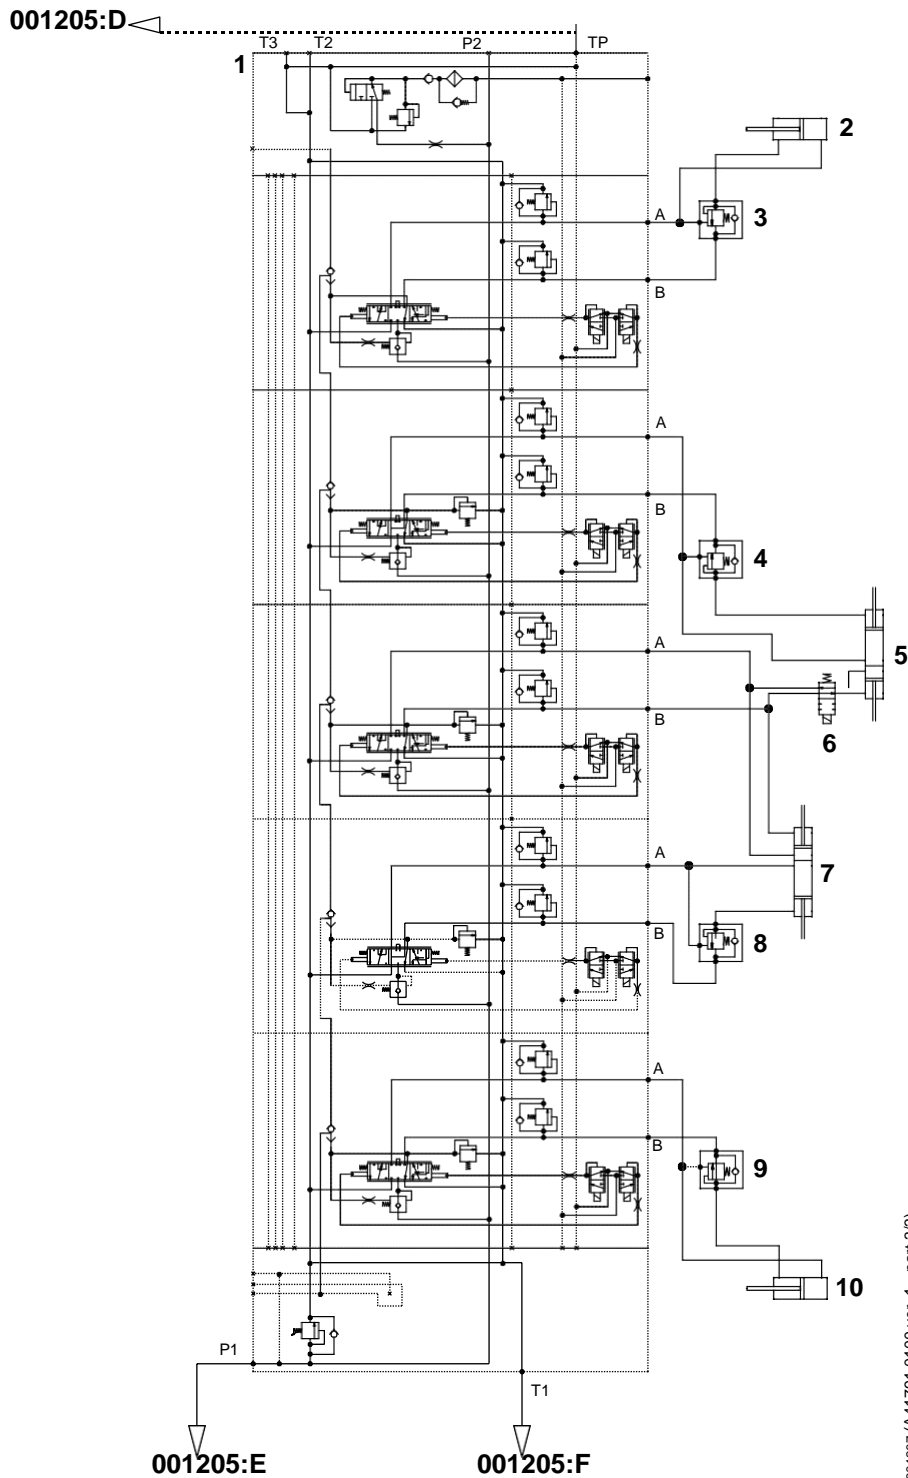

1. Control valve lift leg right
2. Lowering cylinder front lift leg
3. Valve block lowering front lift leg
4. Valve block lowering front lift leg
5. Clamping cylinder front lift leg
6. Valve block operating position front lift leg
7. Clamping cylinder rear lift leg
8. Valve block lowering rear lift leg
9. Valve block lowering rear lift leg
10. Lowering cylinder rear lift leg

11 Common electric

Wiring diagrams, description

A wiring diagram is divided into circuit name(drawing number) and consists of a number of pages.

The following is an explanation of the symbols used in circuit diagrams:

- X is connection terminal (followed by number)
- Designation 353-2
353 is component designation (see *Component designations page 27* for description of respective component). 2 indicates that it is the second component of this type in the specific diagram.
- Sensors, etc. are drawn in resting position on circuit, powerless mode
- Colour cable harness:
White cable = ground signal
Grey cable = Other cable harness
- Fuse box, e.g., F58, means fuse box with 8 fuses
- An arrow symbol means a reference to another circuit diagram
- 20015.0001 wiring diagrams-item designations K-standard.
K-standard 1: norms, rules
K-standard 2: cable harness, general physical
K-standard 5: Designation and marking systems, item designations wiring diagrams
- Ground connection:
1: X37-A is ground connection in the electrical distribution box. A connection terminal for ground. Frame ground connection - connection terminal to chassis.
2: Zero reference found in control units.

Component designations

The components in circuit diagrams have a prefix and number, the prefix describes the type of component, the number which component.

Component list with component number, prefix and designation is provided as an appendix after the circuit diagrams.

Prefix	Description
B	Converter from non-electric to electric signals or vice versa. Example: inductive sensor.
D	Binary element, delay unit, memory. Example: control unit.
E	White light. Example: work lights.
F	Protective device. Example: fuse.
G	Alternator, power supply device. Example: battery.
H	Signal device. Example horn, brake lights.
K	Relay, contactor. Example: power relay ignition.
M	Motor. Example: electric motor.
P	Measuring instrument, testing equipment. Example: operating hour gauge.
R	Resistor. Example: potentiometer.
S	Electric switch for control circuit, selector. Example: switch.
X	Outlet/socket, connecting device: Example: connection terminal
Y	Electrically controlled mechanical device: Example: solenoid valve, hydraulic valve.

Circuit diagrams, compilation

Circuit diagrams are provided as an appendix in the following order.

Sheet	Designation
0.0-1	Circuit Cross-references
0.0-2	Circuit Cross-references
0.0-3	Circuit Cross-references Opt.
0.0-4	Circuit Cross-references Attch.
0.0-5	Circuit Cross-references Attch.
0.0-6	Circuit Cross-references Combi attch.
1.0-1	Circuit Engine 1240&1250
1.0-2	Circuit Engine Cummins
1.0-3	Circuit Engine Cummins
1.1-1	Circuit Drivetrain
2.0-1	Circuit Dana TE 32000
2.0-2	Circuit Dana TE 32000
2.0-3	Circuit Dana TE 32000
2.1-1	Circuit Drivetrain
4.0-1	Circuit Brake system
4.0-2	Circuit Brake system
5.2-1	Circuit Steering joystick/mini-wheel
5.2-2	Circuit Steering joystick/mini-wheel
5.2-3	Circuit Steering joystick/mini-wheel and Combi attch.
5.2-4	Circuit Steering joystick/mini-wheel and Combi attch.
7.1-1	Circuit Joystick
7.2-1	Circuit Boom Up/Down
7.3-1	Circuit Boom In/Out
7.5-1	Circuit Spreading Valves
7.5-2	Circuit Spreading Auto
7.5-3	Circuit Spreading Sensors
7.6-1	Circuit Rotation
7.7-1	Circuit Tilt lock
7.7-2	Circuit Tilt + Levelling
7.7-3	Circuit Tilt + Levelling
7.9-1	Circuit Twistlocks

Sheet	Designation
7.9-2	Circuit Twistlocks
7.9-3	Circuit Combi Attch.
7.9-4	Circuit Combi Attch.
7.9-5	Circuit Combi Attch.
7.9-6	Circuit Combi Attch.
7.9-7	Circuit Combi Attch.
7.9-8	Circuit Combi Attch.
7.9-9	Circuit Combi Attch.
7.9-10	Circuit Combi Attch.
7.9-11	Circuit Combi Attch.
7.9-12	Circuit Combi Attch.
7.9-13	Circuit Combi Attch.
7.9-14	Circuit Combi Attch.
7.9-15	Circuit Overheight
7.9-16	Circuit Overheight
7.9-17	Circuit Combi Attch.
7.10-1	Circuit Hyd Support Jacks
7.10-2	Circuit Hyd Support Jacks
7.10-3	Circuit Printer
8.2-1	Circuit OP + Scales
8.2-2	Circuit OP + Scales
8.2-3	Circuit By-passing
8.2-4	Circuit RMI
9.1-1	Circuit Extra Sensor Instr.
9.1-2	Circuit Optional Equipment
9.1-3	Circuit Optional Equipment
9.1-4	Circuit Sensor Instr.
9.1-5	Circuit Option Cab
9.3-1	Circuit Cab Operator's Seat
9.3-2	Circuit Cab Operator's Seat
9.4-1	Circuit Climate System
9.4-2	Circuit Climate System
9.5-1	Circuit Wipers
9.6-1	Circuit Work Lights

Sheet	Designation
9.6-2	Circuit Extra Work Lights Attch.
9.6-3	Circuit Extra Work Lights Boom
9.6-5	Circuit Lighting
9.6-6	Circuit Lighting
9.6-7	Circuit Lighting
9.6-8	Circuit Lighting
9.6-9	Circuit Courtesy lighting
9.6-10	Circuit Extra Work Lights Frame
9.7-1	Circuit Alarms, Audible signals
9.7-2	Circuit Alarms, Audible signals
9.7-3	Circuit Direction Indicators, Flashing Hazard Lights
9.7-4	Circuit Back-up Alarm
9.8-1	Circuit Radio
9.9-9	Circuit Camera
9.10-1	Circuit Sliding/Vertical adjustable Cab
9.10-2	Circuit Cab Tilt
9.14	Circuit Central Lubrication
10.0-1	Circuit Hydraulics
11.5-1	Circuit Current
11.5-2	Circuit Current
11.5-3	Circuit Current
11.5-4	Circuit Current
11.5-5	Circuit Current Attch.
11.5-6	Circuit Current KDU OPT
11.5-7	Circuit 24 V
11.5-8	Circuit 12 V + Com. Radio
11.5-9	Circuit Current Attch.
11.6-3	Circuit CAN-BUS opt. Frame KDU
11.6-4	Circuit CAN-BUS AGG
11.6-5	Circuit CAN-BUS AGG
11.6-6	Circuit CAN-BUS AGG

'5) & 400-450

.UHWVDU/:LULQJ

ALL INFORMATION ON THIS PAGE IS THE PROPERTY OF KALMAR. IT IS TO BE KEPT CONFIDENTIAL AND NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM.

THIS DOCUMENT IS THE PROPERTY OF KALMAR. IT IS TO BE KEPT CONFIDENTIAL AND NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM.

SHEET NO. 31	UIC	GULQJ	KGULQJ QU	6LQJ	DWXP	6LQJ	DWXP/DWH	ADYQJLZURHFW QR		*HQPQLQJ	.UHWVDU '5) & 400-450	SKYVWUURDWH	'5) & 400-450	SDGMRHFW	/
	IR	HVLQJ FKDQJH	& KDQJH IR		DWH	6LQJ	050809	\$50000.0600		IDPH	:LULQJ '5) & 400-450	SLWQJLZURQ IR	\$50001.0100	SHYDYL VVXH	05
	1	SCGHC 9.1B5 & 8.2B4 & J059-2.	060600	7.0%	060615	3QYUWU/LQJ			**US	6					
		77L00N/SGGHC 88WJrU/HOHWHC 99DU/DV				*GNSSU									



<https://www.forkliftpdfmanuals.com/>

.8
5217

+&+\$66,6
-797-

+&+\$66,6
-797-

3LQ IXPEHU	UDZLQJ	XQFWLRQ	7ISH
3RZHU	/11.5B4.%5		
&\$1	/11.6B3.8		
2:6			7HPSHUDWXUH,QSW
2:11	/11.5B4.%5		(PHU)HQF VVRS
2:13	/4.0B1.(1	7(03.%5S.(2./	7HPSHUDWXUH,QSW
2:15			5HRVWDW,Q
2:16			+

3LQ IXPEHU	UDZLQJ	XQFWLRQ	7ISH
1:1	/9.6B6.%1		66
1:2	+&+\$66,6/7.2B1.(2	+(\$ /,*+7 (/)7	1.55
1:3	+&+\$66,6/7.2B1.%2	%220 (/)7	1.55
1:4	/7.3B1.&2	%220 /2:(5	1.55
1:5	/7.3B1.&2	%220 287	1.55
1:6	+&+\$66,6/8.2B2.8	%220 .1	1.55
1:7	/4.0B2.S1	6(16256 2./35(6685(09 5HI
1:8	+&+\$66,6/8.2B2.1	385.,1* %5S.(1.55
1:9	/9.7B3.1	6833/< 6(16256 2./35(6685(SQDORJ 5HI 59
1:10	/9.7B3.1	,5(&7,21 (/)7 5217	1.55
1:11	/9.1B3.%1	237,21 5217	LJ,Q /1.55
1:12	/9.1B3.%1	237,21 5217	LJ,Q /1.55
1:13	/9.6B6.(8	%5S.(/,*+7	SQDORJ,Q 0-59
1:14	/4.0B2.%1	&22(5)\$1 %5S.(105
1:15	/9.6B6.%1	+(\$ /,*+7 5,*+7	66
1:16	+&+\$66,6/7.2B1.(8	%220 (/)7	3:0
1:17	+&+\$66,6/7.2B1.%8	%220 /2:(5	3:0
1:18	/7.3B1.&8	%220 287	3:0
1:19	/7.3B1.&8	%220 .1	3:0
1:20	/4.0B1.8	35(6685(\$&&808/\$725 7\$1.	SQDORJ,Q 0-59

3LQ IXPEHU	UDZLQJ	XQFWLRQ	7ISH
121	+&+\$66,6/8.2B2.(8	0-250EDU	SQDORJ,Q 0-59
122	+&+\$66,6/8.2B2.)8	0-250EDU	SQDORJ,Q 0-59
123	+&+\$66,6/8.2B2.(8	0-250EDU	SQDORJ,Q 0-59
124	+&+\$66,6/8.2B2.(8	0-250EDU	SQDORJ,Q 0-59
125	/9.6B6.&1	6,(326,7,21 (/)7 5217	1.55
126	/9.1B3.S1	237,21 5217	LJ,Q /1.55
127	/4.0B1.&8	385.,1* %5S.(SQDORJ,Q 0-59
128	/9.14.&2	&(1758/8%5,&\$7,21	66
129	/9.6B6.1	6,(326,7,21 5,*+7)5217	1.55
130	+&+\$66,6/7.2B1.2	%/2&.,1* /)7	2.55
131	+&+\$66,6/7.2B1.&2	%/2&.,1* 5,*+7	2.55
132	+&+\$66,6/7.2B1.(2	5*(1(587,21 5,*+7	1.55
133	+&+\$66,6/7.2B1.2)	5*(1(587,21 (/)7	1.55
134			1.55
135			1.55
136			LJ,Q /1.55
137			LJ,Q /1.55
138	/4.0B2.S8	385.,1* %5S.(09 5HI
139	/9.6B6.(1	%5S.(/,*+7	1.55
140	/9.1B3.&1	237,21 5217	LJ,Q /1.55
141	/2.1B1.7	'(&/8&+1*	SQDORJ,Q 0-59
142	/9.6B6.S1	,33(/,*+7 (/)7 5217	66

.8
5(\$5

+&+\$66,6
-797-5

+&+\$66,6
-797-5

3LQ IXPEHU	UDZLQJ	XQFWLRQ	7ISH
3RZHU	/11.5B4.&5		
&\$1	/11.6B3.)1		
2:6			7HPSHUDWXUH,QSW
2:11	/11.5B4.%5		(PHU)HQF VVRS
2:13	/10.0B1.%2	+<588/& 7(03(5\$785(7HPSHUDWXUH,QSW
2:15	/9.1B4.8	8(/ /)9(/	5HRVWDW,Q
2:16	+&+\$66,6/11.5B1.)7	\$/7(51\$725	+

3LQ IXPEHU	UDZLQJ	XQFWLRQ	7ISH
1:1	+&5%9.6B1.(1	.25.,1* /,*+7 %220	66
1:2	+&+\$66,6/8.2B2.S1	6(1625 67((5,1* \$)/(1.55
1:3	+&+\$66,6/8.2B1.S1	32:(5 6833/< 6(16256	1.55
1:4	/7.3B1.(3	32:(5 6833/< 6(16256	1.55
1:5	/7.3B1.(3	%/2&.,1* 352-(&7,1*	1.55
1:6	+&+\$66,6/8.2B1.7	6(16256	09 5HI
1:7	/9.6B7.1	6,(326,7,21 (/)7 5(\$5	1.55
1:8	+&+\$66,6/8.2B1.&1	SQDORJ 5HI 59	1.55
1:9	/9.6B7.1	6,(326,7,21 5,*+7 5(\$5	1.55
1:10	/9.6B7.&1	5(\$5 /,*+7 (/)7	1.55
1:11	+&+\$66,6/8.2B2.%8	6(1625 67((5,1* \$)/(/)7 6,(LJ,Q /1.55
1:12	+&+\$66,6/8.2B2.%8	6(1625 67((5,1* \$)/(/)7 6,(LJ,Q /1.55
1:13	/9.1B3.&8	237,21 5(\$5	SQDORJ,Q 0-59
1:14	/10.0B1.%2	&22,1* \$1 +<588/& 2./	105
1:15	+&5%9.6B1.1	.25.,1* /,*+7 %220	66
1:16			3:0
1:17			3:0
1:18			3:0
1:19			3:0
1:20	/9.1B3.8	237,21 5(\$5	SQDORJ,Q 0-59

3LQ IXPEHU	UDZLQJ	XQFWLRQ	7ISH
121	+&+\$66,6/8.2B1.&7	%220 \$1*/(SQDORJ,Q 0-59
122	+&+\$66,6/8.2B1.7	%220 326,7,21	SQDORJ,Q 0-59
123	/7.3B1.%8	\$03,1* %220 287	SQDORJ,Q 0-59
124			SQDORJ,Q 0-59
125	/9.6B7.&1	5(\$5 /,*+7 5,*+7	1.55
126	/7.3B1.S8	\$03,1* %220 .1	LJ,Q /1.55
127	/9.1B3.8	237,21 5(\$5	SQDORJ,Q 0-59
128	/9.6B7.S1	5(9(56,1* /,*+7 (/)7 5(\$5	66
129	/9.7B3.(1	,5(&7,21 (/)7 5(\$5	1.55
130	/9.7B4.S1	5(9(56,1* \$/50	2.55
131	/7.6B1.1	\$&7,987,21 2) 723(/)7 +<588/&6	1.55
132	/9.6B7.%1	%5S.(/,*+7 (/)7 5(\$5	1.55
133	/9.6B7.&1	%5S.(/,*+7 5,*+7 5(\$5	1.55
134	+&5%9.4B2.(1	08*1(7.&/87&+ &2035(6625	1.55
135	+&5%9.4B2.(1	08*1(7.&/87&+ &2035(6625	1.55
136	/2.1B1.(2	5H00) VWDUWLQJ VROHQJLQ	LJ,Q /1.55
137	+&5%9.4B1.\$8	35(6685(5(5,*(\$517	LJ,Q /1.55
138	+&+\$66,6/8.2B2.%8	6(1625 67((5,1* \$)/(09 5HI
139	/9.7B3.(1	,5(&7,21 5,*+7 5(\$5	1.55
140	/7.3B1.2	,17(55837,21 3803	LJ,Q /1.55
141	/9.1B3.(8	237,21 5(\$5	SQDORJ,Q 0-59
142	/9.6B7.%1	5(9(56,1* /,*+7 5,*+7 5(\$5	66

ALL OPERATIONS MUST BE PERFORMED IN ACCORDANCE WITH THE OPERATING MANUAL AND ALL SAFETY PRECAUTIONS MUST BE OBSERVED. THE OPERATOR IS RESPONSIBLE FOR THE PROPER USE OF THE FORK LIFT.

SH	1U K CULQJ	HQGLQJ QU	DWXP	4LQ	DWXP/DWH	+DQQJLUDHPP QR	4HQORQJ	4KXNURJHQ	5DQG4HWH
SR	IR	HVLQ FKDQJH	4LQ	DWH	4LQ	50000.0600	.UHWV .RUVUHJHUHQVHU	'5)& 400-450	0.0B1/
ST	1	SGCHC 9.1B5 & 8.2B4 & .059-2.	060600	7%	060615		:LULQJ & URVV 5HIHUHQFHV	\$50001.0100	05
77LOON/SGCHC 88VJmL/HHWHHC 99DUJ/DV									



<https://www.forkliftpdfmanuals.com/>

. '8
237,21

+&+\$66,6
-797-2

	3LQ 1XPEHU	UDZLQJ	JXQFWLRQ	7\SH
. '8 FRQWDFW .2	3RZHU	/11.5B6.%5		
	&\$1	/11.6B3.8		&\$1-%86
	2:6			7HPSHUDWXUH QSW
	2:11	/11.5B6.\$5		(PHUHQF \ VVRS
	2:13			7HPSHUDWXUH QSW
	2:15			SHRWWDW Q
	2:16			'+

+&+\$66,6
-797-2

	3LQ 1XPEHU	UDZLQJ	JXQFWLRQ	7\SH
. '8 FRQWDFW .1	1:1			6\$
	1:2	/9.10B1.2	&\$%)25:55/83	1.5\$
	1:3	/9.10B1.2	&\$% 5(9(56(/2:1	1.5\$
	1:4	/5.2B2.S2	0,&52//9(5 67((5,1* /()7	1.5\$
	1:5	/5.2B2.%2	0,&52//9(5 67((5,1* 5,+7	1.5\$
	1:6	/7.10B2.8	6(16256 6833257 -\$&.	09 5HI
	1:7		7,/7 &\$%, 81/2\$' +<5\$8/, & 2,/	1.5\$
	1:8			SQDORJ 5HI 59
	1:9	/7.10B2.S1	6833/< 6(16256 6833257 -\$&.	1.5\$
	1:10	/9.10B1.&2	&\$% /2: 326,7,21	1.5\$
	1:11		'LJ,Q / 1.5\$	3:0
	1:12		'LJ,Q / 1.5\$	3:0
	1:13	/7.10B2.58	/()7 6833257 -\$&., 833(5 326	SQDORJ,Q 0-59
	1:14			10\$
	1:15			6\$
	1:16	/9.10B1.7	&\$%)25:55/83	3:0
	1:17	/9.10B1.7	&\$% 5(9(56(/2:1	3:0
1:18	/5.2B2.S8	0,&52//9(5 67((5,1* /()7	3:0	
1:19	/5.2B2.%8	0,&52//9(5 67((5,1* 5,+7	3:0	
1:20	/7.10B2.%8	/()7 6833257 -\$&., /2:(5 326	SQDORJ,Q 0-59	

	3LQ 1XPEHU	UDZLQJ	JXQFWLRQ	7\SH
. '8 FRQWDFW .1	1:21		&\$% /2: 326,7,21	SQDORJ,Q 0-59
	1:22		7,/7 &\$%, 81/2\$' +<5\$8/, & 2,/	SQDORJ,Q 0-59
	1:23			SQDORJ,Q 0-59
	1:24			SQDORJ,Q 0-59
	1:25		7,/7 &\$%, 81/2\$' +<5\$8/, & 2,/	1.5\$
	1:26			'LJ,Q / 1.5\$
	1:27	/7.10B2.&8	5,+7 6833257 -\$&., 833(5 326	SQDORJ,Q 0-59
	1:28			6\$
	1:29			1.5\$
	1:30	/7.10B1.&1	6833257 -\$& 6 83	2.5\$
	1:31	/7.10B1.'1	6833257 -\$& 6 '2:1	2.5\$
	1:32		7,/7 &\$% 83	1.5\$
	1:33		7,/7 &\$% '2:1	1.5\$
	1:34			1.5\$
	1:35			1.5\$
	1:36			'LJ,Q / 1.5\$
	1:37			'LJ,Q / 1.5\$
1:38		&\$% /2: 326,7,21	09 5HI	
1:39			1.5\$	
1:40			'LJ,Q / 1.5\$	
1:41	/7.10B2.'8	5,+7 6833257 -\$&., /2:(5 326	SQDORJ,Q 0-59	
1:42			6\$	

THE INFORMATION CONTAINED HEREIN IS THE PROPERTY OF KALMAR AND IS TO BE USED ONLY FOR THE PURPOSES SPECIFIED. ANY REPRODUCTION OR TRANSMISSION IN ANY FORM OR BY ANY MEANS WITHOUT THE WRITTEN PERMISSION OF KALMAR IS STRICTLY PROHIBITED.

SH	1U K CULQJ	HQGLQJ QU	DWXP	4LQ	DWXP/DWH	+DQQJLUBHPP QR	*HQRPLQJ	*DQGKSHW
ST	IR: HVLUQ FKDQJH	&KDQJH IR	DWH	4LQ	050511	\$50000.0600	.UHWV .RUVVHUHUHQVHU ZSW	0.0B3/
1	SGCHC 9.1B5 & 8.2B4 & .059-2	060600	060615	7%			5) & 400-450	
	77LOON/SGCHC 88VJmL/HHWHHC 99DU/DV						:LULQJ & URVV 5HIHUHQFHV ZSW	\$50001.0100
								05



<https://www.forkliftpdfmanuals.com/>

\$

%

&

.

(

0

+%.220
-791-2

	3LQ1XPEHU	UDZLQJ	JXQFWLRQ	7\SH
.8 FROQDFW.2	3RZHU	/11.5B9.&5		
	&51	/11.6B5.7		
	2:6			7HFSHUDWXUH,Q&6W
	2:11	/11.5B9.&4		(PHU)HQF\ VWRS
	2:13			7HFSHUDWXUH,Q&6W
	2:15			SHRWVDW.Q
	2:16			+

+%.220
-791-2

	3LQ1XPEHU	UDZLQJ	JXQFWLRQ	7\SH		3LQ1XPEHU	UDZLQJ	JXQFWLRQ	7\SH
.8 FROQDFW.1	1:1			6S		1:21			SQDORJ.Q0.59
	1:2			1.5S		1:22			SQDORJ.Q0.59
	1:3	/7.7B2.S2		1.5S		1:23			SQDORJ.Q0.59
	1:4	/7.7B2.%2		1.5S		1:24			SQDORJ.Q0.59
	1:5	/7.7B2.&2		1.5S		1:25			1.5S
	1:6	/7.7B2.&2		09.5HI		1:26			LJ.Q/1.5S
	1:7			1.5S		1:27			SQDORJ.Q0.59
	1:8			SQDORJ.5HI.59		1:28			6S
	1:9	/7.9B16.1		1.5S		1:29			1.5S
	1:10	/7.9B16.&1		1.5S		1:30	/7.7B2.2		2.5S
	1:11		29(5+(/*+7/(/*833(5326			1:31	/7.7B2.2		2.5S
	1:12		29(5+(/*+7/(/*833(5326			1:32	/7.9B16.%1		1.5S
	1:13	/7.9B16.&8		10S		1:33	/7.9B16.S1		1.5S
	1:14		29(5+(/*+7/(/*833(5326			1:34			1.5S
	1:15			6S		1:35			1.5S
	1:16	/7.7B2.S7		3:0		1:36			LJ.Q/1.5S
	1:17	/7.7B2.%7		3:0		1:37			LJ.Q/1.5S
	1:18	/7.7B2.&7		3:0		1:38			09.5HI
	1:19	/7.7B2.&7		3:0		1:39			1.5S
	1:20	/7.9B16.8		10S		1:40			LJ.Q/1.5S
			SQDORJ.Q0.59		1:41			SQDORJ.Q0.59	
					1:42			6S	


THE INFORMATION CONTAINED HEREIN IS UNCLASSIFIED EXCEPT WHERE SHOWN OTHERWISE. DATE OF DECLASSIFICATION IS INDEFINITE.

THIS DOCUMENT CONTAINS NEITHER RECOMMENDATIONS NOR CONCLUSIONS OF THE NATIONAL BUREAU OF STANDARDS. IT IS THE PROPERTY OF THE NATIONAL BUREAU OF STANDARDS AND IS LOANED TO YOUR ORGANIZATION; IT AND ITS CONTENTS ARE TO BE RETURNED TO THE NATIONAL BUREAU OF STANDARDS.



<https://www.forkliftpdfmanuals.com/>

SH	1U6CULQJ	HQGLUQJ QU	DWXP	6LQ	DWXP/DWH	NDXQJLUBHPP QR	SHORUQJ	8KCNWURJSHW	100G&HSHW
SRZ	IR	&KDQJH IR	DWH	6LQ	DWH		.UHWW.RUVUHIHUHQVHU SJJ	'5)& 400-450	0.0B5/
ST	1	SGGHC 9.1B5 & 8.2B4 & .059-2	060615	7%	060615	\$50000.0600			
		77L00N/SGGHC 88VJmU/HOHWHHC 99DUJ/DV				+.US. 6			
							SHORUQJ	SHWVWURJSHW	
							IDPH	SHWVWURJSHW	
							:LULQJ & URVV 5HIHUHQFHV SWW	\$50001.0100	05

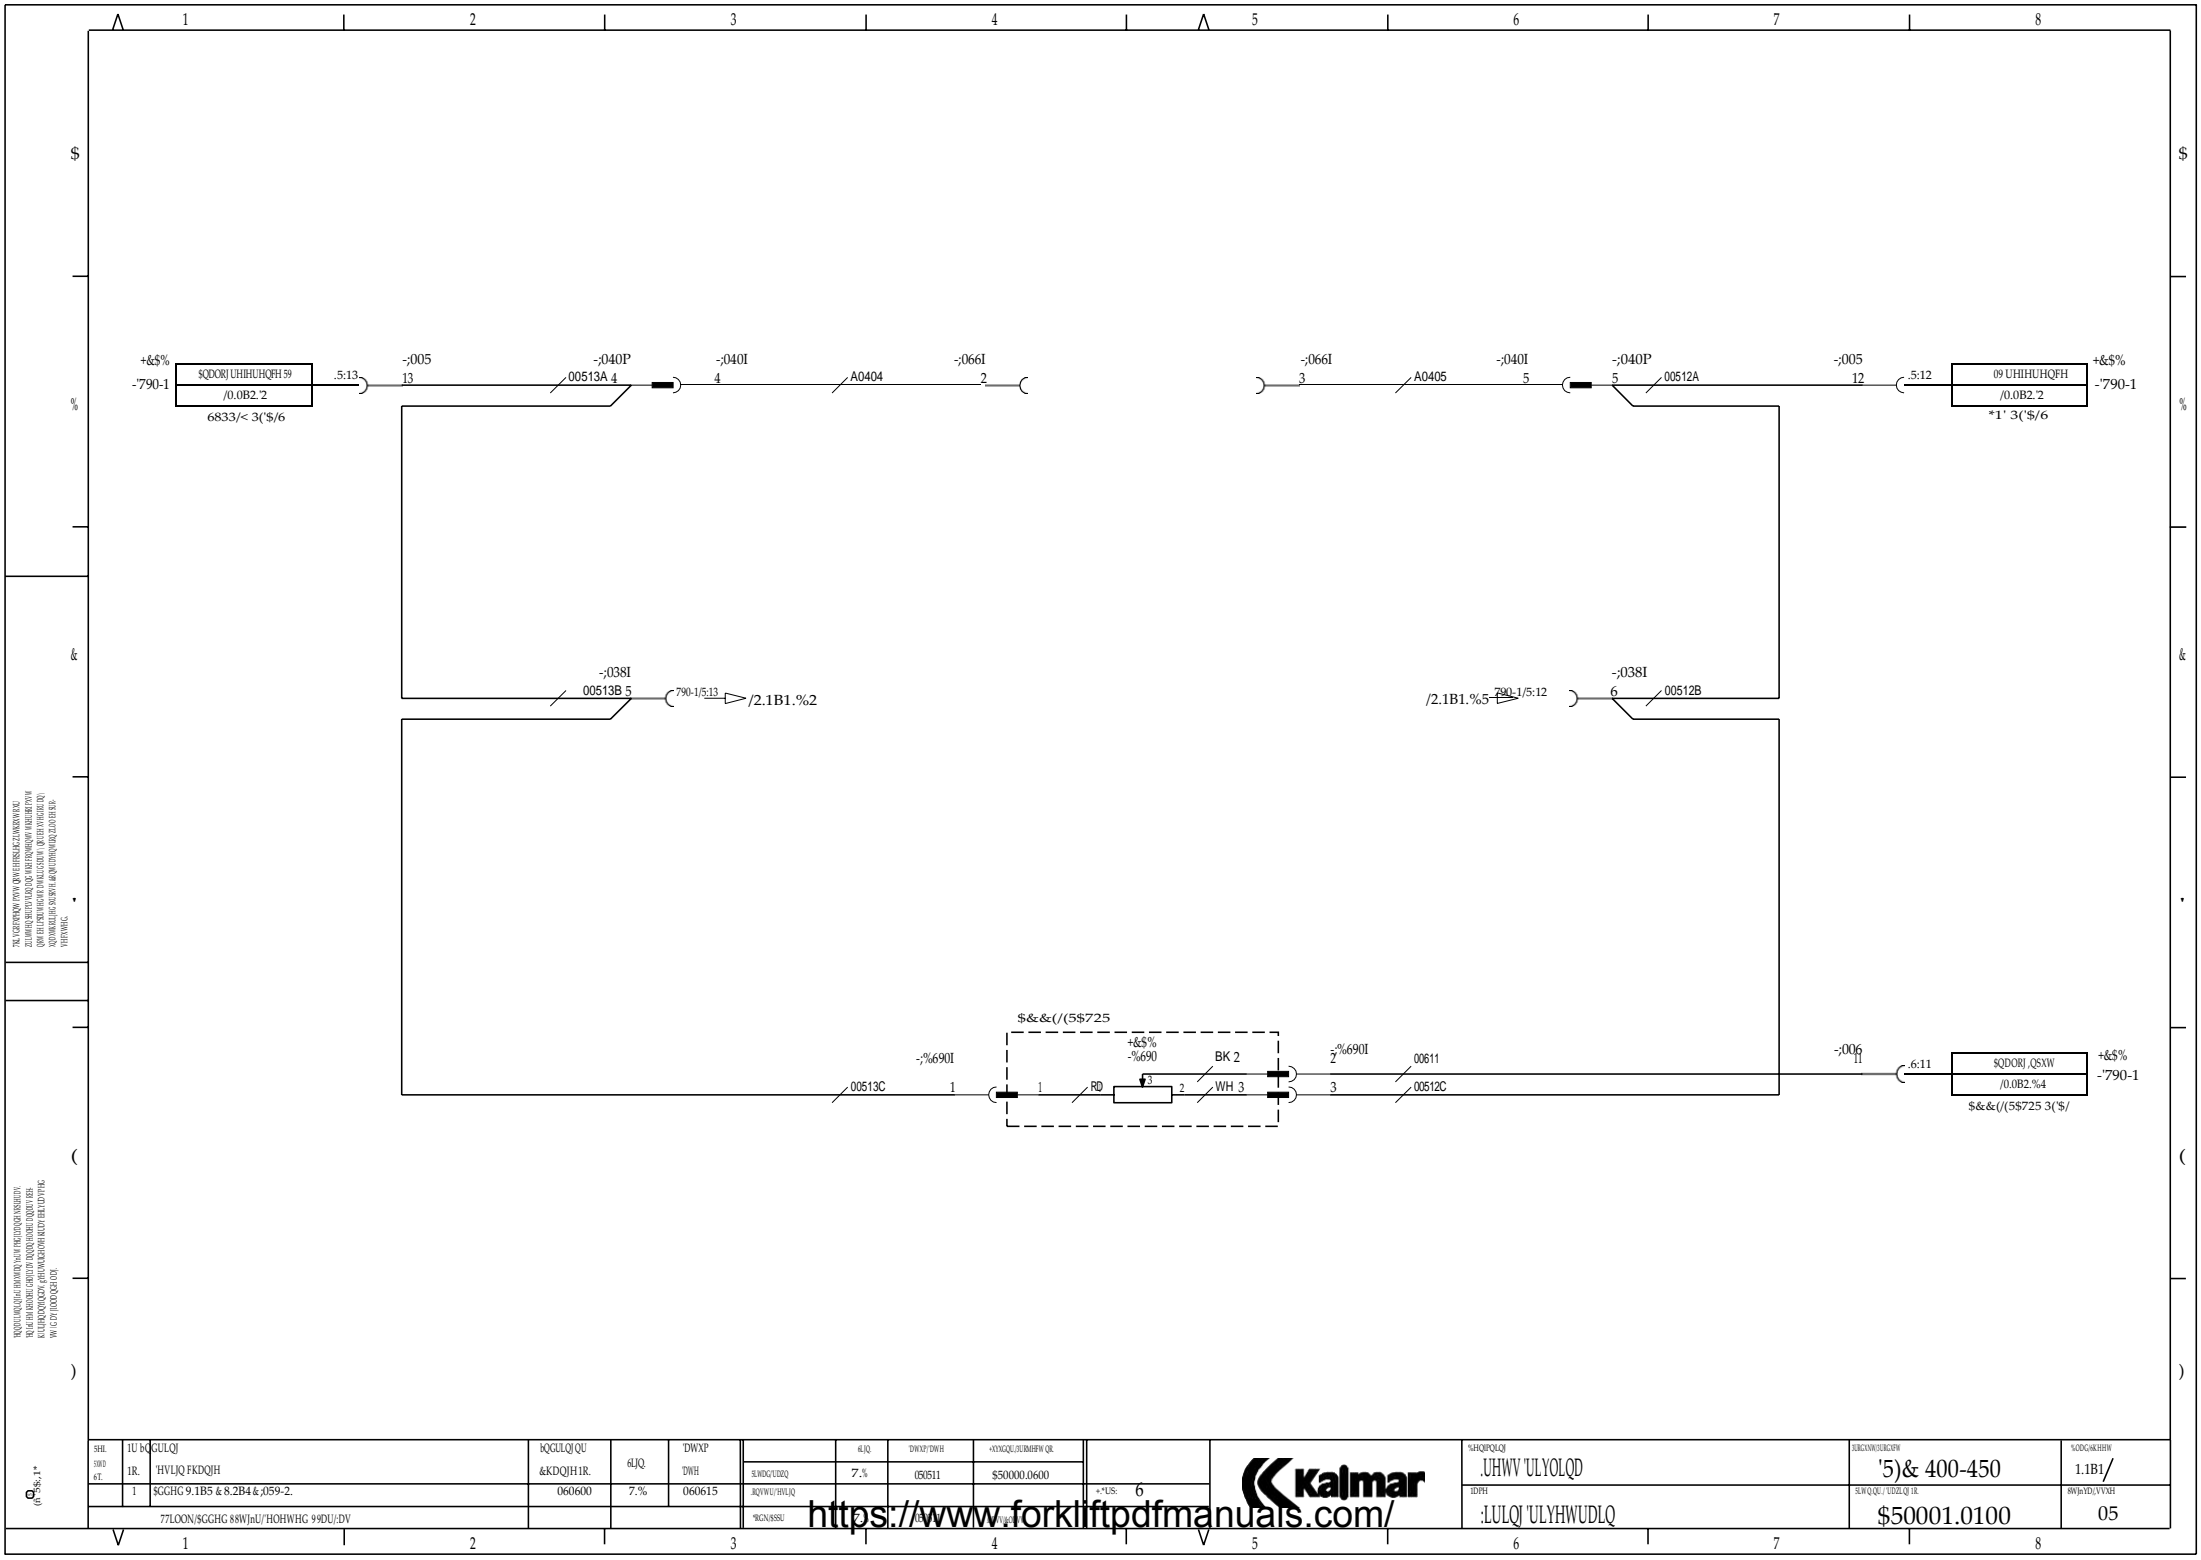


1. UH...
 2. UH...
 3. UH...
 4. UH...
 5. UH...
 6. UH...
 7. UH...
 8. UH...

1. UH...
 2. UH...
 3. UH...
 4. UH...
 5. UH...
 6. UH...
 7. UH...
 8. UH...

SH	1U K CULQJ	KQULQJ QU	DWXP	6LQ	DWXP/DWH	ADGQJLUBHPP QJ	SHORPQLJ	RECNUJRCJEW	100C&HEW
IR	HVLJQ FKDQJH	&KDQJH IR	DWH	6LQ	050511	\$50000.0600	UHWV 'ULYOLQD	'5)& 400-450	1.1B1/
1	SGGHC 9.1B5 & 8.2B4 & .059-2	060600	060615	7%			IDPH	5W/QC/ULZQ IR	5WBYD.VVXH
	77LOON/SGGHC 88VJmU/HOHWHC 99DU/DV							\$50001.0100	05



<https://www.forkliftpdfmanuals.com/>

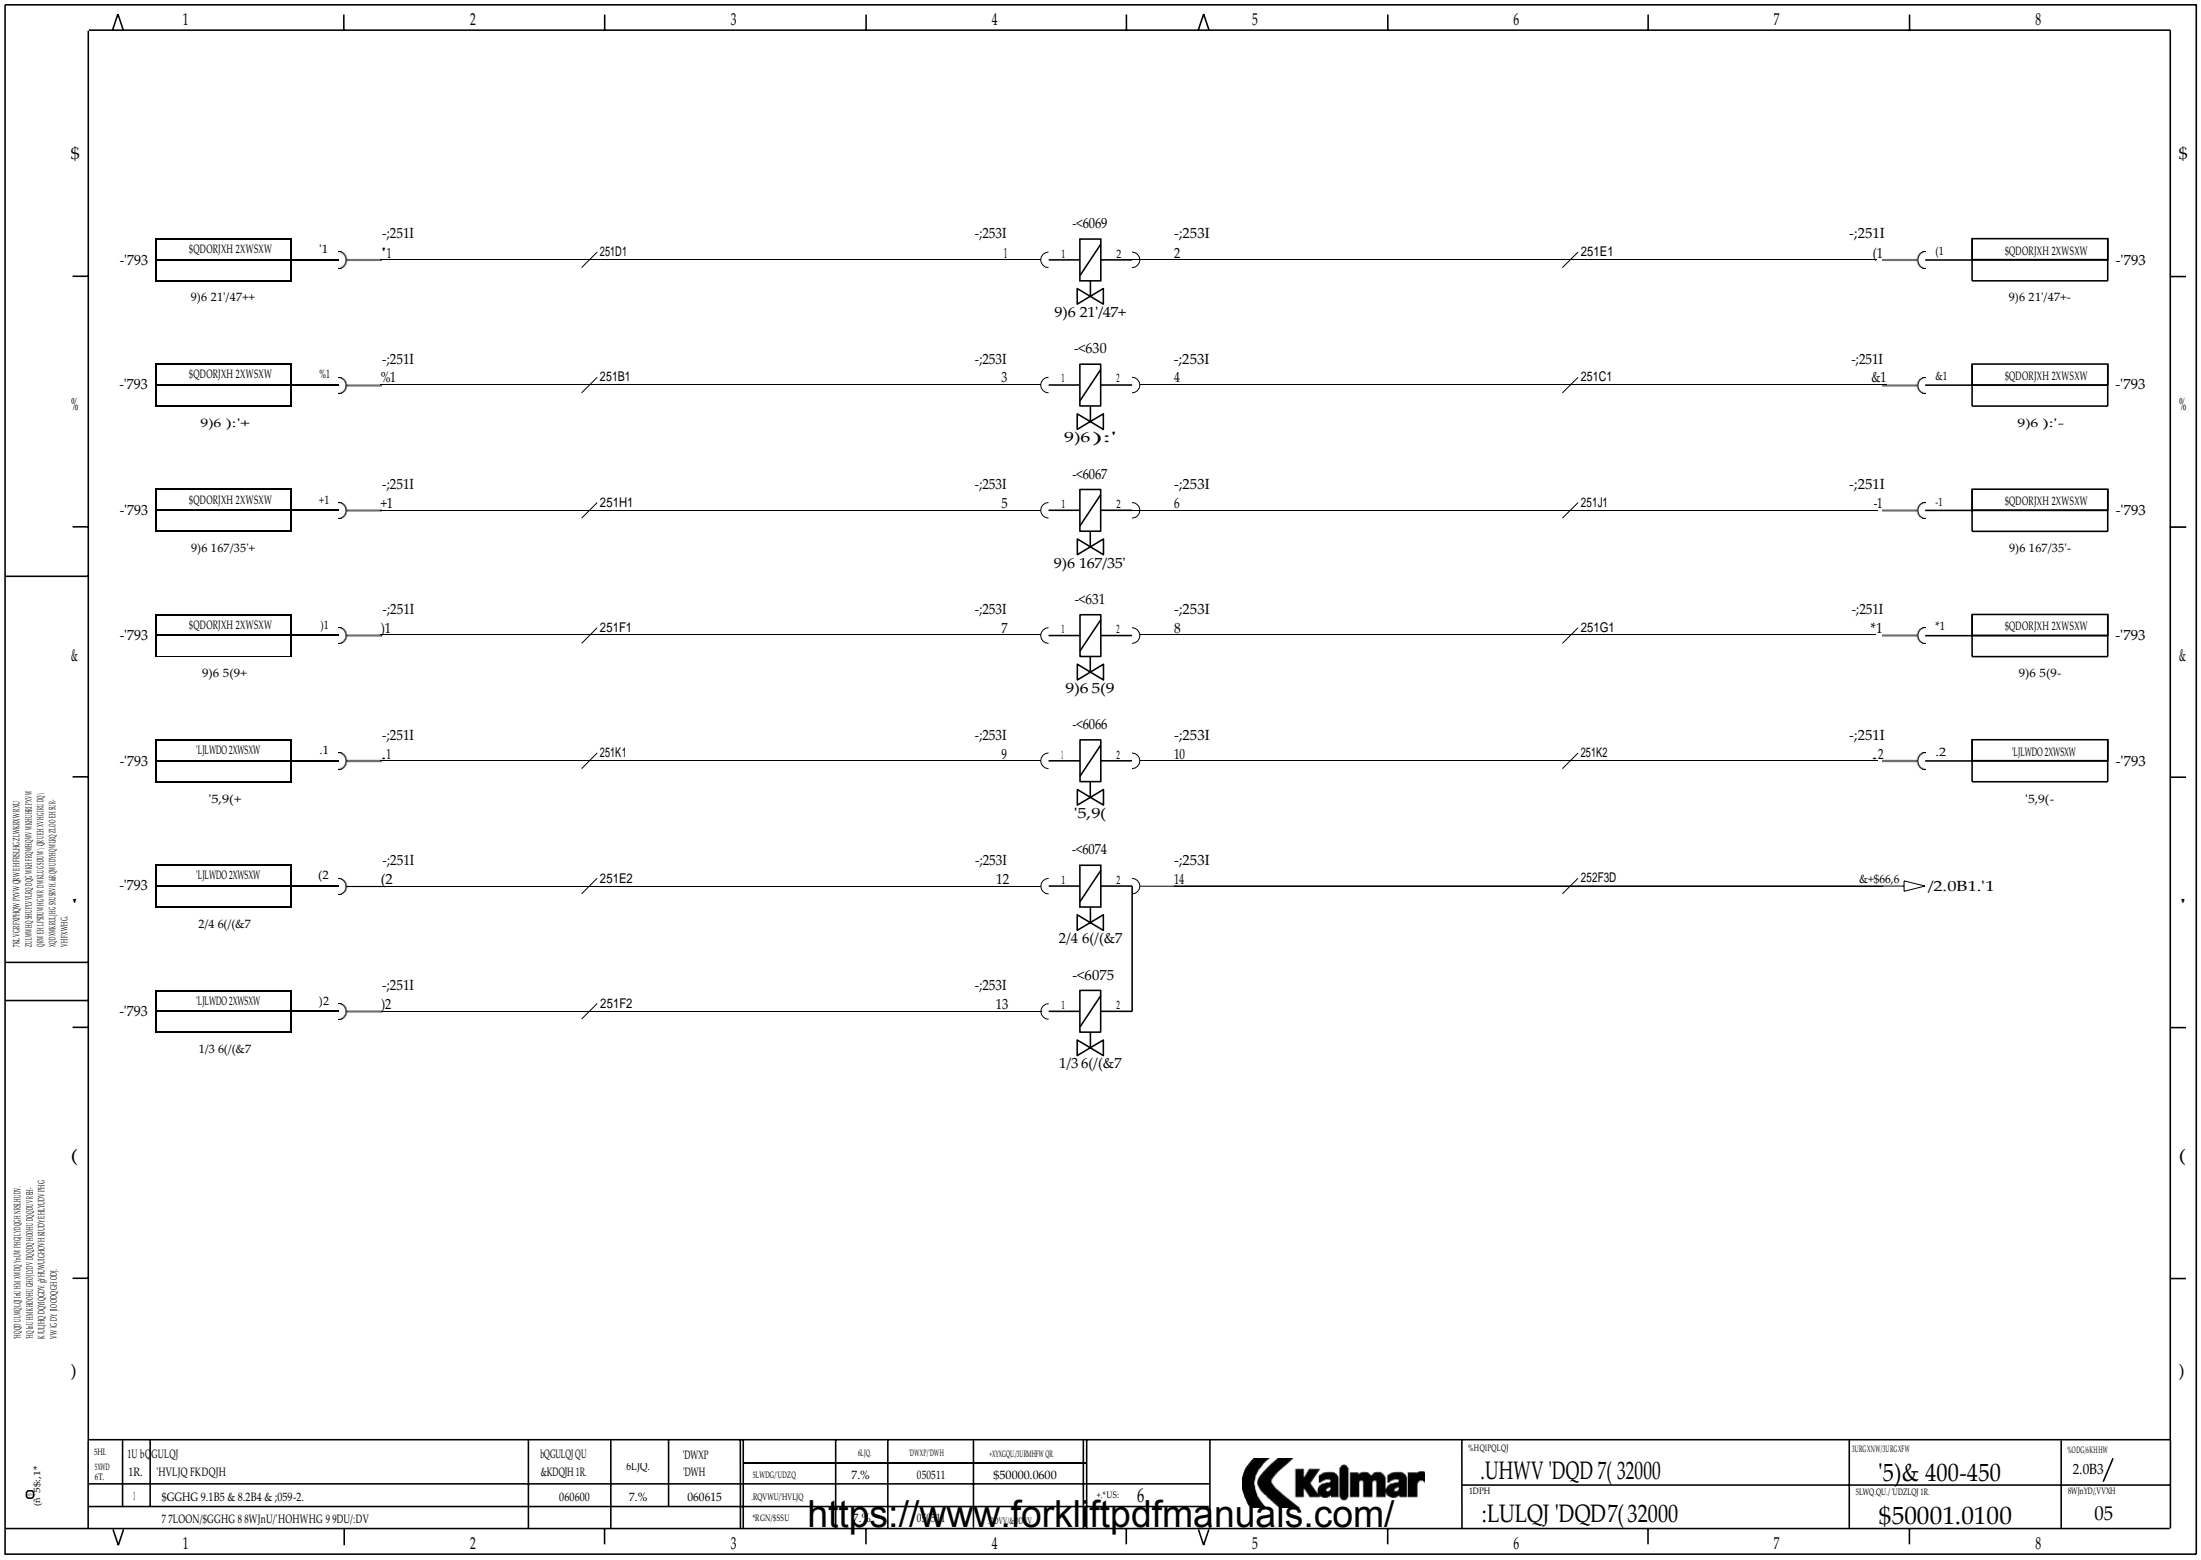

1. LULQJ 'DQD7(32000
 2. LULQJ 'DQD7(32000
 3. LULQJ 'DQD7(32000
 4. LULQJ 'DQD7(32000
 5. LULQJ 'DQD7(32000
 6. LULQJ 'DQD7(32000
 7. LULQJ 'DQD7(32000
 8. LULQJ 'DQD7(32000


1. LULQJ 'DQD7(32000
 2. LULQJ 'DQD7(32000
 3. LULQJ 'DQD7(32000
 4. LULQJ 'DQD7(32000
 5. LULQJ 'DQD7(32000
 6. LULQJ 'DQD7(32000
 7. LULQJ 'DQD7(32000
 8. LULQJ 'DQD7(32000

SHL	1U b	CULQJ	1QQLUQJ QU	6LJQ	DWXP	8LQ	DWXP/DWH	4XQQLUJLHSHV QL	4HQPQLQJ	RUCXN/ULJG/SH	SODGKREH
SWD	IR	HVLJQ FKDJH	&KDJH IR		DWH		050511	\$50000.0600	.UHWV 'DQD7(32000	'5)& 400-450	2.0B3/
1		SGGHG 9.1B5 & 8.2B4 & 1059-2.	060600	7.7%	060615				1DPR	SLWQQU/ULJZQJ IR	SHWBD/VVXH
		77L00N/SGGHG 8.8WJNU/HOHWHG 9.9DUJ/DV							:LULQJ 'DQD7(32000	\$50001.0100	05



<https://www.forkliftpdfmanuals.com/>


THE INFORMATION CONTAINED HEREIN IS THE PROPERTY OF KALMAR CORPORATION. IT IS TO BE USED FOR THE EXCLUSIVE USE OF THE USER AND IS NOT TO BE REPRODUCED, COPIED, OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM.

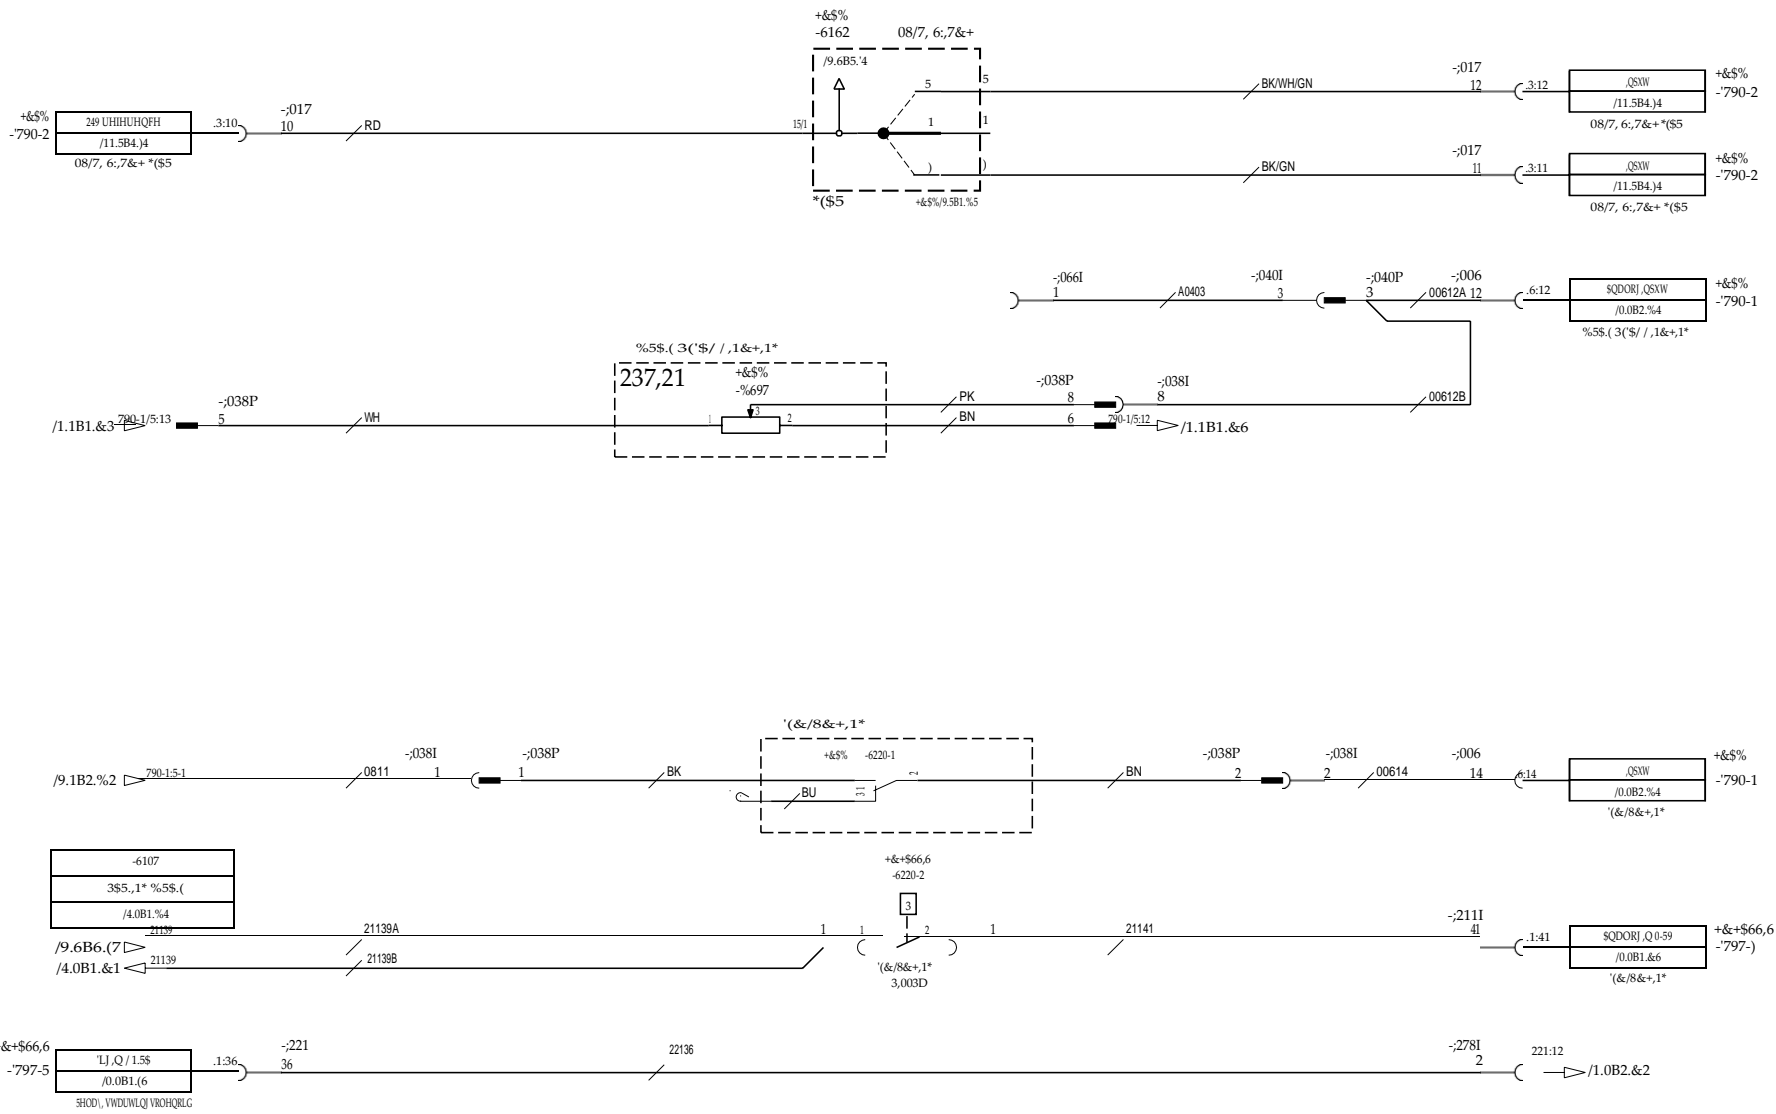

SHI ST.	IR.	CULQJ HVLQJ FKDJFH	IQQLQJ QU &KDQJH IR	6LJQ.	DWXP DWH	6LQ.	DWXP/DWH	ADYQQLJURSHW QR	SHQPNQI .UHWV 'ULYOLQD	ILUCNWDURSHW '5)& 400-450	%DCCARHWH 2.1B1/
1		SGGHG 9.1B5 & 8.2B4 & .059-2.	060600	7.0%	060615		030511	\$50000.0600	LDPEI :LULQJ'ULYHWUDLQ	SHWQQL/UDZLQJ IR \$50001.0100	SHWUDLVVXH 05
77L00N/SGGHG 8 8WJNU/HOHWHWG 9 9DU/DV											



<https://www.forkliftpdfmanuals.com/>

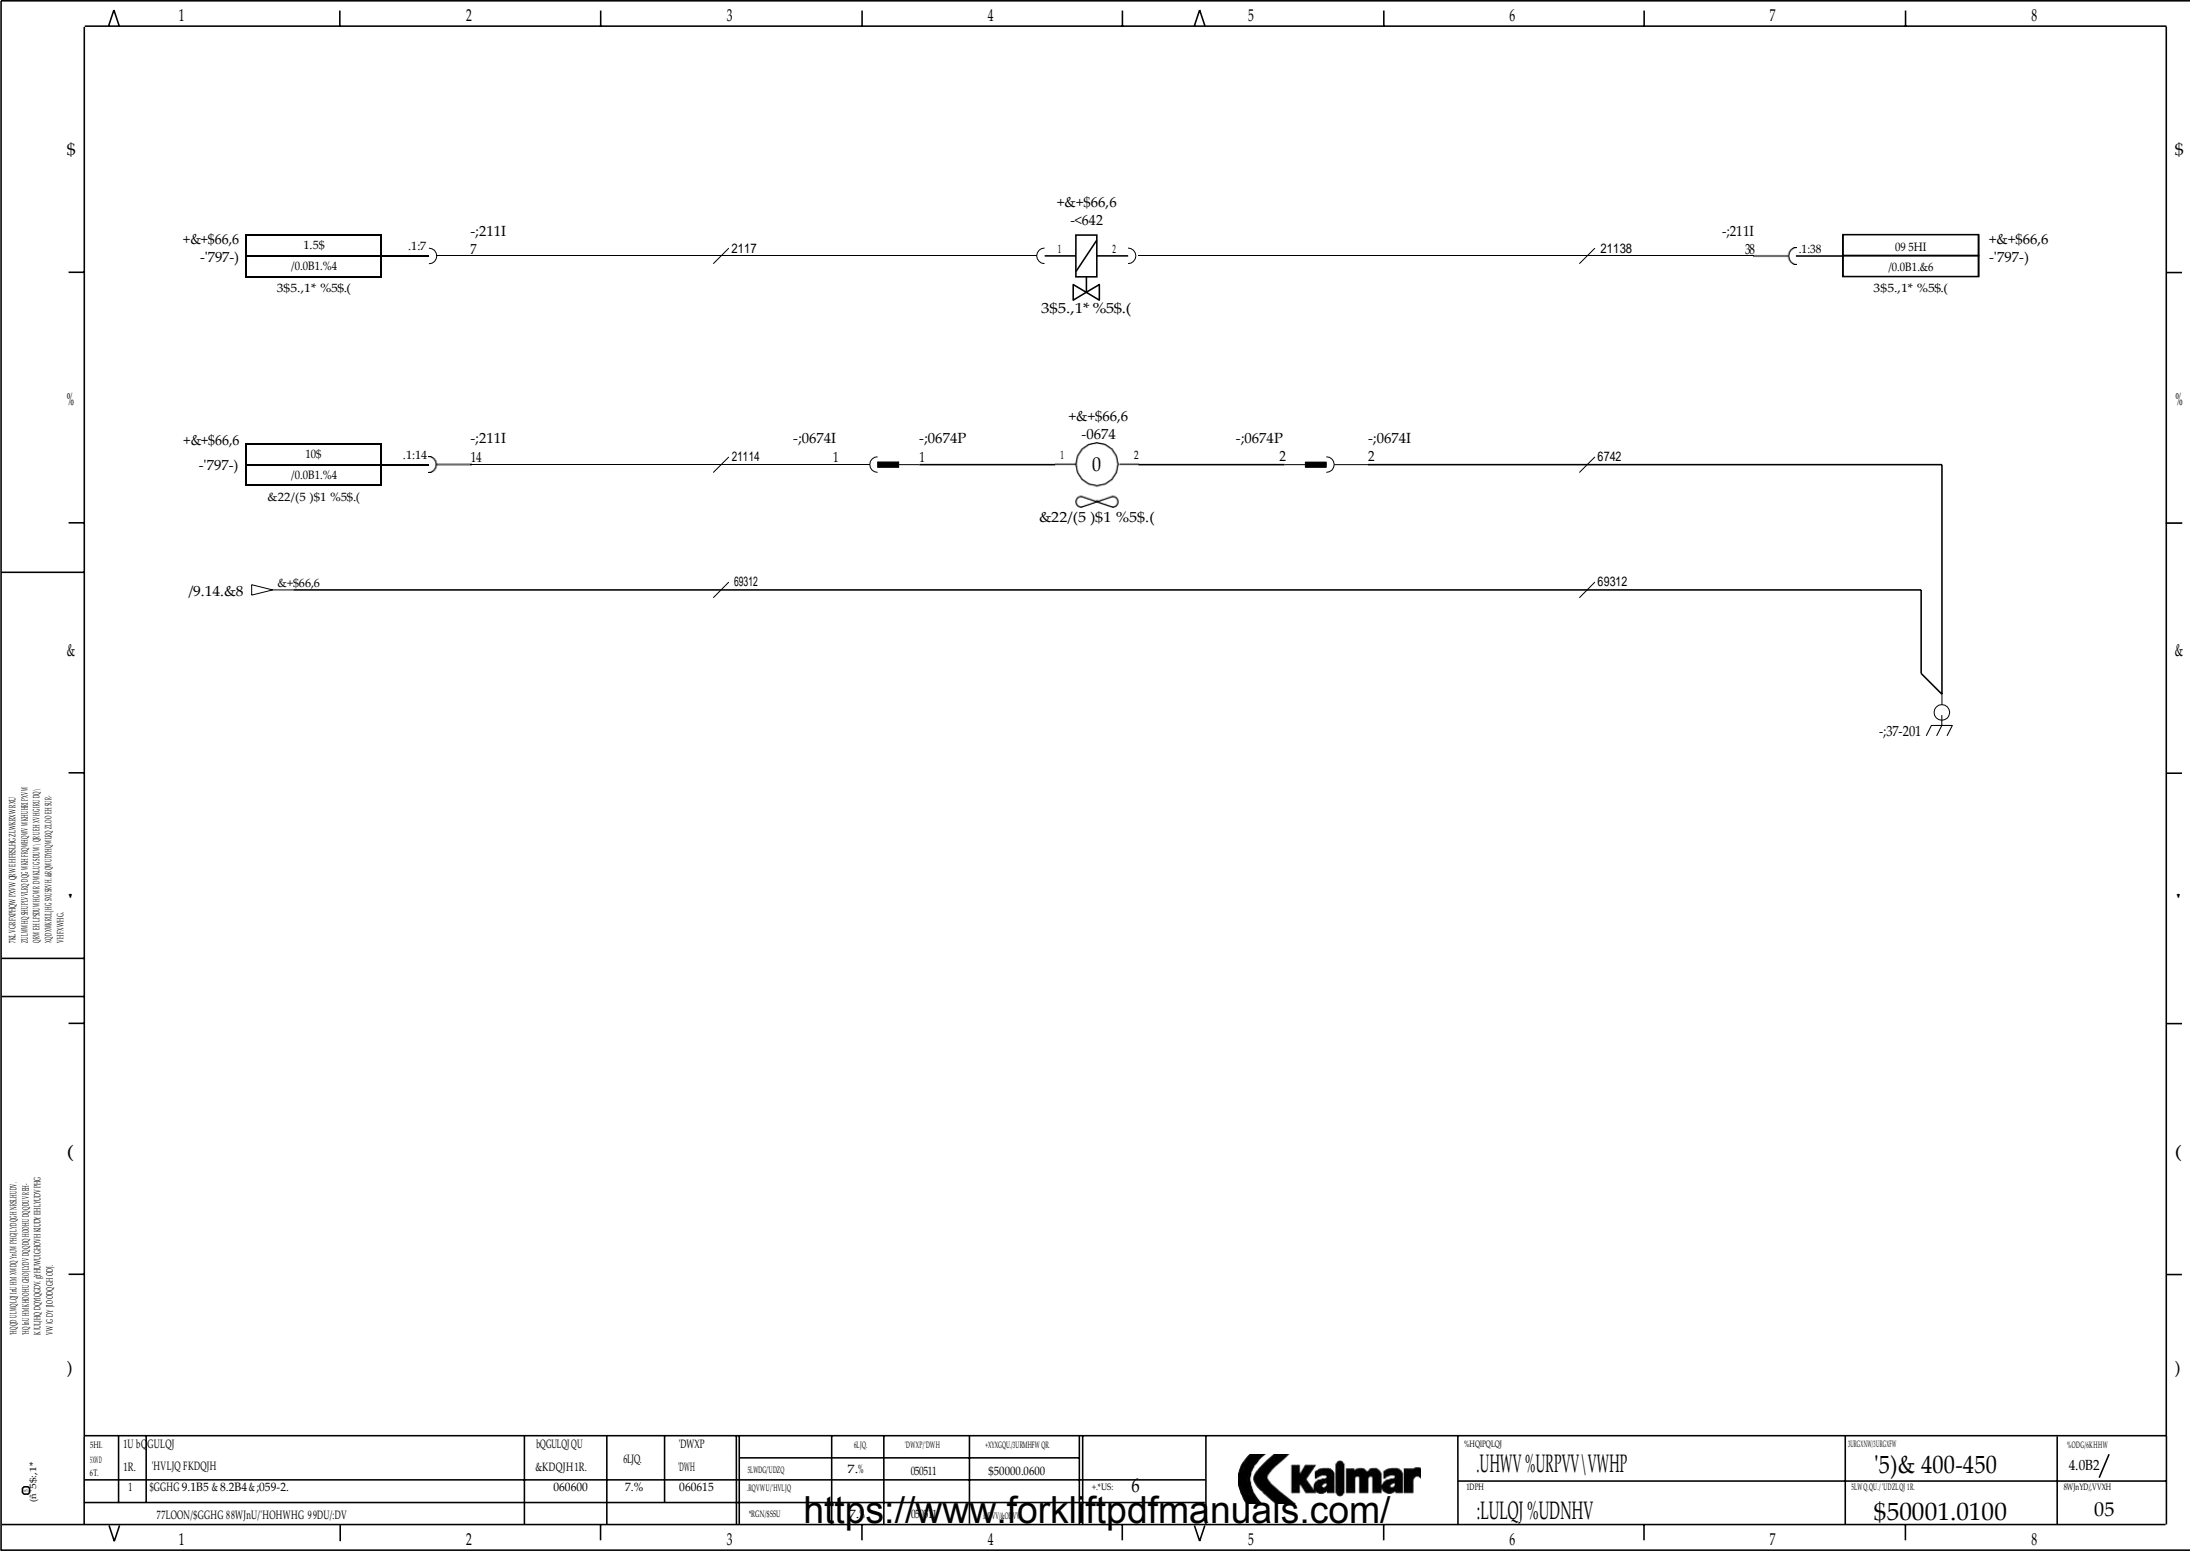


1. 2. 3. 4. 5. 6. 7. 8. 9. 10. 11. 12. 13. 14. 15. 16. 17. 18. 19. 20. 21. 22. 23. 24. 25. 26. 27. 28. 29. 30. 31. 32. 33. 34. 35. 36. 37. 38. 39. 40. 41. 42. 43. 44. 45. 46. 47. 48. 49. 50. 51. 52. 53. 54. 55. 56. 57. 58. 59. 60. 61. 62. 63. 64. 65. 66. 67. 68. 69. 70. 71. 72. 73. 74. 75. 76. 77. 78. 79. 80. 81. 82. 83. 84. 85. 86. 87. 88. 89. 90. 91. 92. 93. 94. 95. 96. 97. 98. 99. 100.

1. 2. 3. 4. 5. 6. 7. 8. 9. 10. 11. 12. 13. 14. 15. 16. 17. 18. 19. 20. 21. 22. 23. 24. 25. 26. 27. 28. 29. 30. 31. 32. 33. 34. 35. 36. 37. 38. 39. 40. 41. 42. 43. 44. 45. 46. 47. 48. 49. 50. 51. 52. 53. 54. 55. 56. 57. 58. 59. 60. 61. 62. 63. 64. 65. 66. 67. 68. 69. 70. 71. 72. 73. 74. 75. 76. 77. 78. 79. 80. 81. 82. 83. 84. 85. 86. 87. 88. 89. 90. 91. 92. 93. 94. 95. 96. 97. 98. 99. 100.

| | | | | | | | | | | | |
|----|-------------------------------------|-----------|------|--------|------|----------|-----------------|----------|--------------------|------------------|------------|
| SH | 1U K CULQJ | KQULQJ QU | 6LQJ | DWXP | 6LQJ | DWXP/DWH | -XDCQJLUBHPP QJ | | *HOPRQJQJ | *KCNWJRCJRW | *QDCNRIHW |
| IR | HVLQJ FKDQJH | &KDQJH IR | | DWH | 7.% | 050511 | \$50000.0600 | | .UHWV %URPVV\ VWHP | '5)& 400-450 | 4.0B2/ |
| 1 | SCGHC 9.1B5 & 8.2B4 & .059-2. | 060600 | 7.% | 060615 | | | | +*L.S. 6 | IDPH | SW/QCQJLUBZQJ IR | SWWYD.VVXH |
| | 77L00N/SCGHC 88WJmL/HOHWHC 99DUJ/DV | | | | | | | | :LULQJ %UDNHV | \$50001.0100 | 05 |



<https://www.forkliftpdfmanuals.com/>

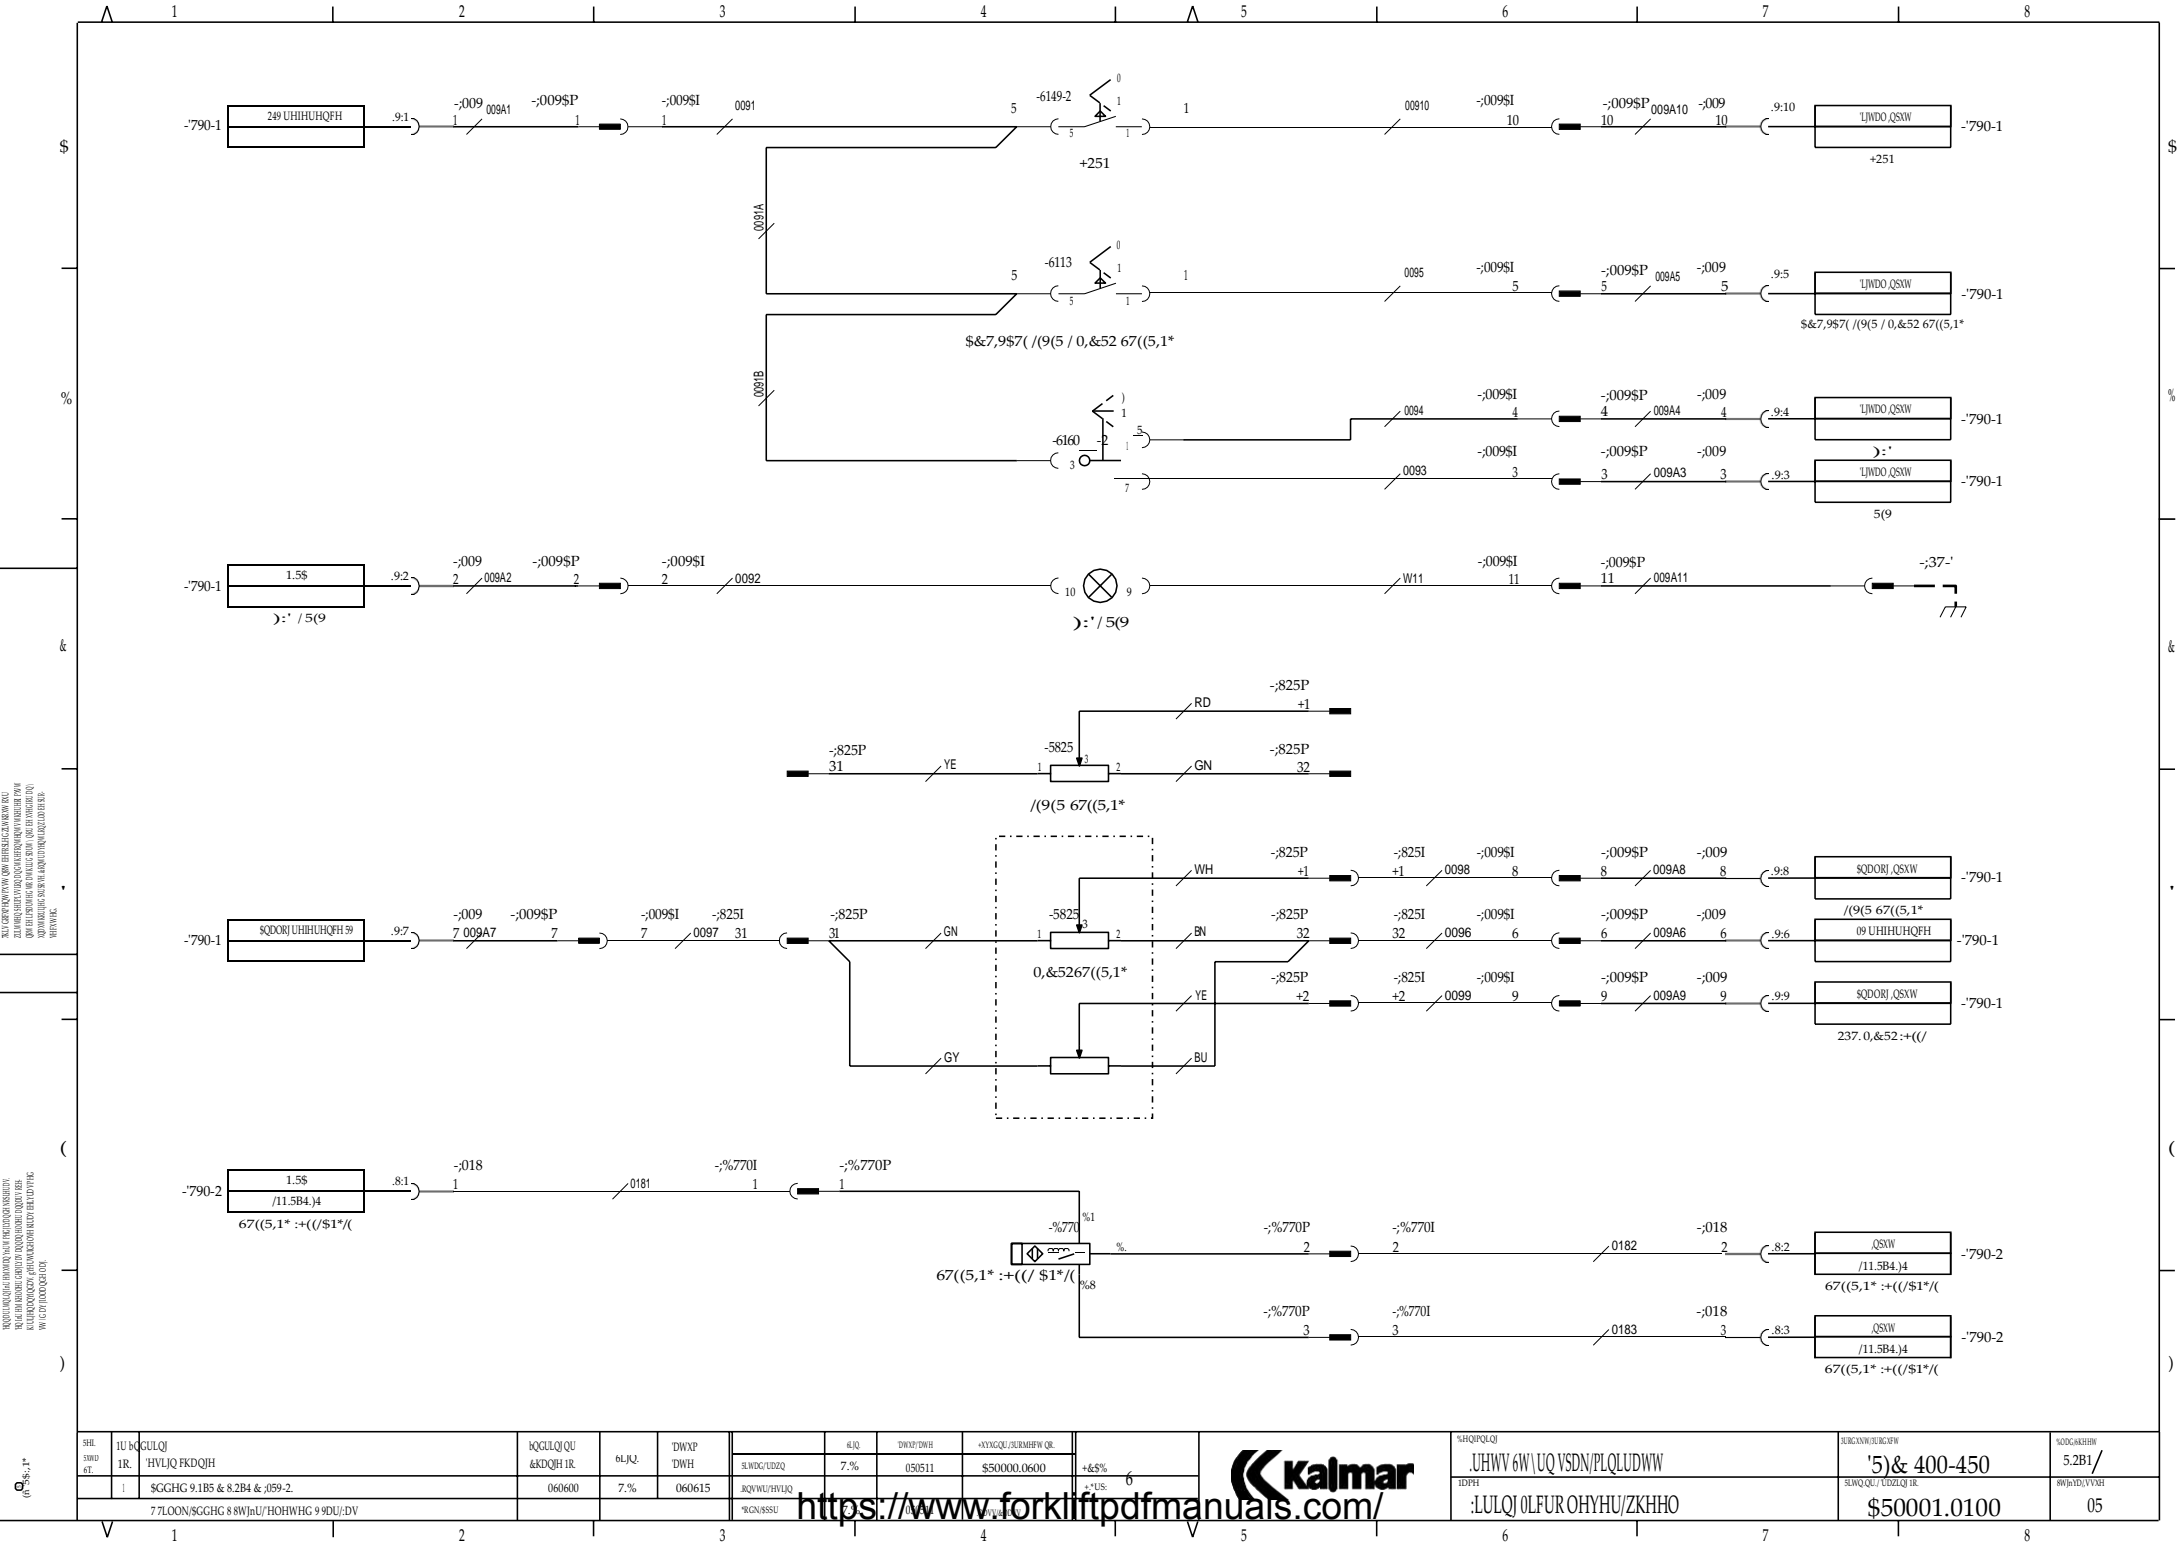


1. 2. 3. 4. 5. 6. 7. 8. 9. 10. 11. 12. 13. 14. 15. 16. 17. 18. 19. 20. 21. 22. 23. 24. 25. 26. 27. 28. 29. 30. 31. 32. 33. 34. 35. 36. 37. 38. 39. 40. 41. 42. 43. 44. 45. 46. 47. 48. 49. 50. 51. 52. 53. 54. 55. 56. 57. 58. 59. 60. 61. 62. 63. 64. 65. 66. 67. 68. 69. 70. 71. 72. 73. 74. 75. 76. 77. 78. 79. 80. 81. 82. 83. 84. 85. 86. 87. 88. 89. 90. 91. 92. 93. 94. 95. 96. 97. 98. 99. 100. 101. 102. 103. 104. 105. 106. 107. 108. 109. 110. 111. 112. 113. 114. 115. 116. 117. 118. 119. 120. 121. 122. 123. 124. 125. 126. 127. 128. 129. 130. 131. 132. 133. 134. 135. 136. 137. 138. 139. 140. 141. 142. 143. 144. 145. 146. 147. 148. 149. 150. 151. 152. 153. 154. 155. 156. 157. 158. 159. 160. 161. 162. 163. 164. 165. 166. 167. 168. 169. 170. 171. 172. 173. 174. 175. 176. 177. 178. 179. 180. 181. 182. 183. 184. 185. 186. 187. 188. 189. 190. 191. 192. 193. 194. 195. 196. 197. 198. 199. 200. 201. 202. 203. 204. 205. 206. 207. 208. 209. 210. 211. 212. 213. 214. 215. 216. 217. 218. 219. 220. 221. 222. 223. 224. 225. 226. 227. 228. 229. 230. 231. 232. 233. 234. 235. 236. 237. 238. 239. 240. 241. 242. 243. 244. 245. 246. 247. 248. 249. 250. 251. 252. 253. 254. 255. 256. 257. 258. 259. 260. 261. 262. 263. 264. 265. 266. 267. 268. 269. 270. 271. 272. 273. 274. 275. 276. 277. 278. 279. 280. 281. 282. 283. 284. 285. 286. 287. 288. 289. 290. 291. 292. 293. 294. 295. 296. 297. 298. 299. 300. 301. 302. 303. 304. 305. 306. 307. 308. 309. 310. 311. 312. 313. 314. 315. 316. 317. 318. 319. 320. 321. 322. 323. 324. 325. 326. 327. 328. 329. 330. 331. 332. 333. 334. 335. 336. 337. 338. 339. 340. 341. 342. 343. 344. 345. 346. 347. 348. 349. 350. 351. 352. 353. 354. 355. 356. 357. 358. 359. 360. 361. 362. 363. 364. 365. 366. 367. 368. 369. 370. 371. 372. 373. 374. 375. 376. 377. 378. 379. 380. 381. 382. 383. 384. 385. 386. 387. 388. 389. 390. 391. 392. 393. 394. 395. 396. 397. 398. 399. 400. 401. 402. 403. 404. 405. 406. 407. 408. 409. 410. 411. 412. 413. 414. 415. 416. 417. 418. 419. 420. 421. 422. 423. 424. 425. 426. 427. 428. 429. 430. 431. 432. 433. 434. 435. 436. 437. 438. 439. 440. 441. 442. 443. 444. 445. 446. 447. 448. 449. 450. 451. 452. 453. 454. 455. 456. 457. 458. 459. 460. 461. 462. 463. 464. 465. 466. 467. 468. 469. 470. 471. 472. 473. 474. 475. 476. 477. 478. 479. 480. 481. 482. 483. 484. 485. 486. 487. 488. 489. 490. 491. 492. 493. 494. 495. 496. 497. 498. 499. 500. 501. 502. 503. 504. 505. 506. 507. 508. 509. 510. 511. 512. 513. 514. 515. 516. 517. 518. 519. 520. 521. 522. 523. 524. 525. 526. 527. 528. 529. 530. 531. 532. 533. 534. 535. 536. 537. 538. 539. 540. 541. 542. 543. 544. 545. 546. 547. 548. 549. 550. 551. 552. 553. 554. 555. 556. 557. 558. 559. 560. 561. 562. 563. 564. 565. 566. 567. 568. 569. 570. 571. 572. 573. 574. 575. 576. 577. 578. 579. 580. 581. 582. 583. 584. 585. 586. 587. 588. 589. 590. 591. 592. 593. 594. 595. 596. 597. 598. 599. 600. 601. 602. 603. 604. 605. 606. 607. 608. 609. 610. 611. 612. 613. 614. 615. 616. 617. 618. 619. 620. 621. 622. 623. 624. 625. 626. 627. 628. 629. 630. 631. 632. 633. 634. 635. 636. 637. 638. 639. 640. 641. 642. 643. 644. 645. 646. 647. 648. 649. 650. 651. 652. 653. 654. 655. 656. 657. 658. 659. 660. 661. 662. 663. 664. 665. 666. 667. 668. 669. 670. 671. 672. 673. 674. 675. 676. 677. 678. 679. 680. 681. 682. 683. 684. 685. 686. 687. 688. 689. 690. 691. 692. 693. 694. 695. 696. 697. 698. 699. 700. 701. 702. 703. 704. 705. 706. 707. 708. 709. 710. 711. 712. 713. 714. 715. 716. 717. 718. 719. 720. 721. 722. 723. 724. 725. 726. 727. 728. 729. 730. 731. 732. 733. 734. 735. 736. 737. 738. 739. 740. 741. 742. 743. 744. 745. 746. 747. 748. 749. 750. 751. 752. 753. 754. 755. 756. 757. 758. 759. 760. 761. 762. 763. 764. 765. 766. 767. 768. 769. 770. 771. 772. 773. 774. 775. 776. 777. 778. 779. 780. 781. 782. 783. 784. 785. 786. 787. 788. 789. 790. 791. 792. 793. 794. 795. 796. 797. 798. 799. 800. 801. 802. 803. 804. 805. 806. 807. 808. 809. 810. 811. 812. 813. 814. 815. 816. 817. 818. 819. 820. 821. 822. 823. 824. 825. 826. 827. 828. 829. 830. 831. 832. 833. 834. 835. 836. 837. 838. 839. 840. 841. 842. 843. 844. 845. 846. 847. 848. 849. 850. 851. 852. 853. 854. 855. 856. 857. 858. 859. 860. 861. 862. 863. 864. 865. 866. 867. 868. 869. 870. 871. 872. 873. 874. 875. 876. 877. 878. 879. 880. 881. 882. 883. 884. 885. 886. 887. 888. 889. 890. 891. 892. 893. 894. 895. 896. 897. 898. 899. 900. 901. 902. 903. 904. 905. 906. 907. 908. 909. 910. 911. 912. 913. 914. 915. 916. 917. 918. 919. 920. 921. 922. 923. 924. 925. 926. 927. 928. 929. 930. 931. 932. 933. 934. 935. 936. 937. 938. 939. 940. 941. 942. 943. 944. 945. 946. 947. 948. 949. 950. 951. 952. 953. 954. 955. 956. 957. 958. 959. 960. 961. 962. 963. 964. 965. 966. 967. 968. 969. 970. 971. 972. 973. 974. 975. 976. 977. 978. 979. 980. 981. 982. 983. 984. 985. 986. 987. 988. 989. 990. 991. 992. 993. 994. 995. 996. 997. 998. 999. 1000.

| | | | | | | | | | | | |
|------|------|--------------------------------------|-----------|------|--------|------|--------|-----------------|-----------------------------|--------------|----------|
| SHL | 1U b | CULQJ | 1QGLUQU | 6LJQ | DWXP | 4LQ | DWXP | 4XQCULURMBFW QR | SHQPOLQJ | RUCNURJUCRWB | SOCGRBHW |
| 3WFO | 1R. | HVLJQ | &KDJQH IR | | DWH | 7.7% | (5)511 | \$50000.0600 | .LJHW 6W / UQ VSDN/PLQLUDWW | '5)& 400-450 | 5.2B1/ |
| AT | 1 | SGGHG 9.1B5 & 8.2B4 & .059-2. | 060600 | 7.7% | 060615 | | | +4.5% | 6 | 6 | 6 |
| | | 77L00N/SGGHG 8 8WJNU/HOHWHC 9 9DU/DV | | | | | | +1.5% | | | |
| | | | | | | | | | .LULQJ ULFUR OHYHU/ZKHHO | \$50001.0100 | 05 |



<https://www.forkliftpdfmanuals.com/>

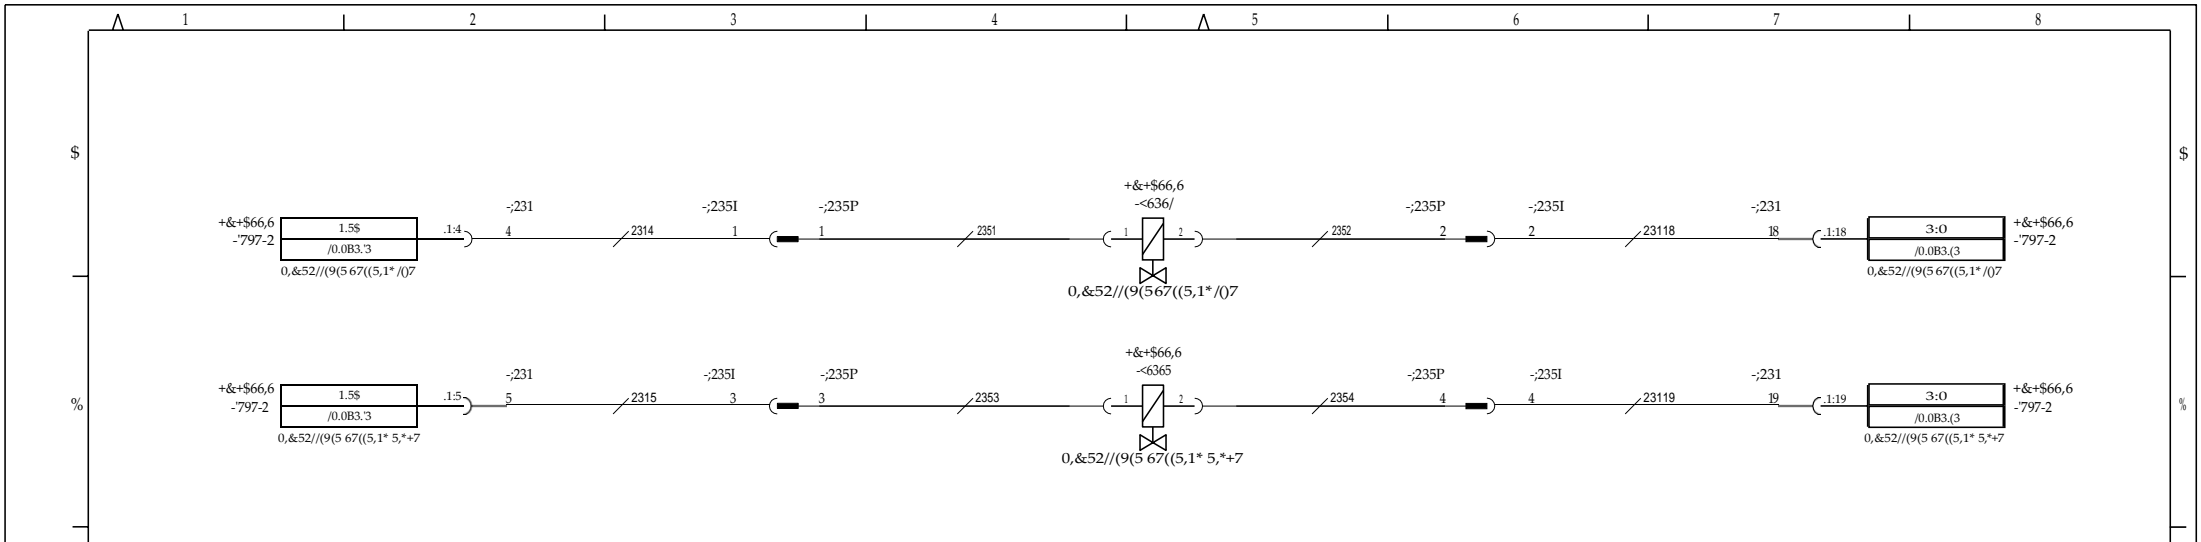


ALL INFORMATION CONTAINED HEREIN IS UNCLASSIFIED EXCEPT WHERE SHOWN OTHERWISE. THIS DOCUMENT IS THE PROPERTY OF KALMAR AND IS LOANED TO YOU BY KALMAR. IT IS TO BE USED ONLY FOR THE PURPOSES SPECIFIED IN THE REQUESTING AGENCY'S REQUEST. IT IS NOT TO BE REPRODUCED, COPIED, OR DISSEMINATED IN ANY MANNER WITHOUT THE WRITTEN PERMISSION OF KALMAR.

| | | | | | | | | | |
|----|-------------------------------------|-----------|--------|-----|----------|-----------------|---------|---------------------------|--------------|
| SH | 1U K CULQJ | KQULQJ QU | DWXP | 6LQ | DWXP/DWH | <DQZLURJHFFV QZ | | *HOPQLQJ | 5ODGRHWH |
| IR | HVLQJ FKDQJH | &KDQJH IR | DWH | 7% | 050511 | \$50000.0600 | | .UHWV 6W\UQ VSDN/PLQLUDWV | '5)& 400-450 |
| 1 | SGGHC 9.1B5 & 8.2B4 & .059-2 | 060600 | 060615 | 7% | | | | 5.2B2/ | 5.2B2/ |
| | 77LOON/SGGHC 88VJmU/HOHWHC 99DUJ/DV | | | | | | *ULS. 6 | :LULQJ 0LFUR OHYHU/ZKHHO | \$50001.0100 |
| | | | | | | | | | 05 |



<https://www.forkliftpdfmanuals.com/>

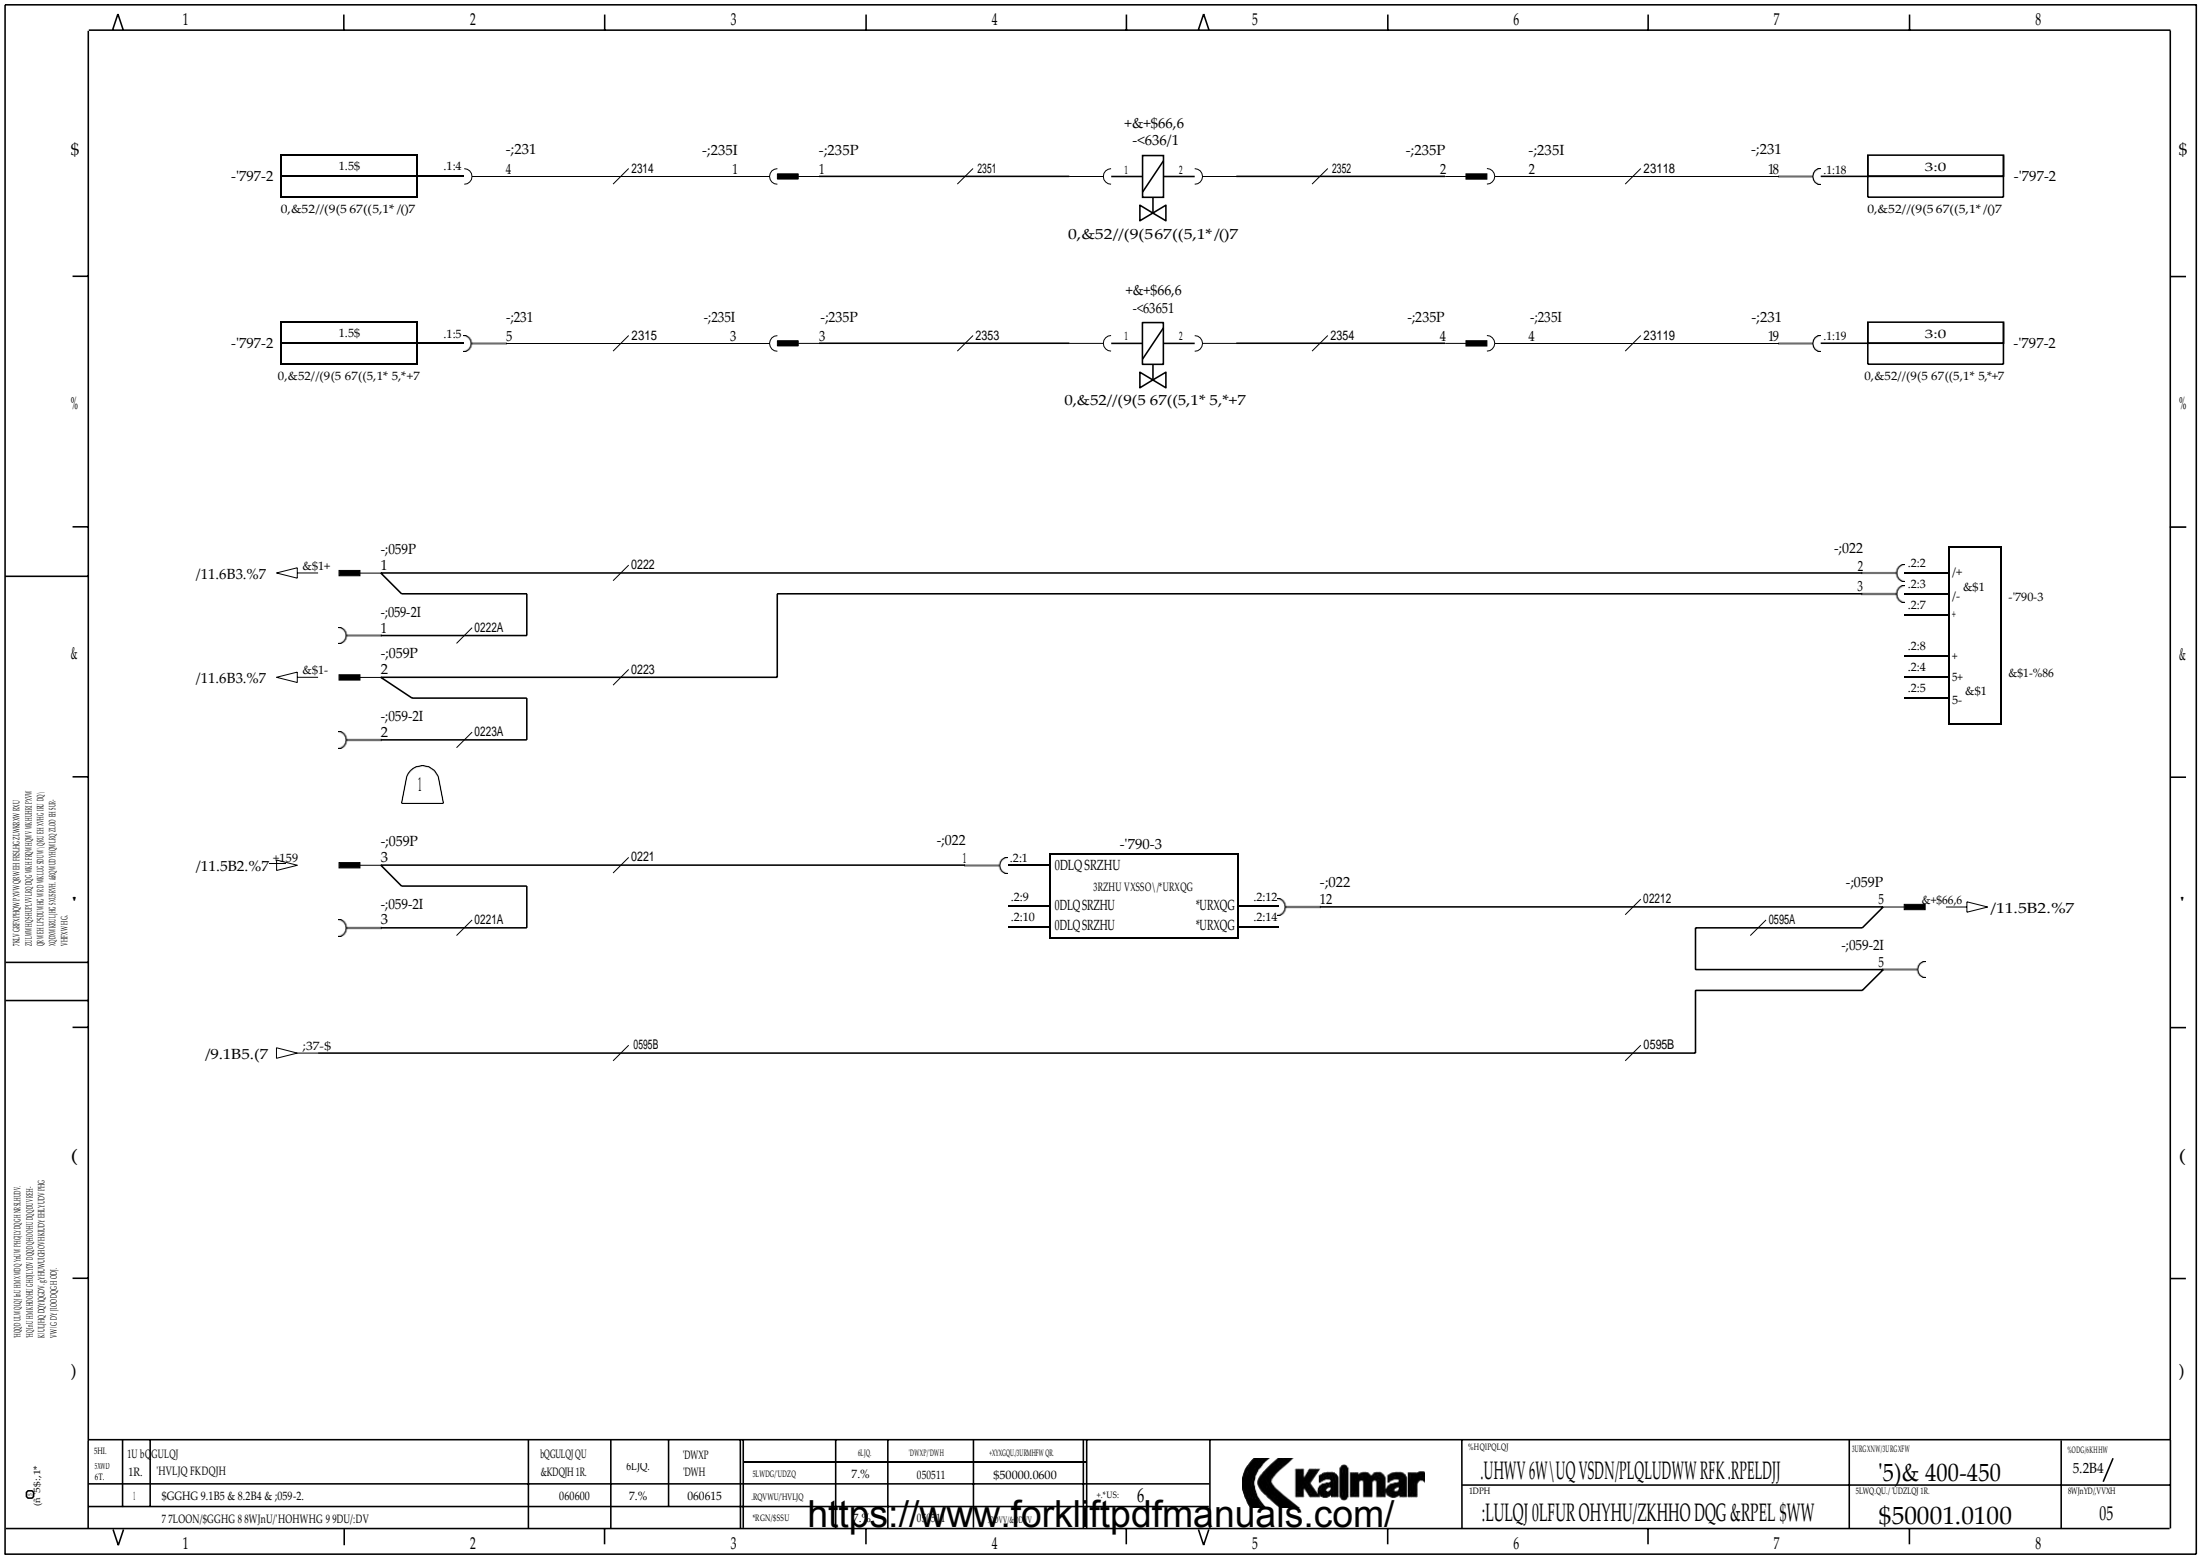

1. ДИАГРАММА ПОСЛЕДОВАТЕЛЬНОСТИ РАБОТЫ
 2. ДИАГРАММА ПОСЛЕДОВАТЕЛЬНОСТИ РАБОТЫ
 3. ДИАГРАММА ПОСЛЕДОВАТЕЛЬНОСТИ РАБОТЫ
 4. ДИАГРАММА ПОСЛЕДОВАТЕЛЬНОСТИ РАБОТЫ
 5. ДИАГРАММА ПОСЛЕДОВАТЕЛЬНОСТИ РАБОТЫ
 6. ДИАГРАММА ПОСЛЕДОВАТЕЛЬНОСТИ РАБОТЫ
 7. ДИАГРАММА ПОСЛЕДОВАТЕЛЬНОСТИ РАБОТЫ
 8. ДИАГРАММА ПОСЛЕДОВАТЕЛЬНОСТИ РАБОТЫ


1. ДИАГРАММА ПОСЛЕДОВАТЕЛЬНОСТИ РАБОТЫ
 2. ДИАГРАММА ПОСЛЕДОВАТЕЛЬНОСТИ РАБОТЫ
 3. ДИАГРАММА ПОСЛЕДОВАТЕЛЬНОСТИ РАБОТЫ
 4. ДИАГРАММА ПОСЛЕДОВАТЕЛЬНОСТИ РАБОТЫ
 5. ДИАГРАММА ПОСЛЕДОВАТЕЛЬНОСТИ РАБОТЫ
 6. ДИАГРАММА ПОСЛЕДОВАТЕЛЬНОСТИ РАБОТЫ
 7. ДИАГРАММА ПОСЛЕДОВАТЕЛЬНОСТИ РАБОТЫ
 8. ДИАГРАММА ПОСЛЕДОВАТЕЛЬНОСТИ РАБОТЫ

| | | | | | | | | | |
|------|-------|---------------------------------------|-----------|------|--------|-------------|----------|------------------|--------------|
| SHL | 1U bC | CULQJ | IQQLUQ QU | 6LJQ | DWXP | 6LQ | DWXP/DWH | <<XQQLUJIRHFW QK | |
| 3WFO | IR | HVLJQ FKDJQH | &KDJQH IR | | DWH | SLWQC/LBZQ | 7.% | 050511 | \$50000.0600 |
| 0 | 1 | SGGHG 9.1B5 & 8.2B4 & ;059-2. | 060600 | 7.% | 060615 | RQNWU/HVLJQ | | | **US: 6 |
| | | 77L0ON/SGGHG 8 8WJNU/HOHWHG 9 9DUJ/DV | | | | *RGN/SSU | | | |



<https://www.forkliftpdfmanuals.com/>

| | | |
|-----------------------------------------|-----------------|-------------|
| SHQPLQJ | SHQWVJUCJW | SDQCGRHWH |
| .UHWV 6W\UQ YSDN/PLQUDWW RFK.RPELDJ | '5)& 400-450 | 5.2B4/ |
| SDPH | SHWQQU/LBZQJ IR | SHWQDU/VVXH |
| :LULQJ OLFUR OHYHU/ZKHHO DQG &RPEL \$WW | \$50001.0100 | 05 |

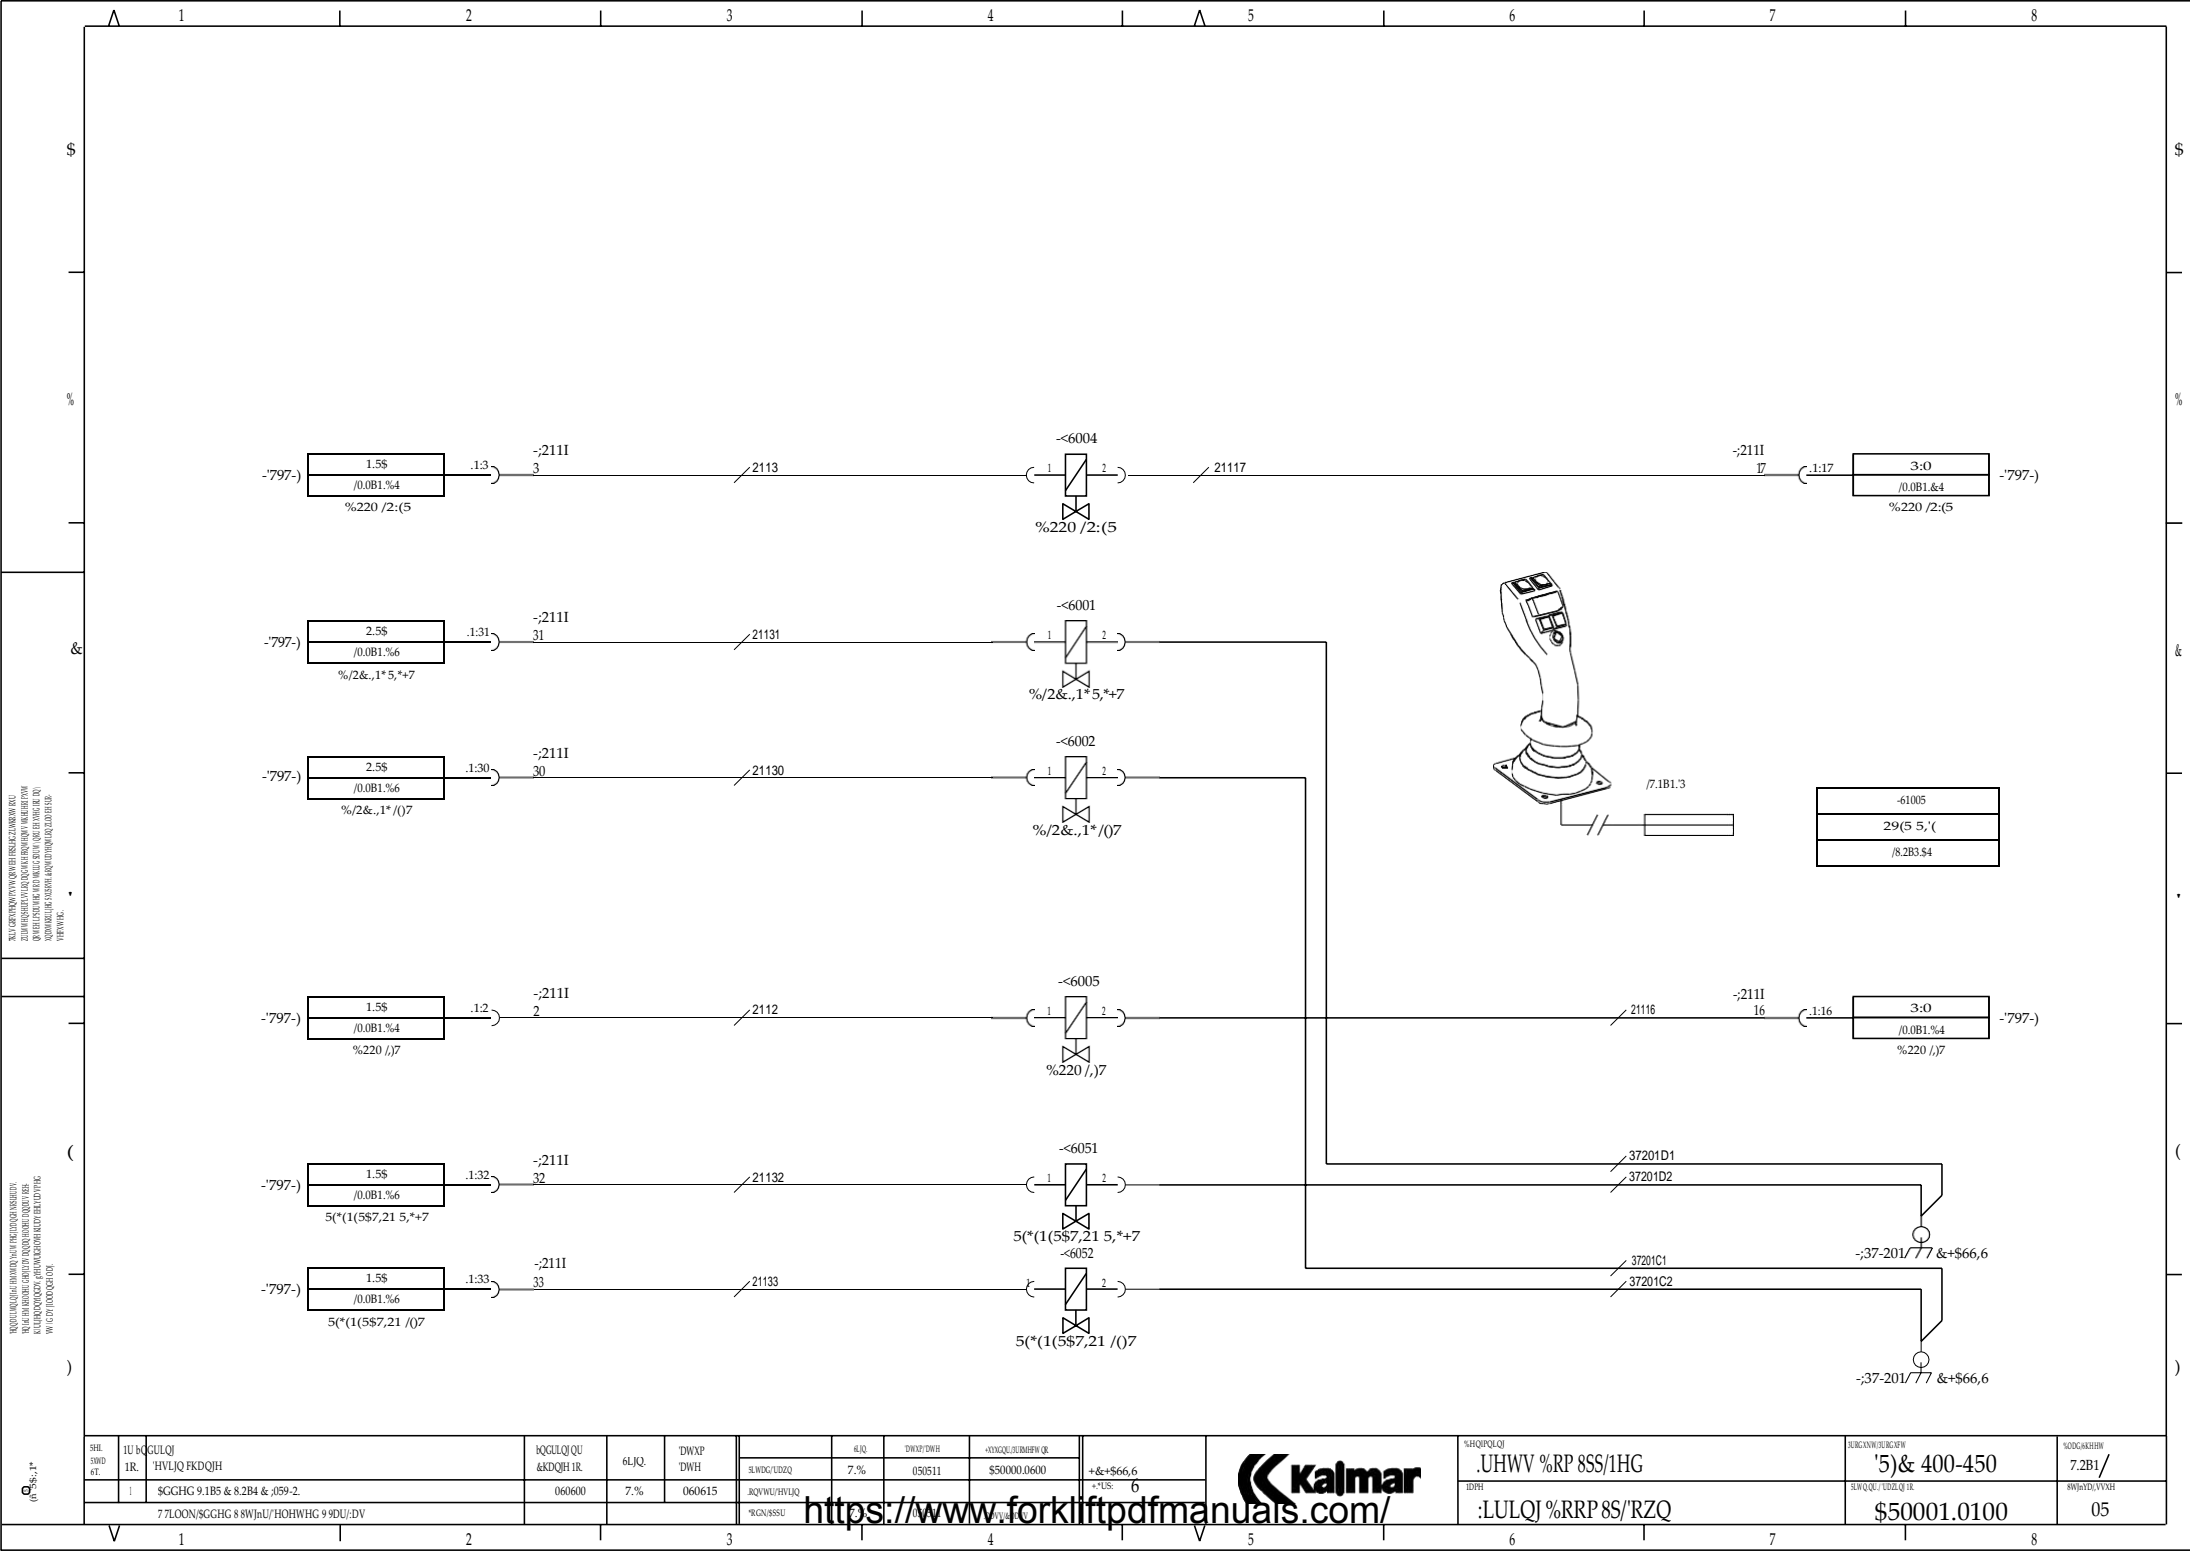


ALL OPERATIONS MUST BE PERFORMED IN ACCORDANCE WITH THE OPERATOR'S MANUAL AND THE SAFETY INSTRUCTIONS. ALWAYS WEAR YOUR SEATBELT AND SAFETY EQUIPMENT. NEVER OPERATE THE FORKTRUCK WITHOUT THE PROPER TRAINING AND CERTIFICATION. ALWAYS FOLLOW THE SAFETY PROCEDURES AND INSTRUCTIONS. ALWAYS WEAR YOUR SEATBELT AND SAFETY EQUIPMENT.

FORKTRUCKS MUST BE OPERATED IN ACCORDANCE WITH THE OPERATOR'S MANUAL AND THE SAFETY INSTRUCTIONS. ALWAYS WEAR YOUR SEATBELT AND SAFETY EQUIPMENT. NEVER OPERATE THE FORKTRUCK WITHOUT THE PROPER TRAINING AND CERTIFICATION. ALWAYS FOLLOW THE SAFETY PROCEDURES AND INSTRUCTIONS. ALWAYS WEAR YOUR SEATBELT AND SAFETY EQUIPMENT.

| | | | | | | | | | | | | | | | | | |
|---------------------------------------|----|-------------------------------|----|-------------|------|--------|-------------|-------------|----------|--------|--------------|---|----------|---|--------------------|--------------|--------|
| SH | 1U | CULQJ | IR | HVLQJ FKDJH | 6LQJ | DWXP | DWH | 6LQJ | DWXP/DWH | 050511 | \$50000.0600 | + | &+\$66,6 | 6 | UHWV %RP 8SS/1HG | 5) & 400-450 | 7.2B1/ |
| 1 | 1 | SGGHG 9.1B5 & 8.2B4 & ,059-2. | | 060600 | 7.0% | 060615 | RQVWU/HVLQJ | RQVWU/HVLQJ | | | | + | 6 | | :LULQJ %RRP 8S/RZQ | \$50001.0100 | 05 |
| 77LOON/SGGHG 8 8WJnU/HOHVHGH 9 9DU/DV | | | | | | | | | | | | | | | | | |



<https://www.forkliftpdfmanuals.com/>

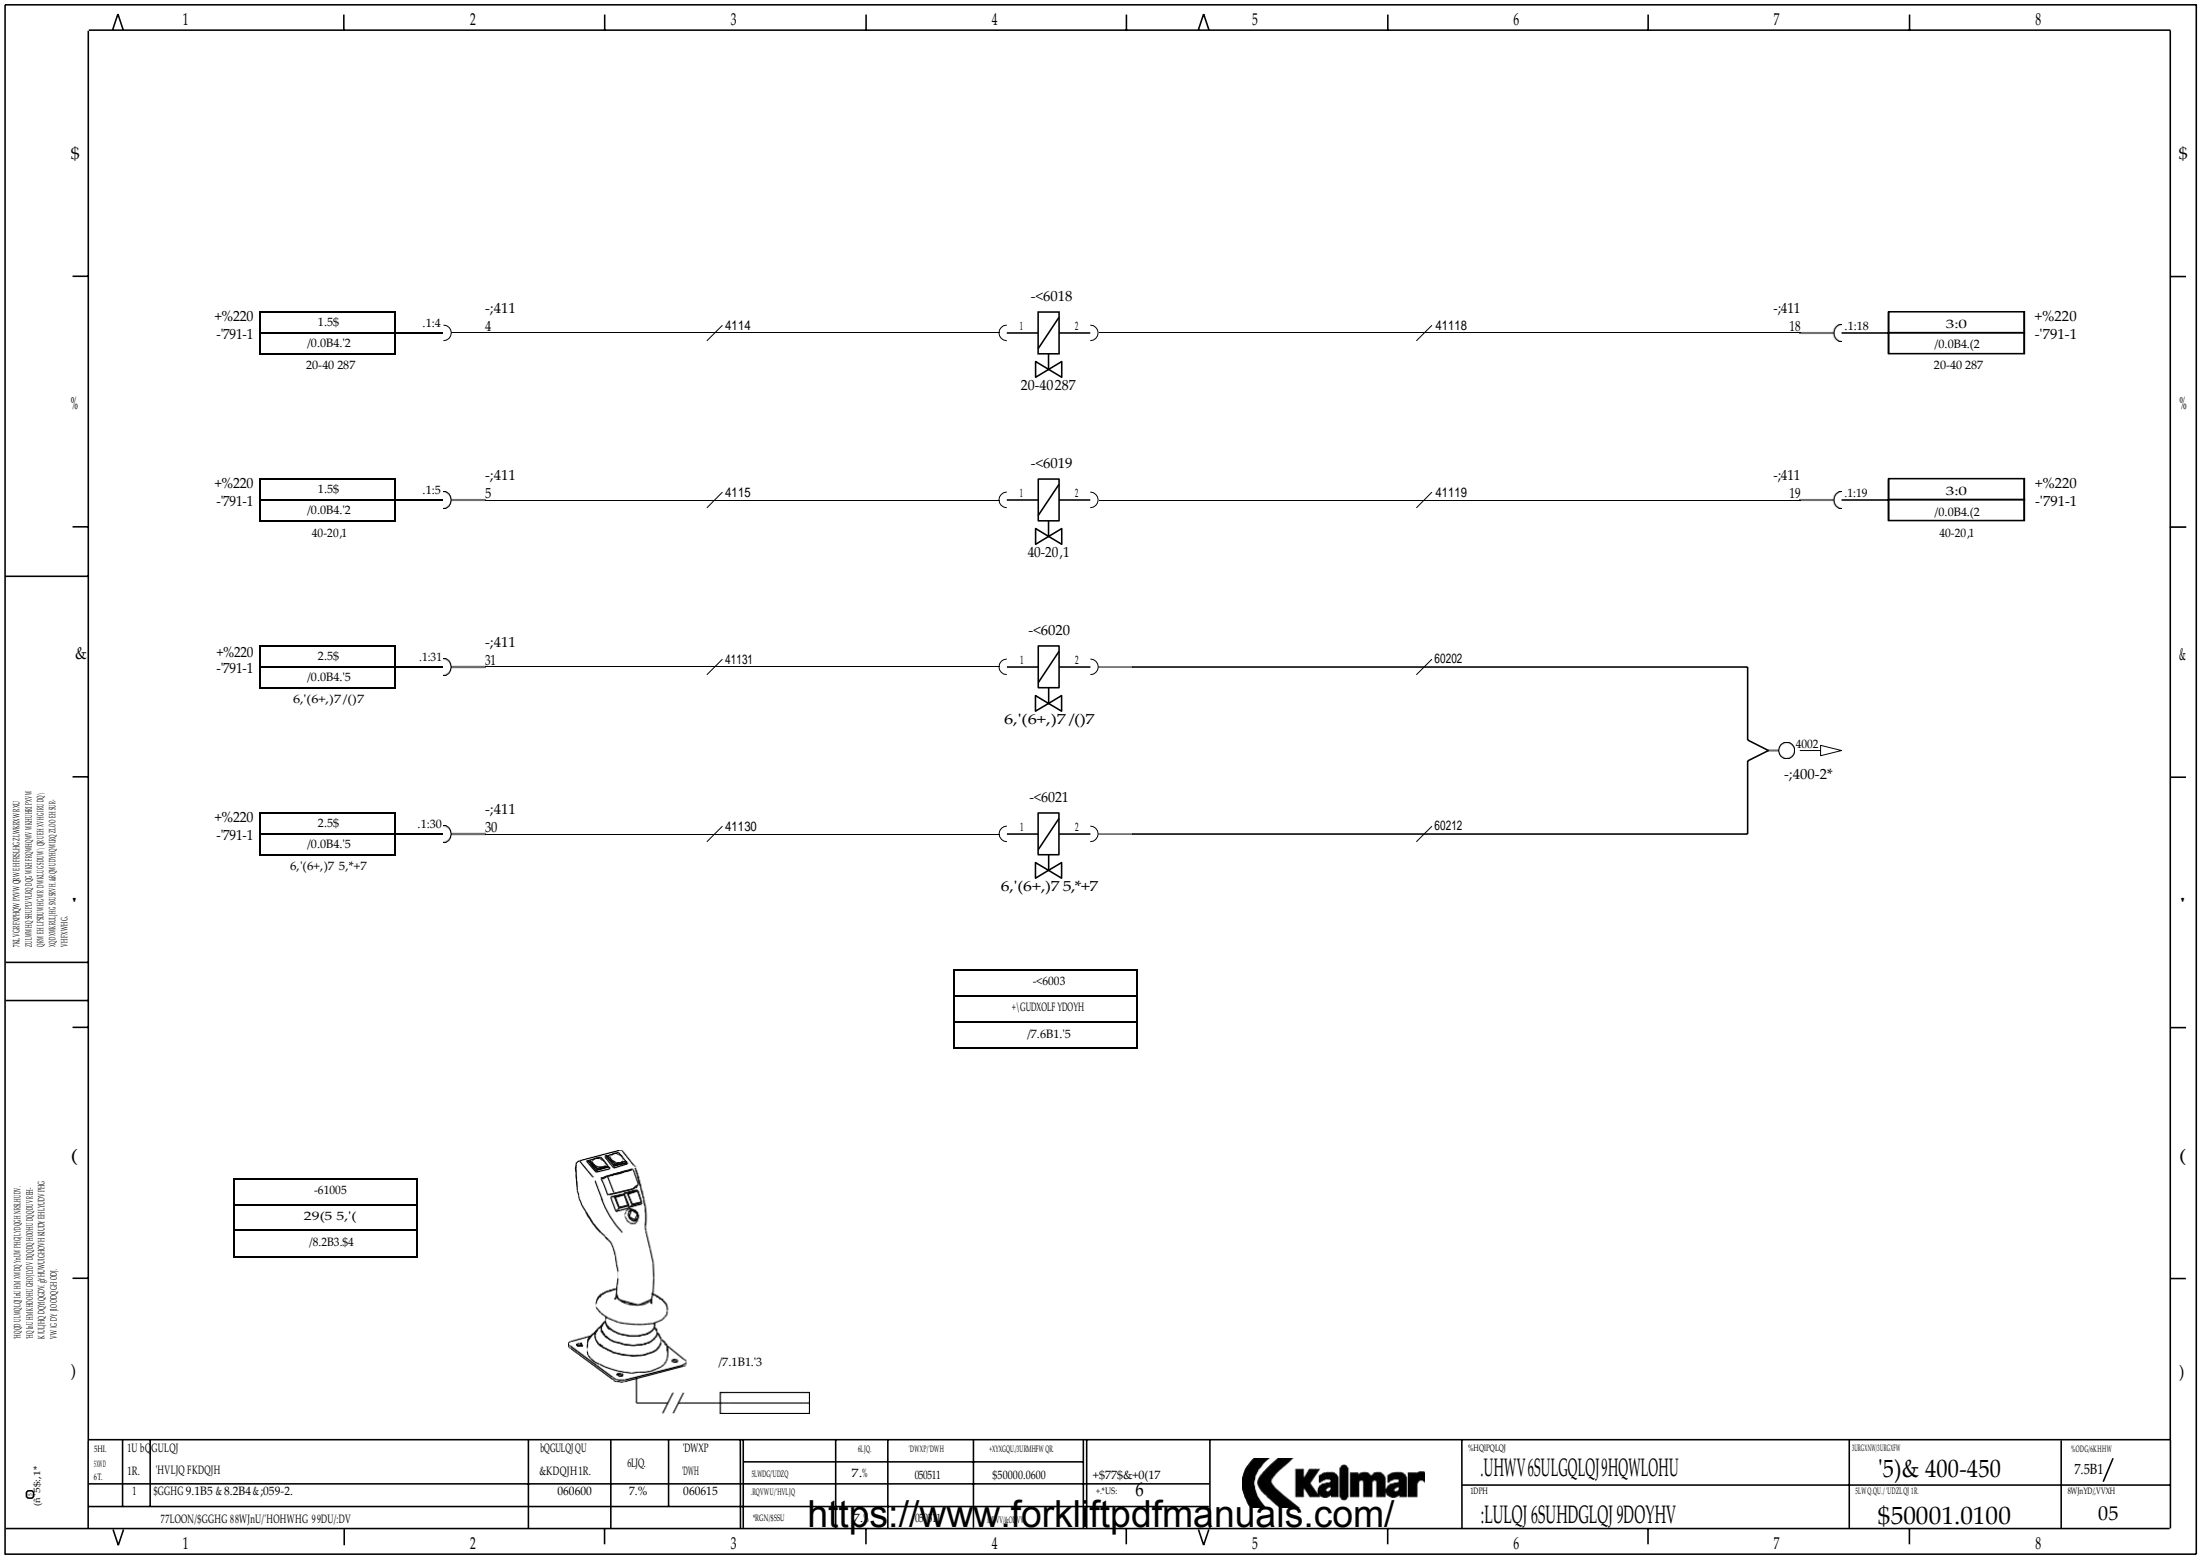


1. 2. 3. 4. 5. 6. 7. 8. 9. 10. 11. 12. 13. 14. 15. 16. 17. 18. 19. 20. 21. 22. 23. 24. 25. 26. 27. 28. 29. 30. 31. 32. 33. 34. 35. 36. 37. 38. 39. 40. 41. 42. 43. 44. 45. 46. 47. 48. 49. 50. 51. 52. 53. 54. 55. 56. 57. 58. 59. 60. 61. 62. 63. 64. 65. 66. 67. 68. 69. 70. 71. 72. 73. 74. 75. 76. 77. 78. 79. 80. 81. 82. 83. 84. 85. 86. 87. 88. 89. 90. 91. 92. 93. 94. 95. 96. 97. 98. 99. 100.

1. 2. 3. 4. 5. 6. 7. 8. 9. 10. 11. 12. 13. 14. 15. 16. 17. 18. 19. 20. 21. 22. 23. 24. 25. 26. 27. 28. 29. 30. 31. 32. 33. 34. 35. 36. 37. 38. 39. 40. 41. 42. 43. 44. 45. 46. 47. 48. 49. 50. 51. 52. 53. 54. 55. 56. 57. 58. 59. 60. 61. 62. 63. 64. 65. 66. 67. 68. 69. 70. 71. 72. 73. 74. 75. 76. 77. 78. 79. 80. 81. 82. 83. 84. 85. 86. 87. 88. 89. 90. 91. 92. 93. 94. 95. 96. 97. 98. 99. 100.

1. 2. 3. 4. 5. 6. 7. 8. 9. 10. 11. 12. 13. 14. 15. 16. 17. 18. 19. 20. 21. 22. 23. 24. 25. 26. 27. 28. 29. 30. 31. 32. 33. 34. 35. 36. 37. 38. 39. 40. 41. 42. 43. 44. 45. 46. 47. 48. 49. 50. 51. 52. 53. 54. 55. 56. 57. 58. 59. 60. 61. 62. 63. 64. 65. 66. 67. 68. 69. 70. 71. 72. 73. 74. 75. 76. 77. 78. 79. 80. 81. 82. 83. 84. 85. 86. 87. 88. 89. 90. 91. 92. 93. 94. 95. 96. 97. 98. 99. 100.

| |
|-----------|
| -61005 |
| 29(5 5,') |
| /8.2B3.S4 |

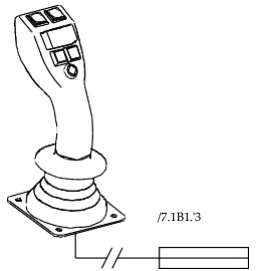


| |
|----------------|
| -<6003 |
| +GLDXOLF YDOYH |
| /7.6B1.5 |

| | | | | | | | |
|-------------------------------------|-------------------------------|-----------|--------|-----|----------|------------------|-------------|
| SH | TU K CULQJ | HQULQI QU | DWXP | 6LQ | DWXP/DWH | +XDCQLUJBAHFV QK | |
| IR | HVLUQ FKDQJH | &KDQJH IR | DWH | 7.% | 050511 | \$50000.0600 | +S77S&+0(17 |
| 1 | SCGHC 9.1B5 & 8.2B4 & .059-2. | 060600 | 060615 | | | | +ULS. 6 |
| 77L00N/SCGHC 88VJmL/HHWHHC 99DUJ/DV | | | | | | | |



<https://www.forkliftpdfmanuals.com/>

| | | |
|--------------------------|----------------|------------|
| *HQPCULQJ | *KCNWJDCJWH | %ODGKJHHW |
| .UHWV 6SULGQLQJ 9HQWLOHU | '5)& 400-450 | 7.5B1/ |
| IDPH | %WQCU/UDZQJ IR | %WBYD.VVXH |
| :LULQJ 6SUHDCGLQJ 9DOYHV | \$50001.0100 | 05 |

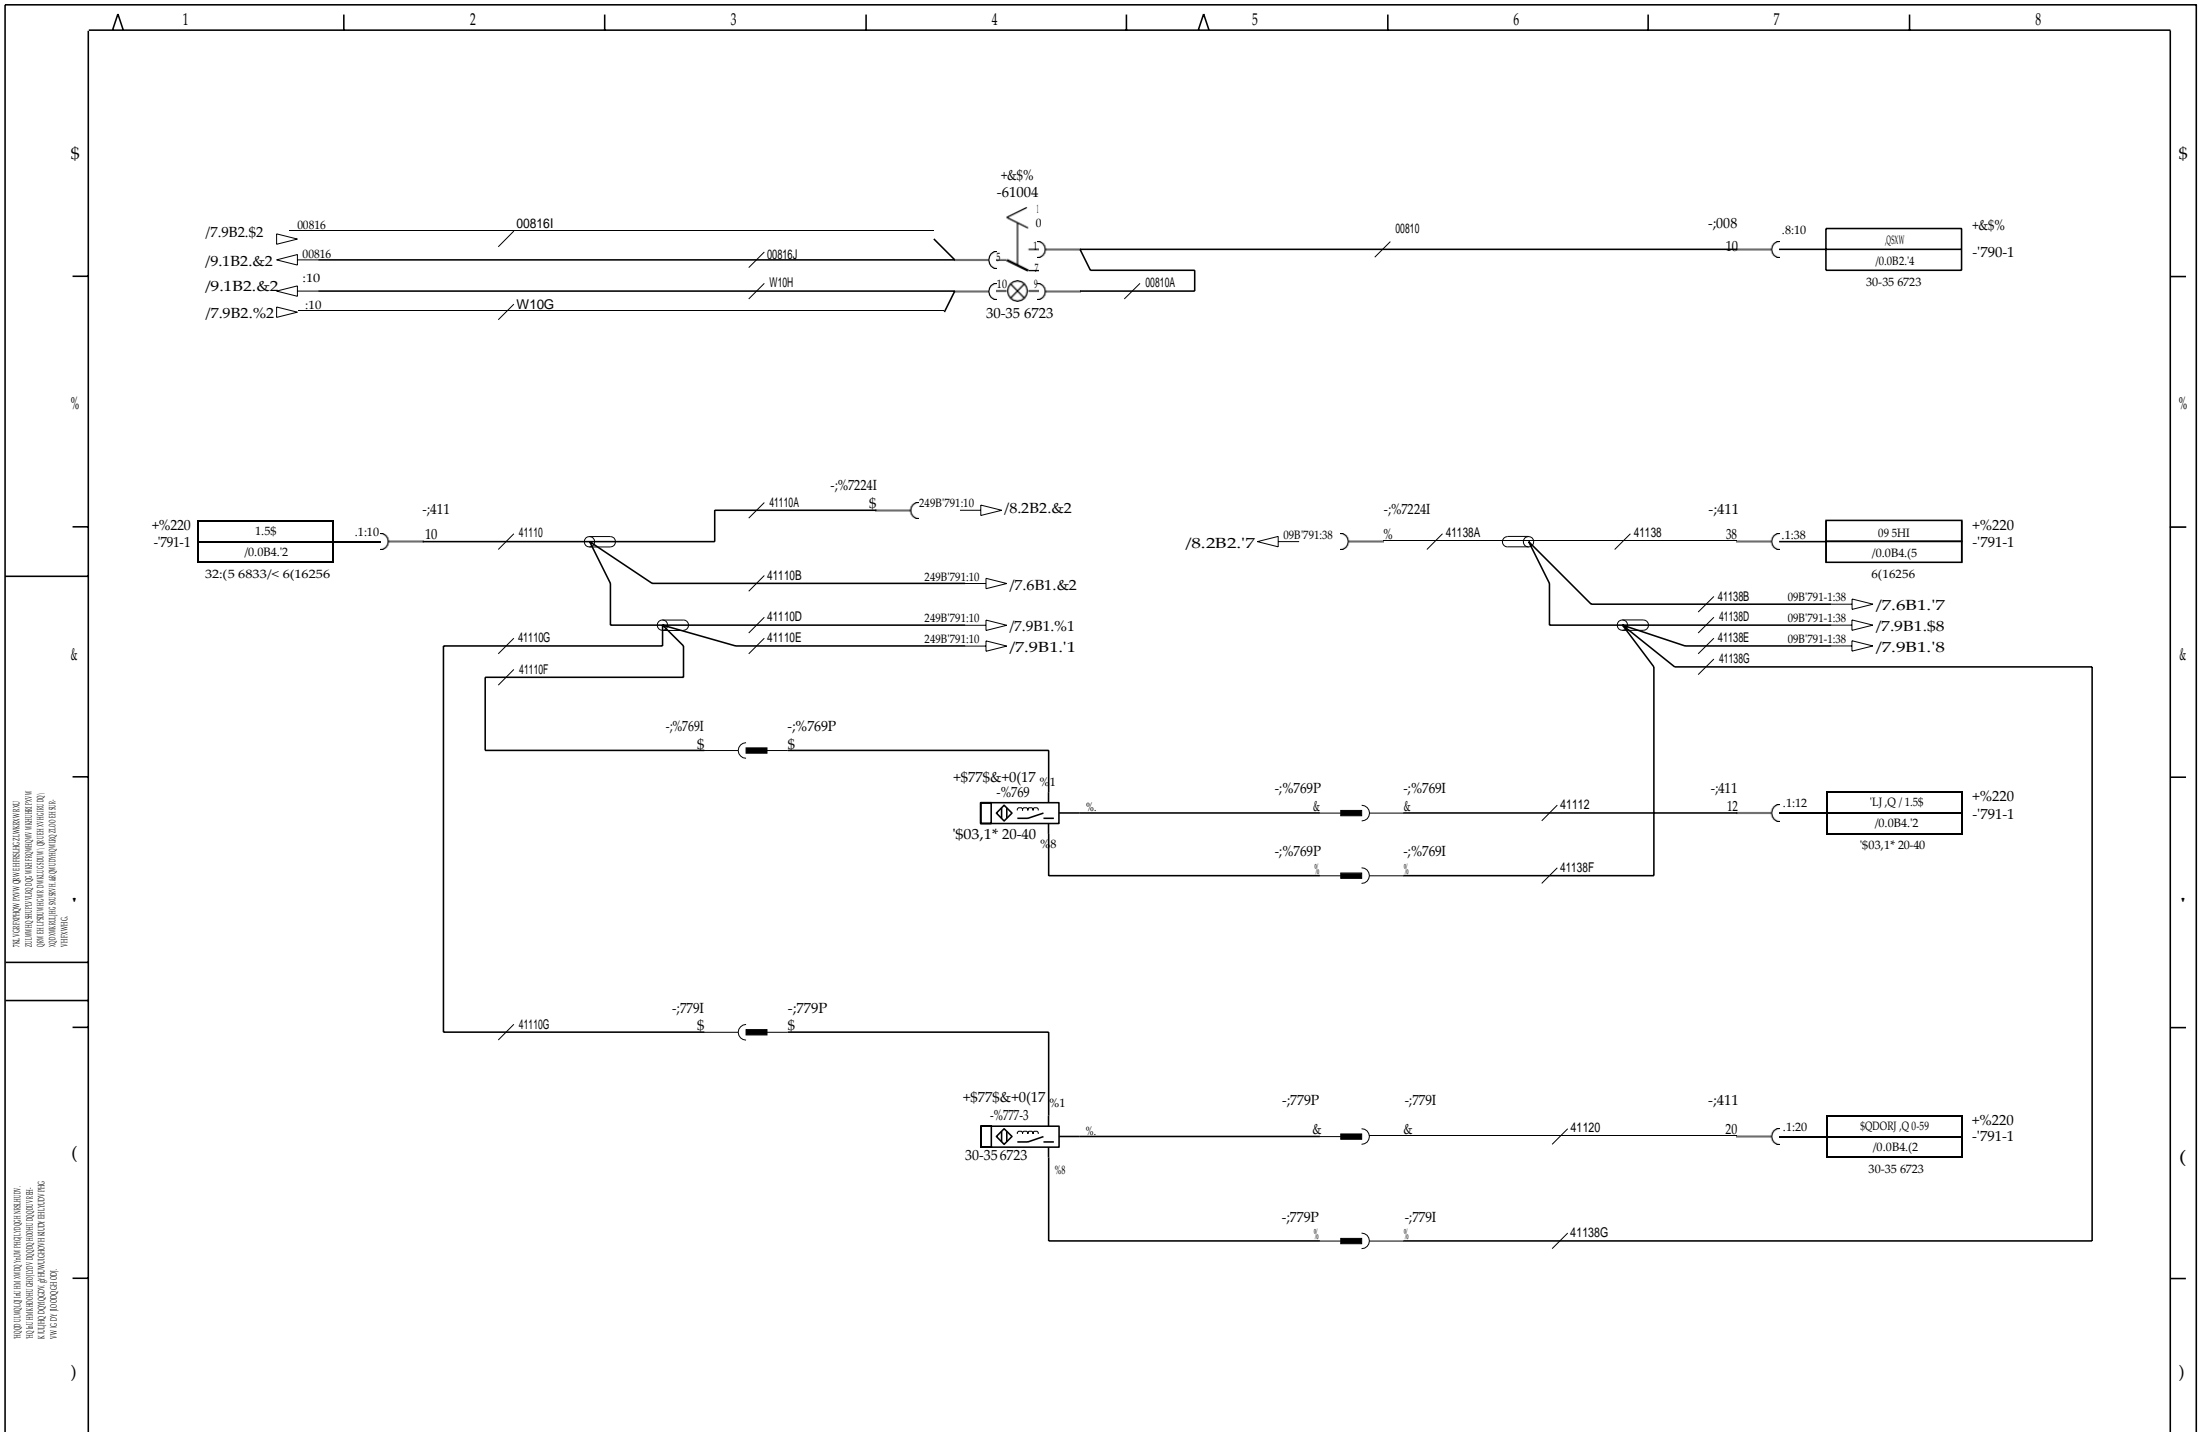


THE INFORMATION CONTAINED HEREIN IS THE PROPERTY OF KALMAR AND IS TO BE USED ONLY FOR THE PURPOSES SPECIFIED. NO PART OF THIS PUBLICATION IS TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM.

THIS DOCUMENT IS THE PROPERTY OF KALMAR AND IS TO BE USED ONLY FOR THE PURPOSES SPECIFIED. NO PART OF THIS PUBLICATION IS TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM.

| | | | | | | | | | | | |
|-----|------|----------------------------------------|------------|------|--------|------------|----------|----------------|--------------------------|--------------|----------|
| SHL | 1U b | CULQJ | 4QCULQJ QU | 6LJQ | DWXP | 4LQ | DWXP/DWH | 4QXQJLUBHFN QJ | 4HQJQLQJ | 4UCQVWUJGQVW | 4QCGKREH |
| SWD | IR | HVLJQ FKDJQH | &KDJQH IR | | DWH | 4LQ | 050511 | \$50000.0600 | .UHWV6SULGQLQJ*LYDUH | '5)& 400-450 | 7.5B3/ |
| 1 | | SGGHG 9.1B5 & 8.2B4 & .059-2. | 060600 | 7.7% | 060615 | 4QVWUJGQVW | | | :LULQJ 6SUHDGLQJ 6HQVRUV | \$50001.0100 | 05 |
| | | 77L00N/SGGHG 8 8WJnU/HOHVHHC 9 9DUJ/DV | | | | 4QVWUJGQVW | | | | | |



<https://www.forkliftpdfmanuals.com/>

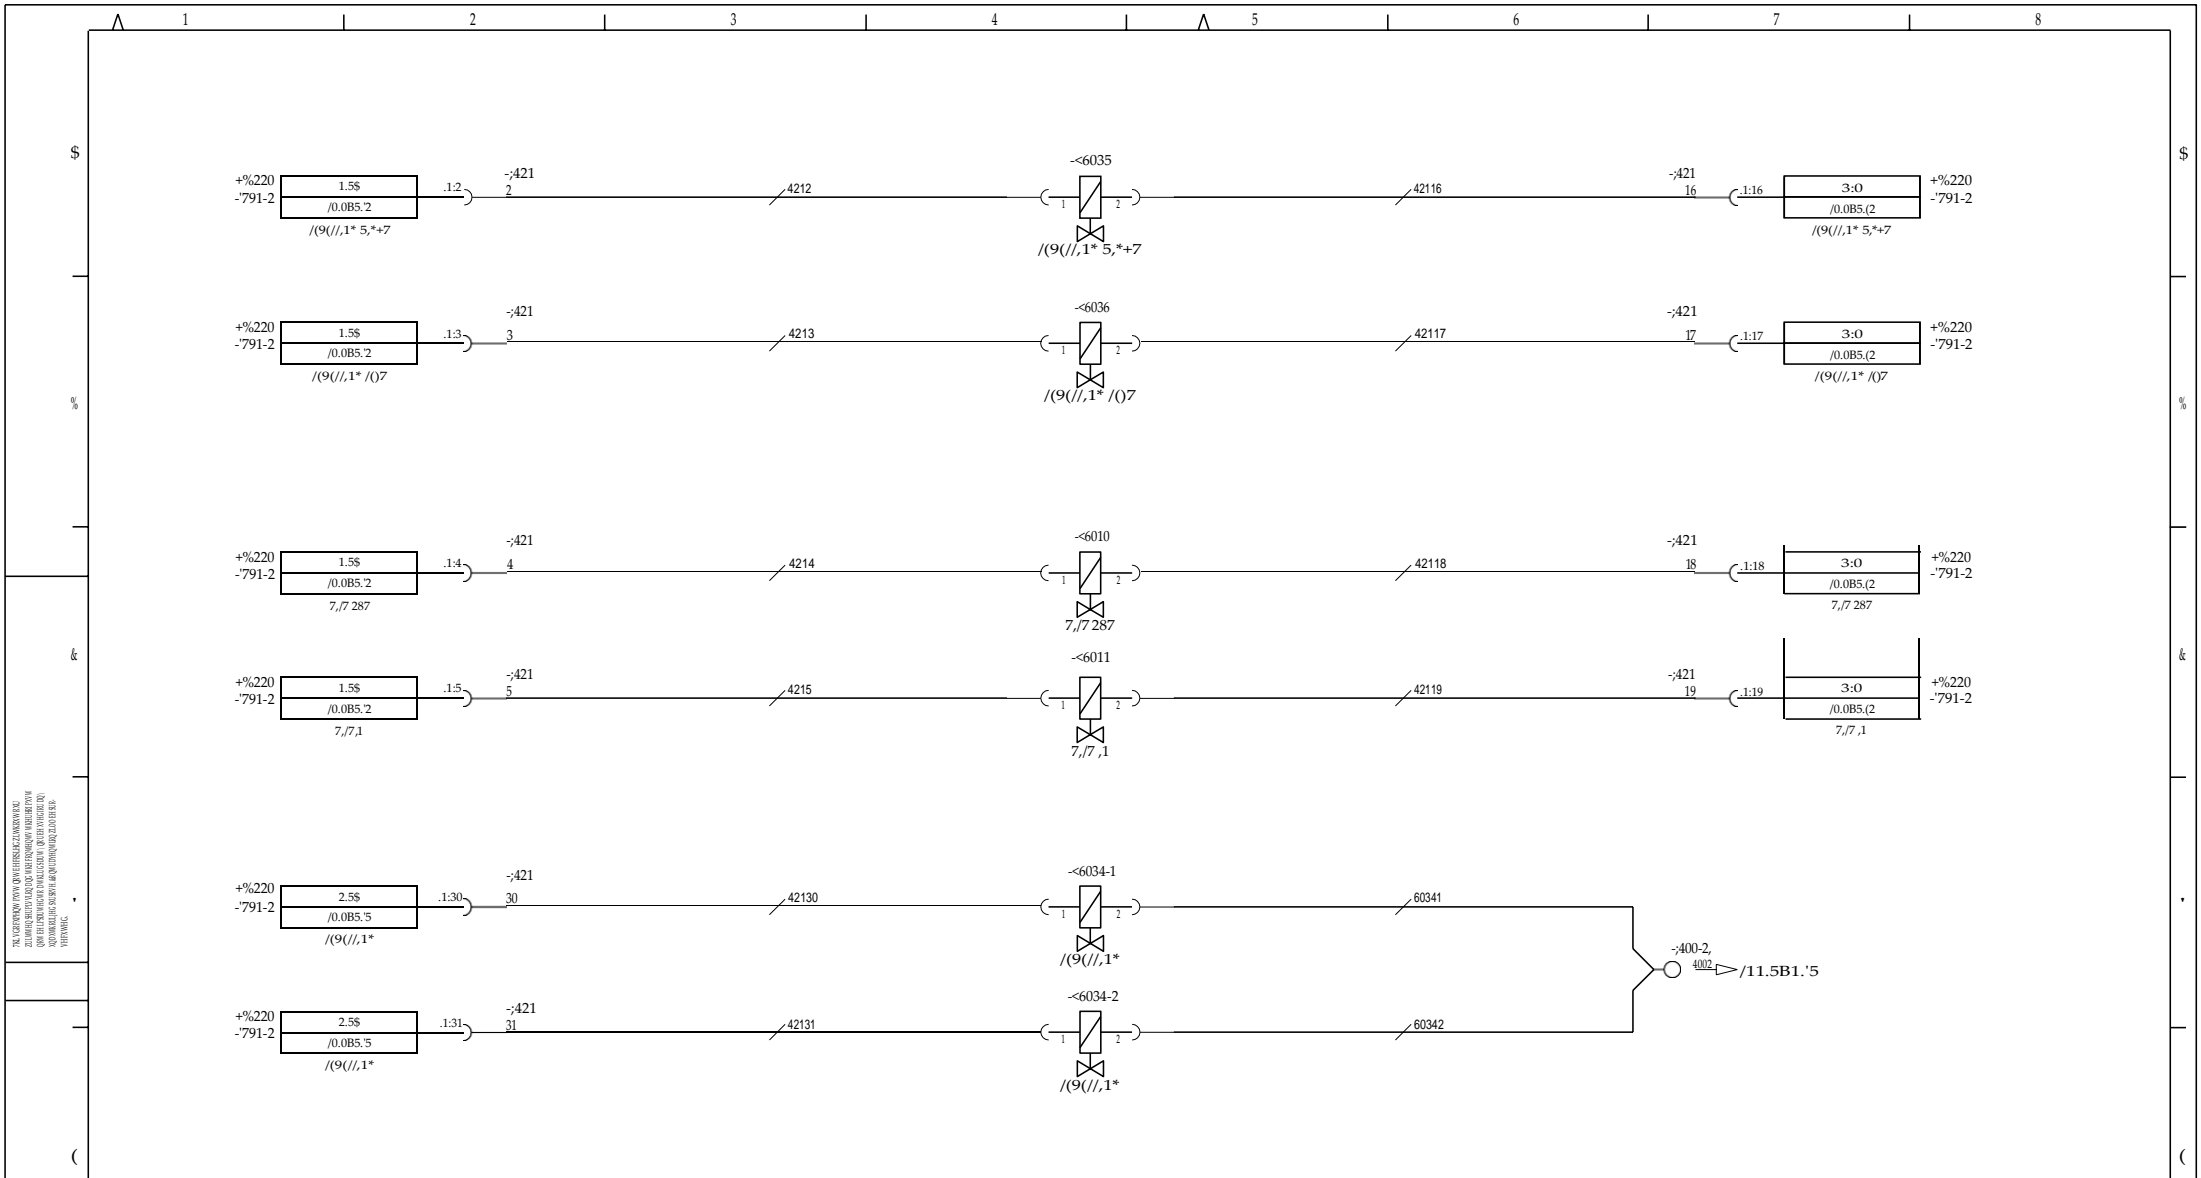


7LOW DQG OHYHOOLQJ ZLWK 237 . '8

THE OPERATOR SHALL BE RESPONSIBLE FOR THE PROPER USE OF THE FORKlift. THE OPERATOR SHALL BE RESPONSIBLE FOR THE PROPER USE OF THE FORKlift. THE OPERATOR SHALL BE RESPONSIBLE FOR THE PROPER USE OF THE FORKlift.

| | | | | | | | | | | | | | | |
|------------|-----------------------------------------|---|-------------------------------|--------|------|--------|------|--------|--------------|------|---|-----------------------|--------------|--------|
| SHL SWD RT | 1U bCULQJ IR. HVLJQ FKDQIH | 1 | SGGHG 9.185 & 8.284 & .059-2. | 060600 | 7.7% | 060615 | 7.7% | 050511 | \$50000.0600 | 1.15 | 6 | 400-2, 4002 /11.5B1.5 | 5) & 400-450 | 7.7B2/ |
| | 7 ZLOON/SGGHG 8 8WJnU/HOHVHHC 9 9DUJ/DV | | | | | | | | | | | | \$50001.0100 | 05 |



<https://www.forkliftpdfmanuals.com/>

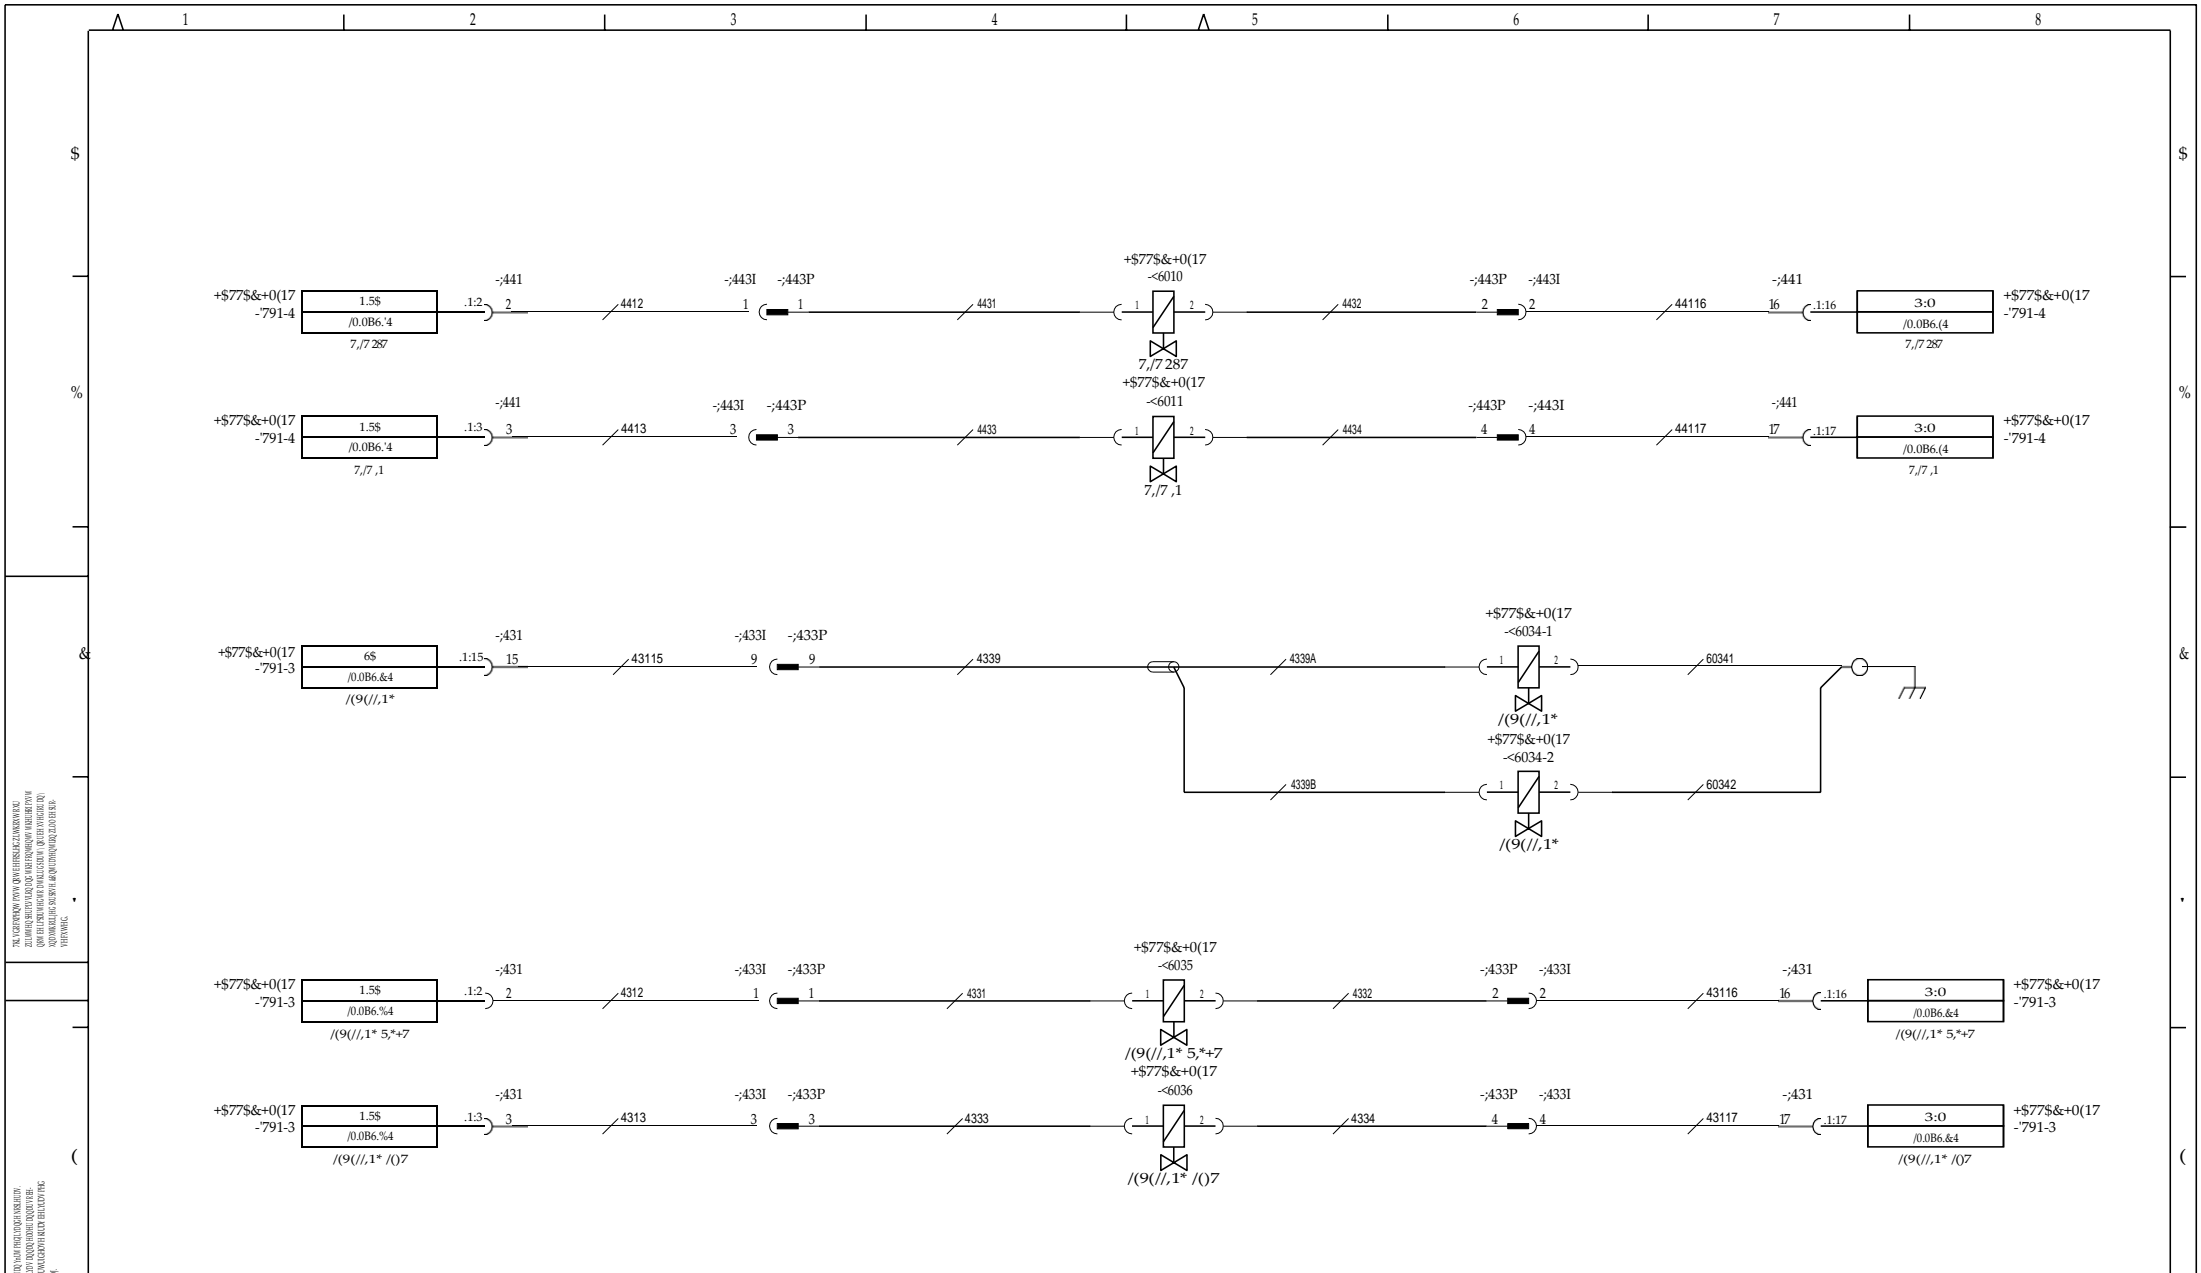


7LOW DQG OHYHOOLQJ ZLWK &RPEL \$WWDKPHQW

| | | | | | | | | | | | | | | | | | | | |
|---------------------------------------|-------------------------------|-------------------|------|----------|--------|--------------|----------------|-----|----------|----------------|-----|----------|----------------|-----|----------|----------------|-----|----------|----------------|
| SHL SWD RT | 1U bCULQJ IR. HVLJQ FKDJH | 1QCLUQU &KDQJH IR | 6LJQ | DWXP DWH | 6LQ | DWXP DWH | <D>XQLZLHFW QK | 6LQ | DWXP DWH | <D>XQLZLHFW QK | 6LQ | DWXP DWH | <D>XQLZLHFW QK | 6LQ | DWXP DWH | <D>XQLZLHFW QK | 6LQ | DWXP DWH | <D>XQLZLHFW QK |
| 1 | SGGHG 9.1B5 & 8.2B4 & .059-2. | 060600 | 7.7% | 060615 | 050511 | \$50000.0600 | | | | | | | | | | | | | |
| 77LOON/SGGHG 8.8WJNU/HOHWHG 9.9DUJ/DV | | | | | | | | | | | | | | | | | | | |



<https://www.forkliftpdfmanuals.com/>

| | | | |
|----------|-------------------------|------------|--------|
| 6HQKQKQJ | UHWV 7LOW + 6NHVQLQJ | 500GKRRH | 7.7B3/ |
| 5DPR | :LULQJ 7LOW + /HYHOOLQJ | 8WbYD/VVXH | 05 |
| | \$50001.0100 | | |

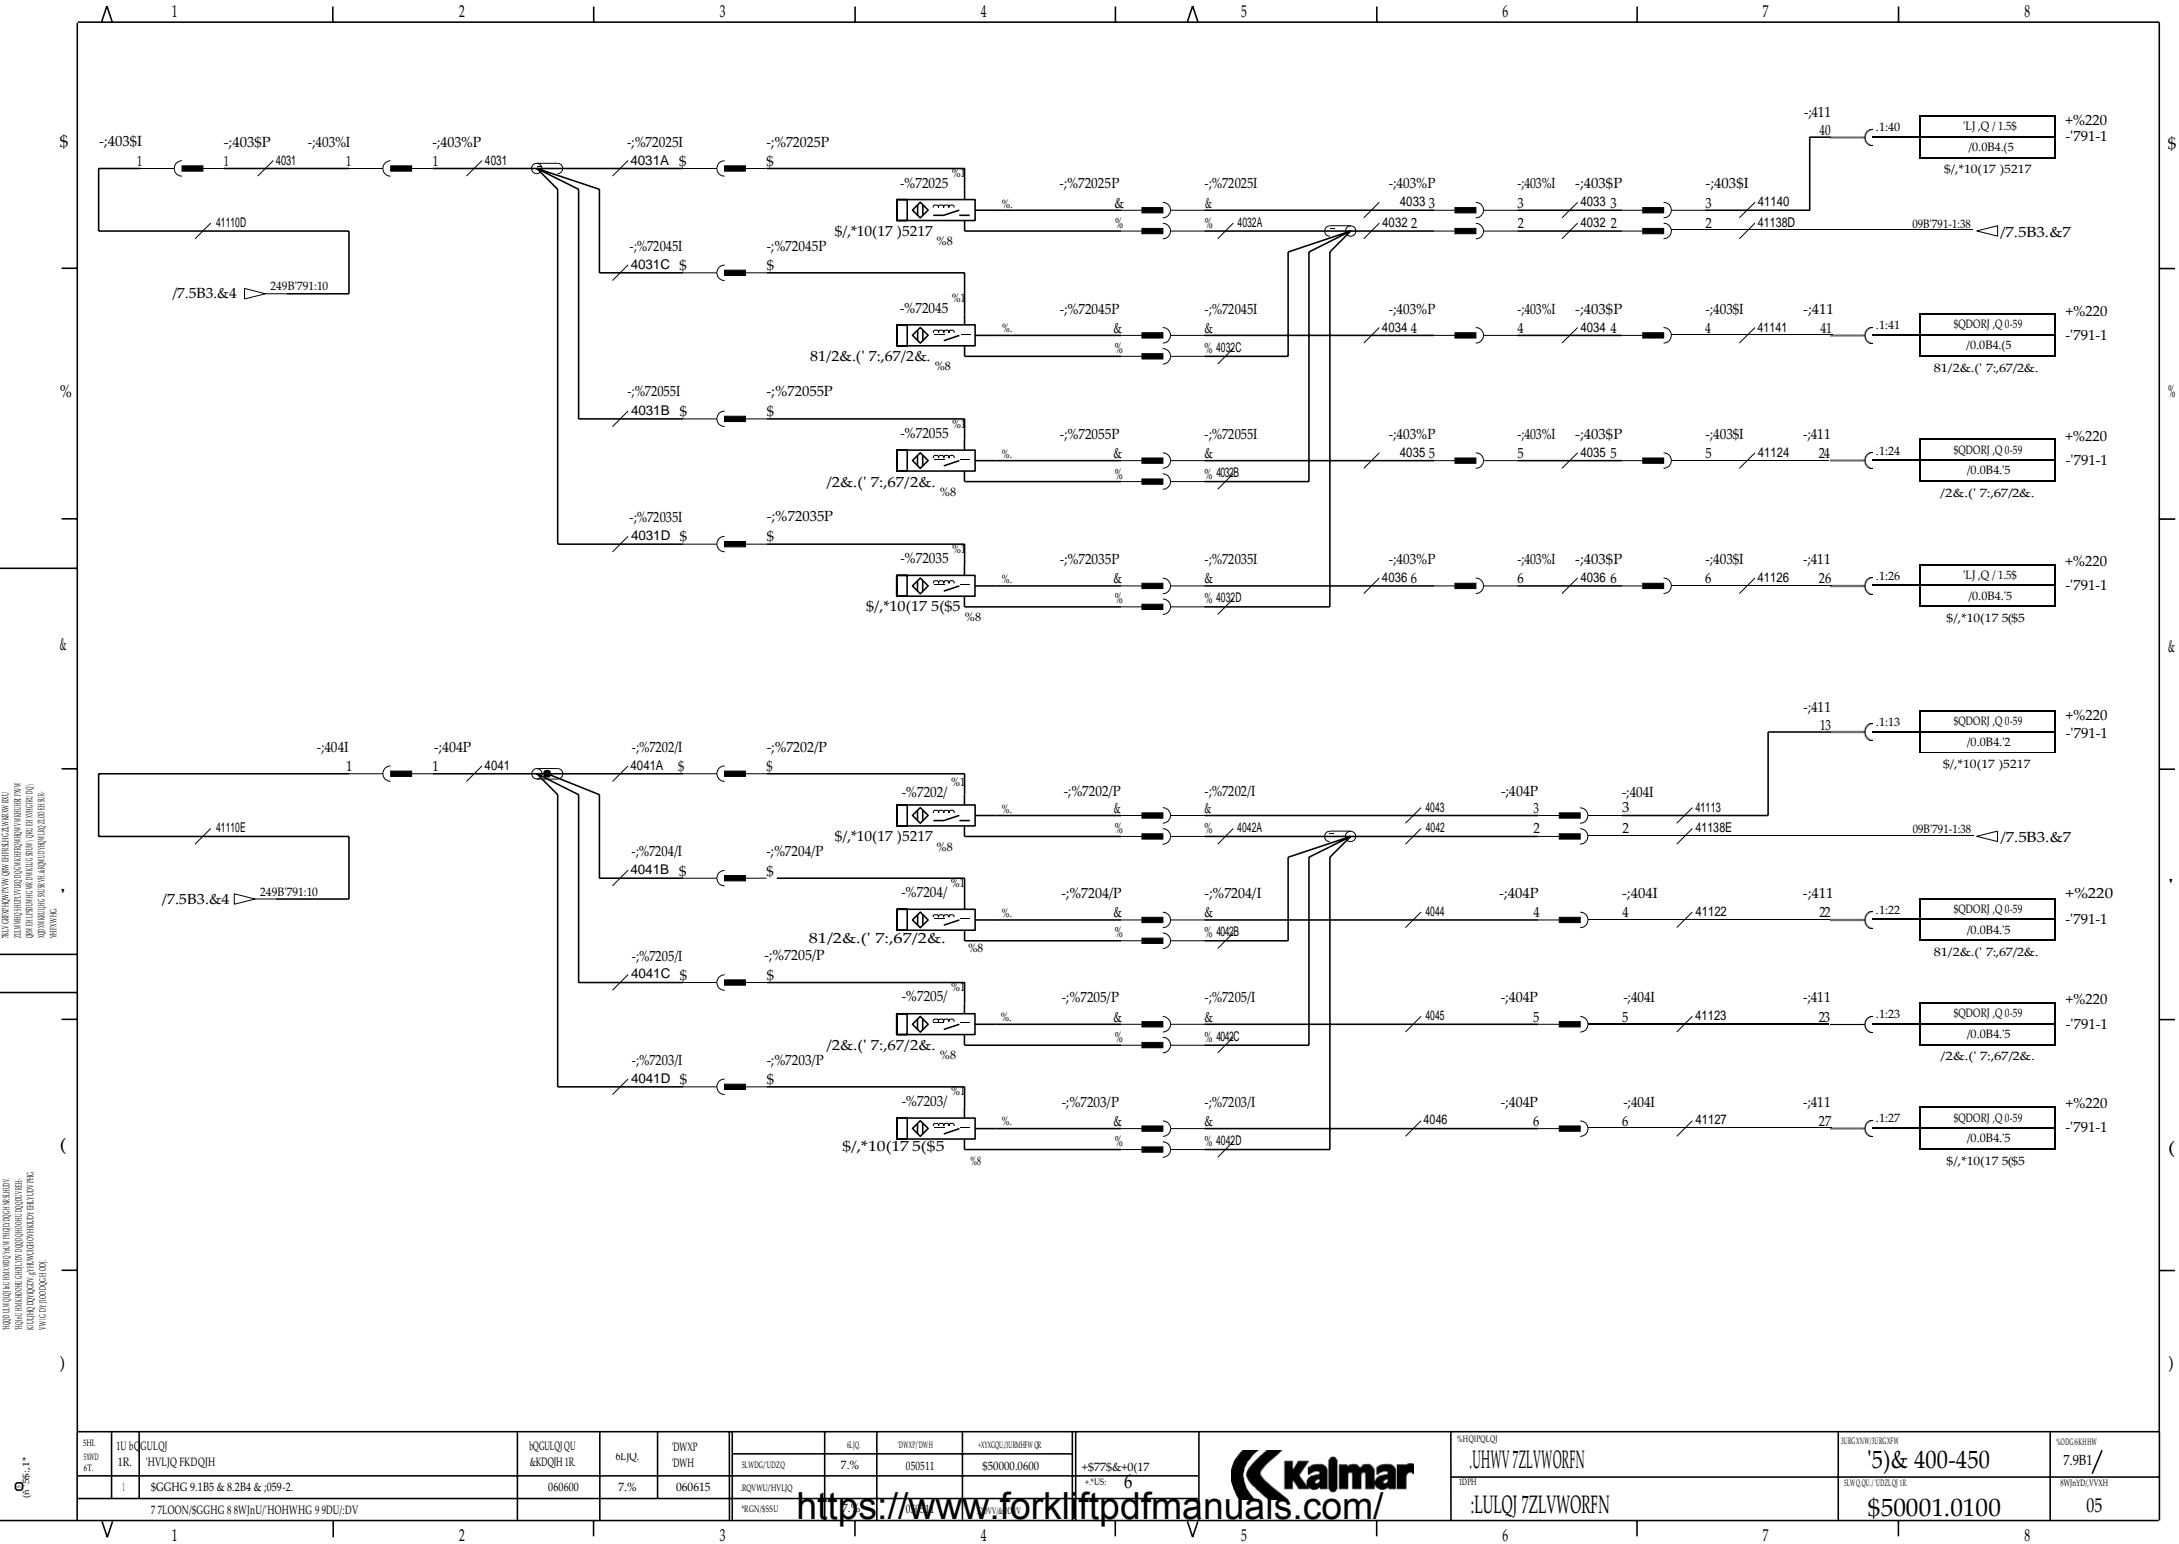


ALL OPERATIONS MUST BE PERFORMED IN ACCORDANCE WITH THE OPERATING INSTRUCTIONS AND SAFETY WARNINGS.
 ALL OPERATIONS MUST BE PERFORMED IN ACCORDANCE WITH THE OPERATING INSTRUCTIONS AND SAFETY WARNINGS.
 ALL OPERATIONS MUST BE PERFORMED IN ACCORDANCE WITH THE OPERATING INSTRUCTIONS AND SAFETY WARNINGS.

ALL OPERATIONS MUST BE PERFORMED IN ACCORDANCE WITH THE OPERATING INSTRUCTIONS AND SAFETY WARNINGS.
 ALL OPERATIONS MUST BE PERFORMED IN ACCORDANCE WITH THE OPERATING INSTRUCTIONS AND SAFETY WARNINGS.
 ALL OPERATIONS MUST BE PERFORMED IN ACCORDANCE WITH THE OPERATING INSTRUCTIONS AND SAFETY WARNINGS.

| | | | | | | | | | | | |
|-----|-----|--------------------------------------|------------|------|--------|-----|----------|------------------|------------------|------------------|-----------------|
| SHI | 1U | CULQJ | 1QGLUQJ QU | 6LJL | DWXP | 4LQ | DWXP/DWH | 40XQJLJLJLJLJLJL | SHOPLQJ | SHOPLQJ | SHOPLQJ |
| ST. | IR. | HVLJQ FKOJH | &KDOJH IR | | DWH | | 030511 | \$50000.0600 | .UHWV 7ZLVWOREN | .UHWV 7ZLVWOREN | .UHWV 7ZLVWOREN |
| 1 | 1 | \$GCHG 9.1B5 & 8.2B4 & .059-2. | 060600 | 7.% | 060615 | | | +\$775&+0(17 | 5)& 400-450 | 5)& 400-450 | 7.9B1/ |
| | | 77L00N/SGCHG 8 8WJnU/HOHWHG 9 9DU/DV | | | | | | 6 | :LULQJ 7ZLVWOREN | :LULQJ 7ZLVWOREN | \$50001.0100 |
| | | | | | | | | | | | 05 |



<https://www.forkliftpdfmanuals.com/>

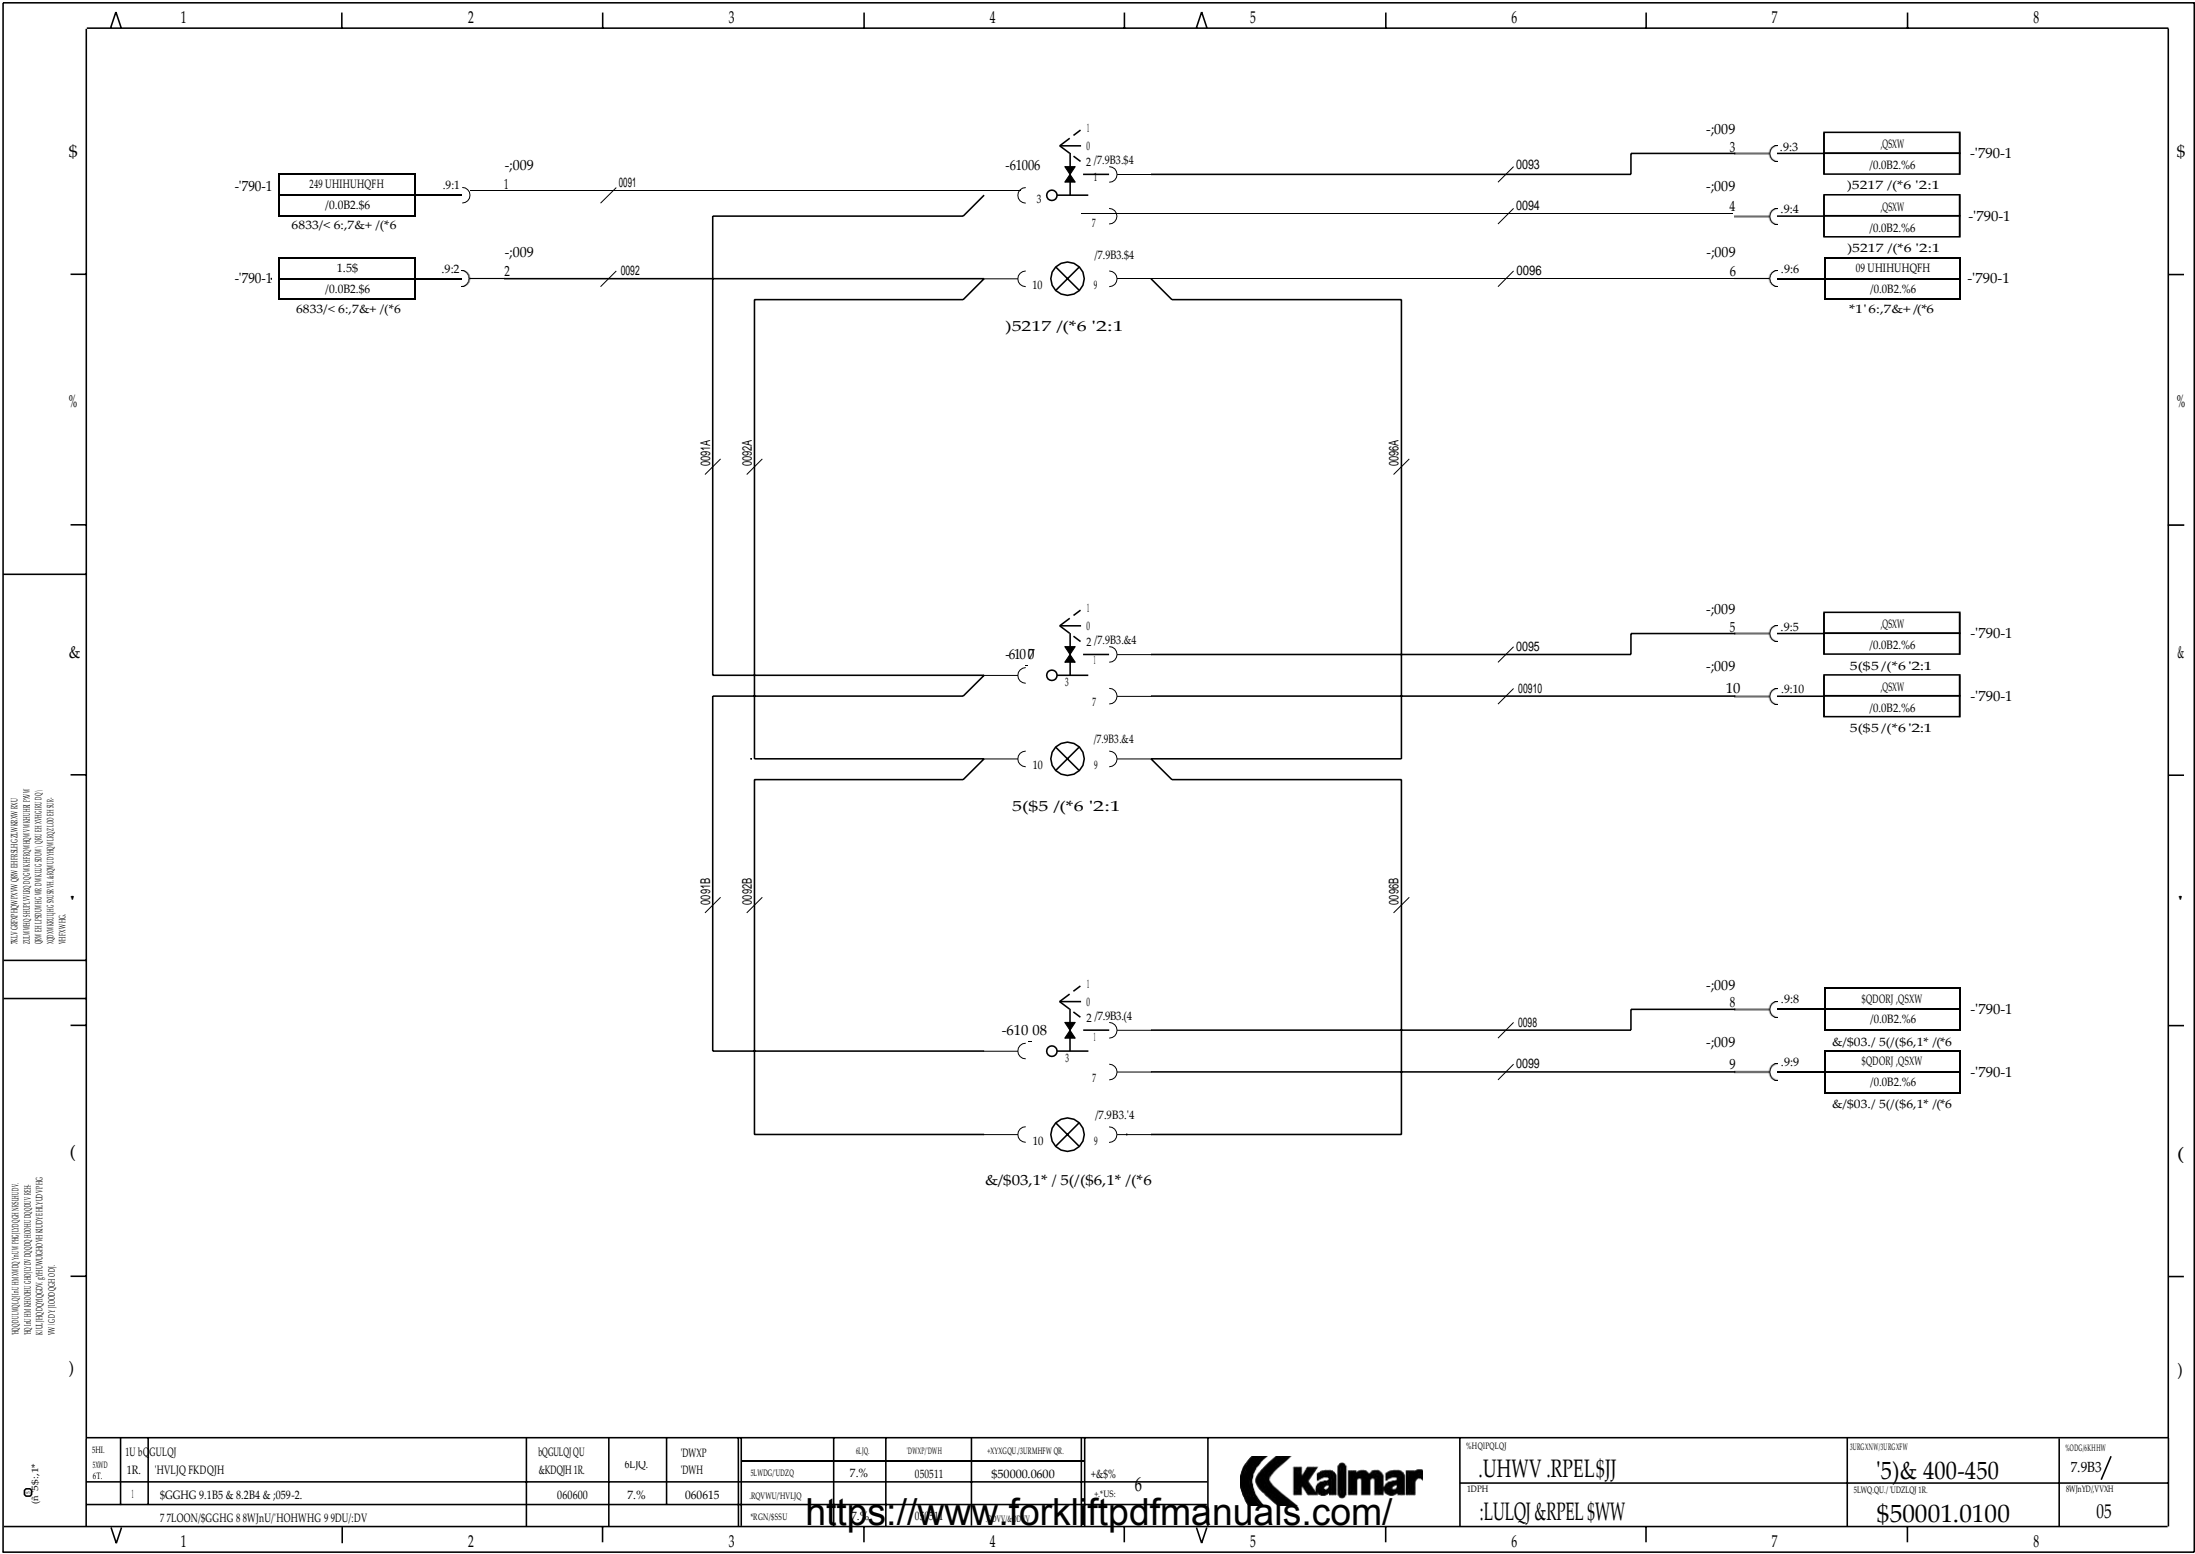

ALL OPERATIONS ON THIS SYSTEM MUST BE PERFORMED BY A QUALIFIED PERSONNEL. ALWAYS USE THE CORRECT LIFTING TECHNIQUE TO AVOID INJURY. ALWAYS WEAR YOUR SAFETY BELT AND HELMETS. ALWAYS WEAR YOUR SAFETY GLASSES.


THIS MANUAL IS THE PROPERTY OF KALMAR. IT IS TO BE USED ONLY FOR THE EQUIPMENT SPECIFICALLY IDENTIFIED HEREIN. IT IS NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM.

| | | | | | | | | | |
|-----|------|--------------------------------------|-----------|------|--------|------------|----------|-----------------|--------|
| SHL | 1U b | CULQJ | IQQLQJ QU | 6LJQ | DWXP | 4LQ | DWXP/DWH | 4XJQJLURMBFW QR | |
| SWD | IR | HVLQJ FKDJH | &KDJH IR | | DWH | | (50511 | \$50000.0600 | +&5% |
| AT | i | SGGHG 9.1B5 & 8.2B4 & .059-2. | 060600 | 7.7% | 060615 | RQVWUFWLUQ | RGNSSU | | +LUS 6 |
| | | 77L00N/SGGHG 8 8WJNU/HOHWHG 9 9DU/DV | | | | | | | |



<https://www.forkliftpdfmanuals.com/>

| | | | |
|---------|-------------------|--------------|----------|
| 4HQPLQJ | .UHWV .RPEL\$JJ | 500GKRRH | 7.9B3/ |
| IDPH | :LULQJ &RPEL \$WW | 500GKRRH | 9WBDVVMH |
| | | \$50001.0100 | 05 |

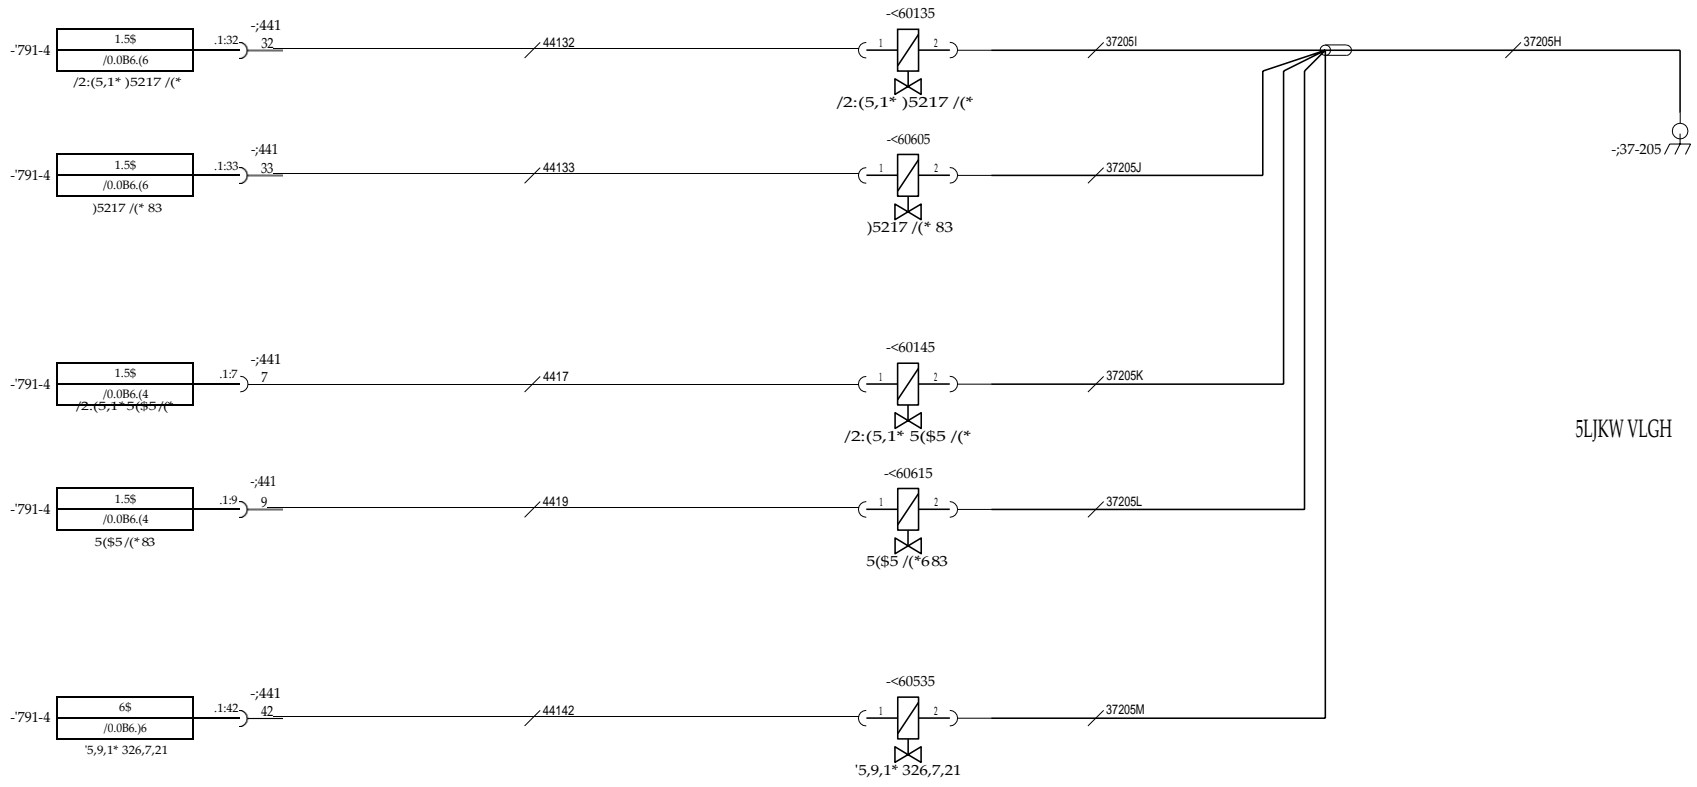

5LJKW VLGH


TRUCKS...
 1. LIFT CAPACITY...
 2. LIFT HEIGHT...
 3. LIFT SPEED...
 4. LIFT WEIGHT...
 5. LIFT TIME...
 6. LIFT CYCLES...
 7. LIFT EFFICIENCY...
 8. LIFT SAFETY...
 9. LIFT RELIABILITY...
 10. LIFT DURABILITY...

1. LIFT CAPACITY...
 2. LIFT HEIGHT...
 3. LIFT SPEED...
 4. LIFT WEIGHT...
 5. LIFT TIME...
 6. LIFT CYCLES...
 7. LIFT EFFICIENCY...
 8. LIFT SAFETY...
 9. LIFT RELIABILITY...
 10. LIFT DURABILITY...

| | | | | | | | | | | | | |
|--------------------------------------|-------------|--------------------------------|-----------------------|-------|-------------|-------------|----------|-----------------|-------------|-----------------------------|---------------------------------|---------------------|
| SHD
ST. | 1U b
IR. | CULQJ
HVLQ FKDJH | IQULQJ QU
&KDJH IR | 6LJQ. | DWXP
DWH | 4LQ | DWXP/DWH | <<XQLJURJHFW QK | +<S7S&+0(17 | *HQPOLOJ
.UHWV .RPEL\$JJ | RUCXWVURJHFW
'5)& 400-450 | 500G&KREH
7.9B6/ |
| 1 | 1 | \$GGHG 9.1B5 & 8.2B4 & .059-2. | 060600 | 7.0% | 060615 | 3QVWU/HVLJQ | 050511 | \$50000.0600 | +*L5 6 | IDPH
:LULQJ &RPEL \$WW | SLWQU/ LUDLQ IR
\$50001.0100 | SWHYTELVVXH
05 |
| 77LOON/SGGHC 8 8WJnU/HOHWHG 9 9DU/DV | | | | | | | | | | | | |



<https://www.forkliftpdfmanuals.com/>

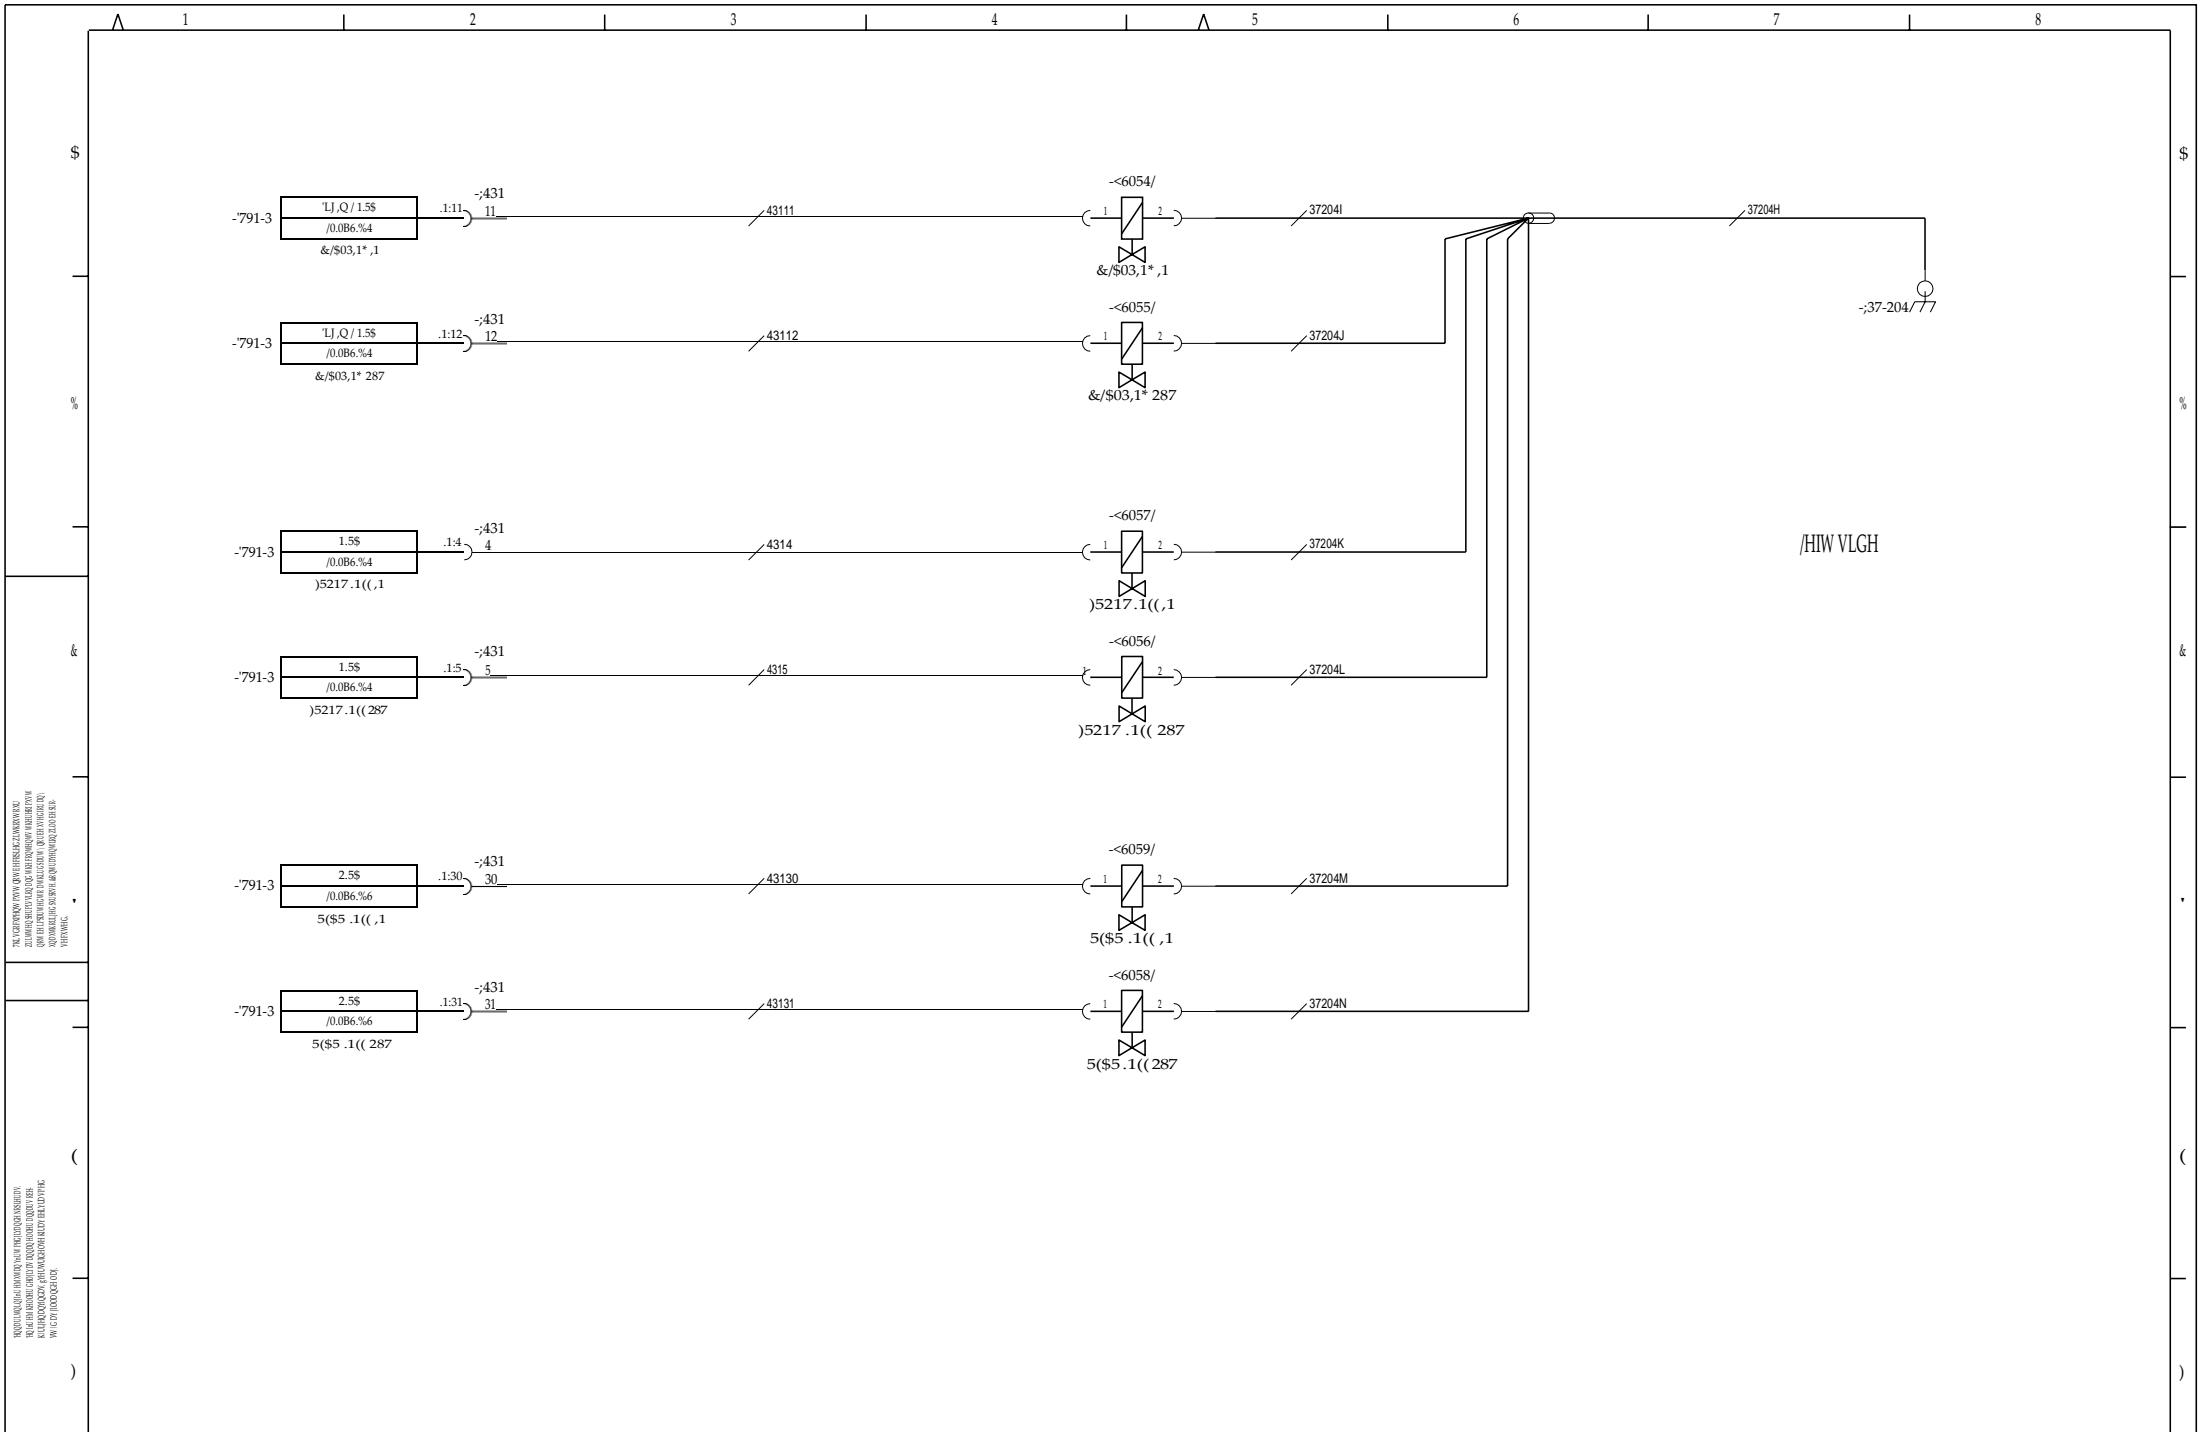


1. 2. 3. 4. 5. 6. 7. 8.
 \$
 %
 &
 .
 (

1. 2. 3. 4. 5. 6. 7. 8.
 \$
 %
 &
 .
 (

| | | | | | | | | | | | | |
|--------------------------------------|-------------|--------------------------------|------------------------|-------|-------------|-------------|----------|----------------|--------------|-----------------------------|----------------------------------|---------------------|
| SHD
ST. | 1U b
IR. | CULQJ
HVLQ FKDJH | 1QGLUQJ QU
&KDJH IR | 6LJQ. | DWXP
DWH | 6LQ | DWXP/DWH | <<XQLJURJHQ QK | +<S77S&+0(17 | *HQPOLOJ
.UHWV .RPEL\$JJ | RUCXWVURJURJHQ
'5)& 400-450 | 500G&KREH
7.9B7/ |
| 1 | 1 | \$CGHG 9.1B5 & 8.2B4 & .059-2. | 060600 | 7.7% | 060615 | 8QVWU/HVLJQ | 050511 | \$50000.0600 | +*US. 6 | IDPH
:LULQJ &RPEL \$WW | 8LWQQU /LQJLQ IR
\$50001.0100 | 8WBYELVYAH
05 |
| 77L00N/SGCHG 8 8WJnU/HOHWHG 9 9DU/DV | | | | | | | | | | | | |



<https://www.forkliftpdfmanuals.com/>

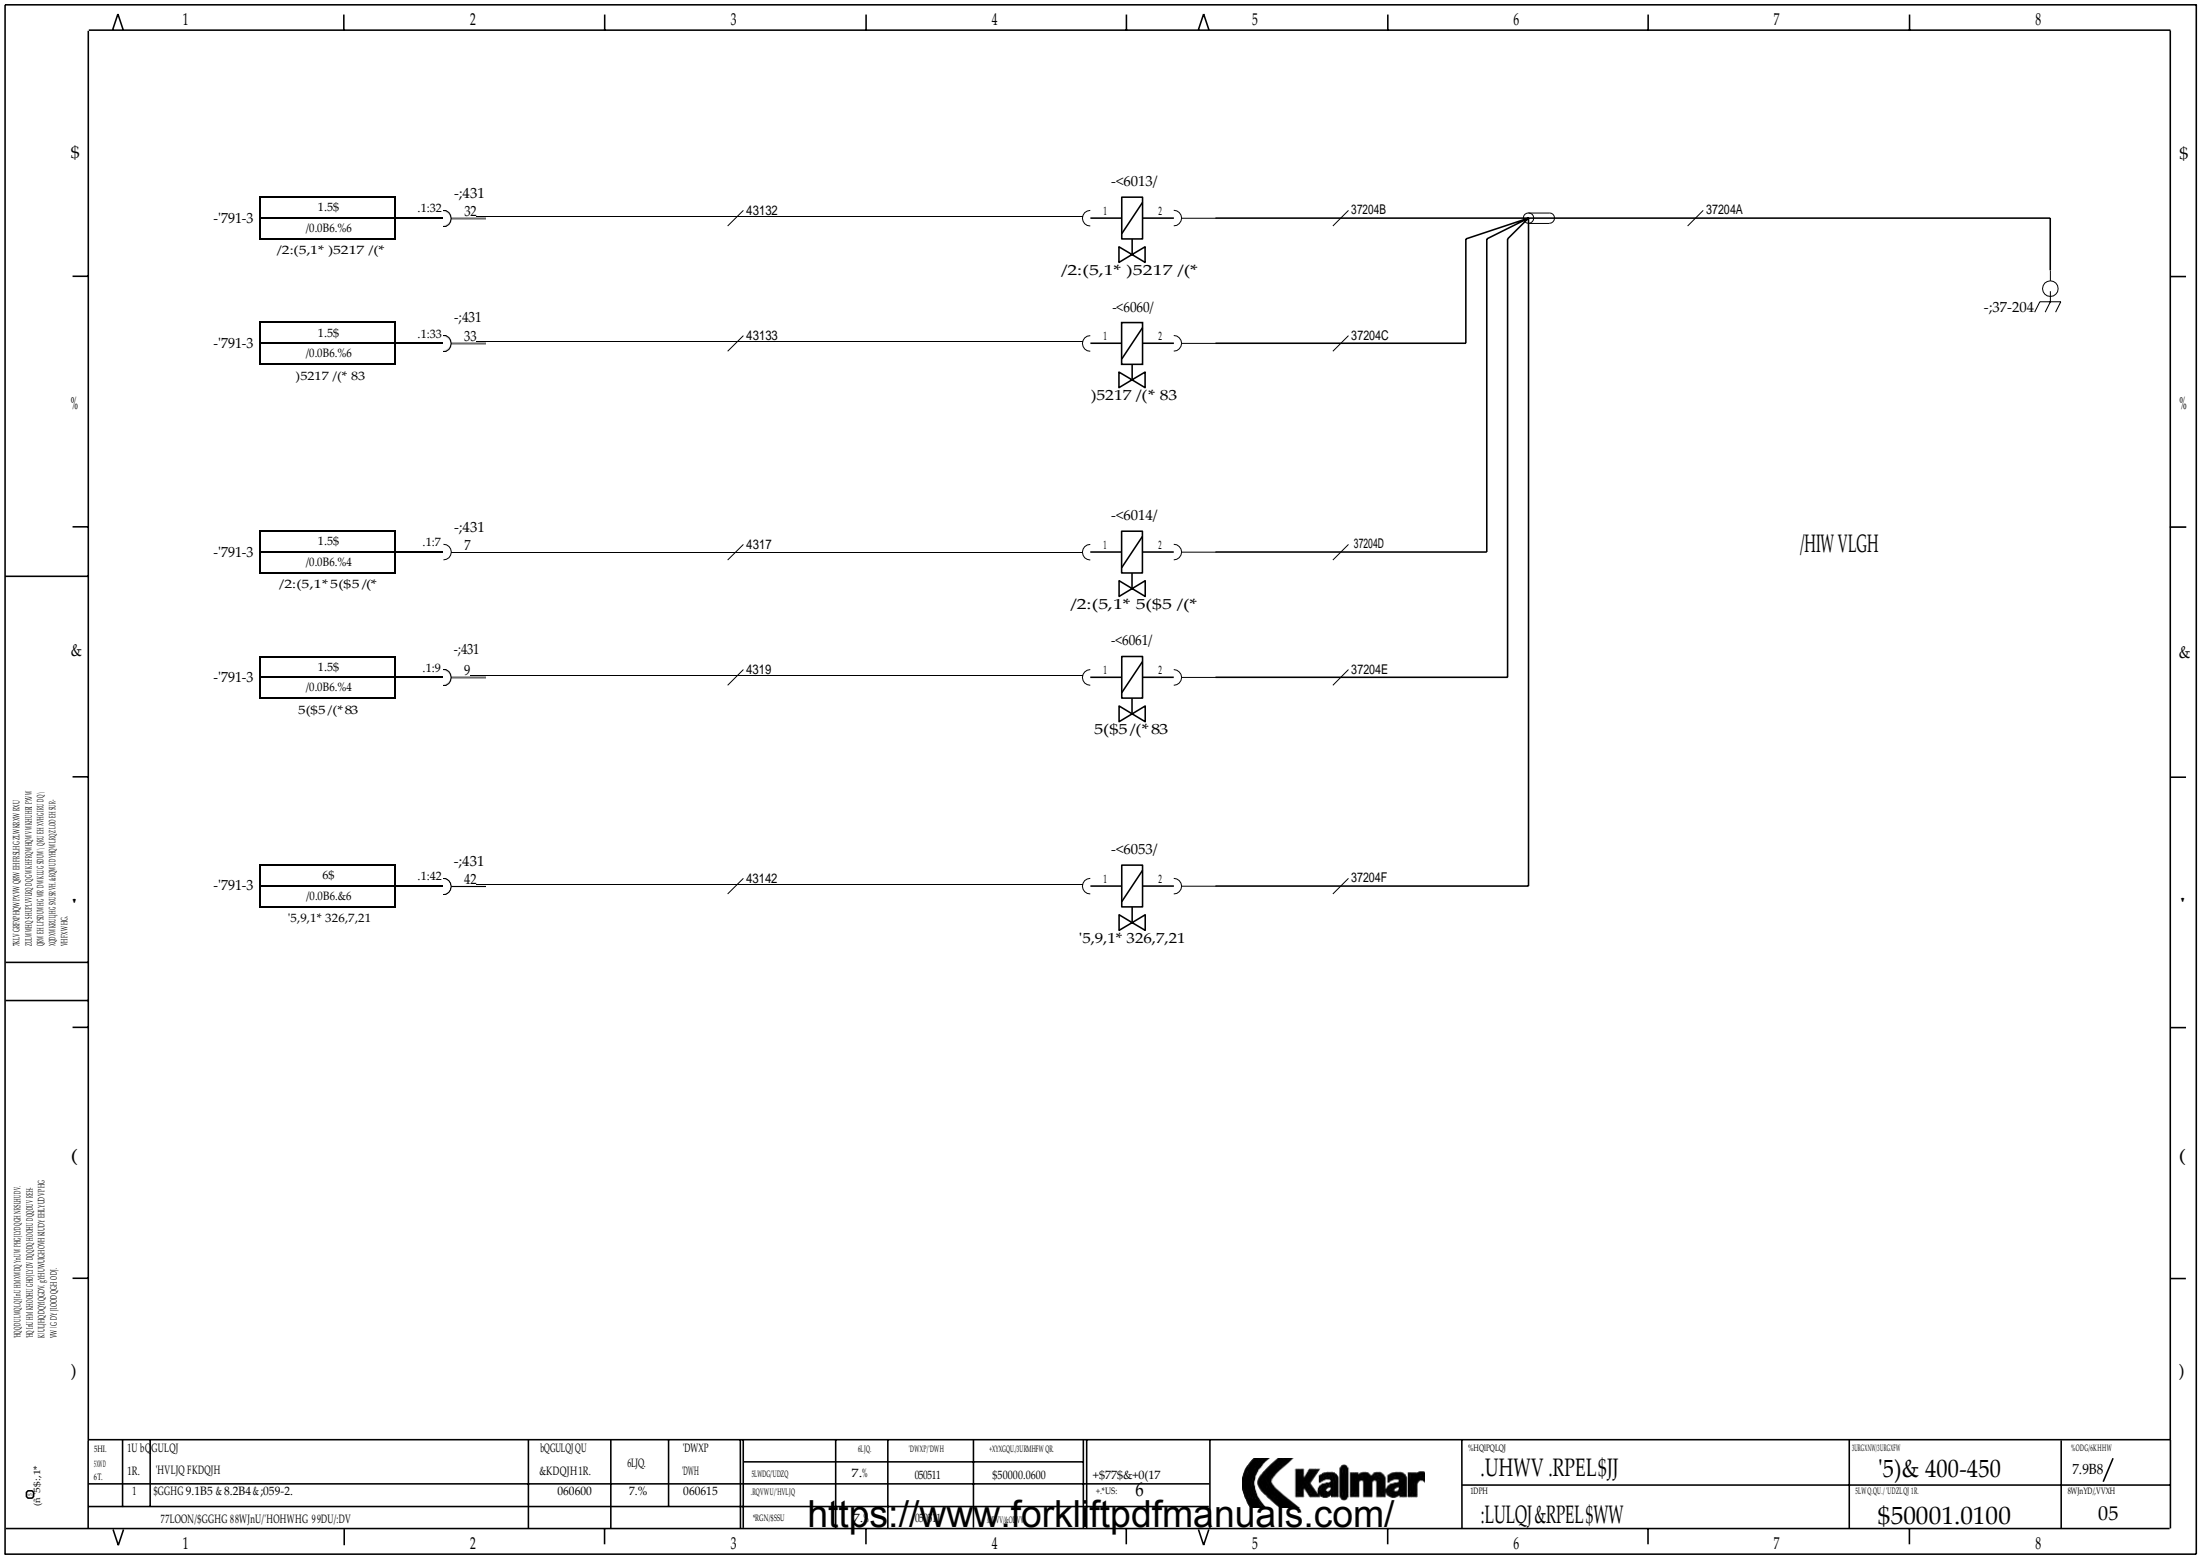


1. ALLE OPLETTINGEN VAN DEZE SCHEMATEKENINGEN ZIJN VERPLICHT TE WORDEN TOEGELIJDEN BIJ DE TECHNISCHE TOEGANGSRECHTEN VAN DE VERPLICHTENDE PARTIJ.

2. DE VERPLICHTENDE PARTIJ AANVAKT NIET AANSPRAKELIJK VOOR SCHADE VAN WELKE NATURE OOK AAN GEGEBEN OF TOEGEBODEN TOEGANGSRECHTEN.

| | | | | | | | | | | | | | |
|-------------------------------------|-------------------------------|-----------|--------|-----|----------|-----------------|-------------|----------|--------------------|-----------------|--------------|-----------|--------|
| SH | 1U K CULQJ | KQULQJ QU | DWXP | 6LQ | DWXP/DWH | -XDCQJLUBHFF QJ | +S77S&+0(17 | *HQPQLQJ | .UHWV .RPEL\$JJ | *KCNWJDCJW | '5)& 400-450 | *ODCJNHW | 7.9B8/ |
| IR | HVLQJ FKDQJH | &KDQJH IR | DWH | 7.% | 050511 | \$50000.0600 | +M.S. 6 | IDPH | :LULQJ & RPEL \$WW | SLWQJL/UDZQJ IR | \$50001.0100 | HWYD.VVXH | 05 |
| 1 | SGGHC 9.1B5 & 8.2B4 & .059-2. | 060600 | 060615 | | | | | | | | | | |
| 77LOON/SGGHC 88VJmL/HHWHHC 99DUJ/DV | | | | | | | | | | | | | |



<https://www.forkliftpdfmanuals.com/>

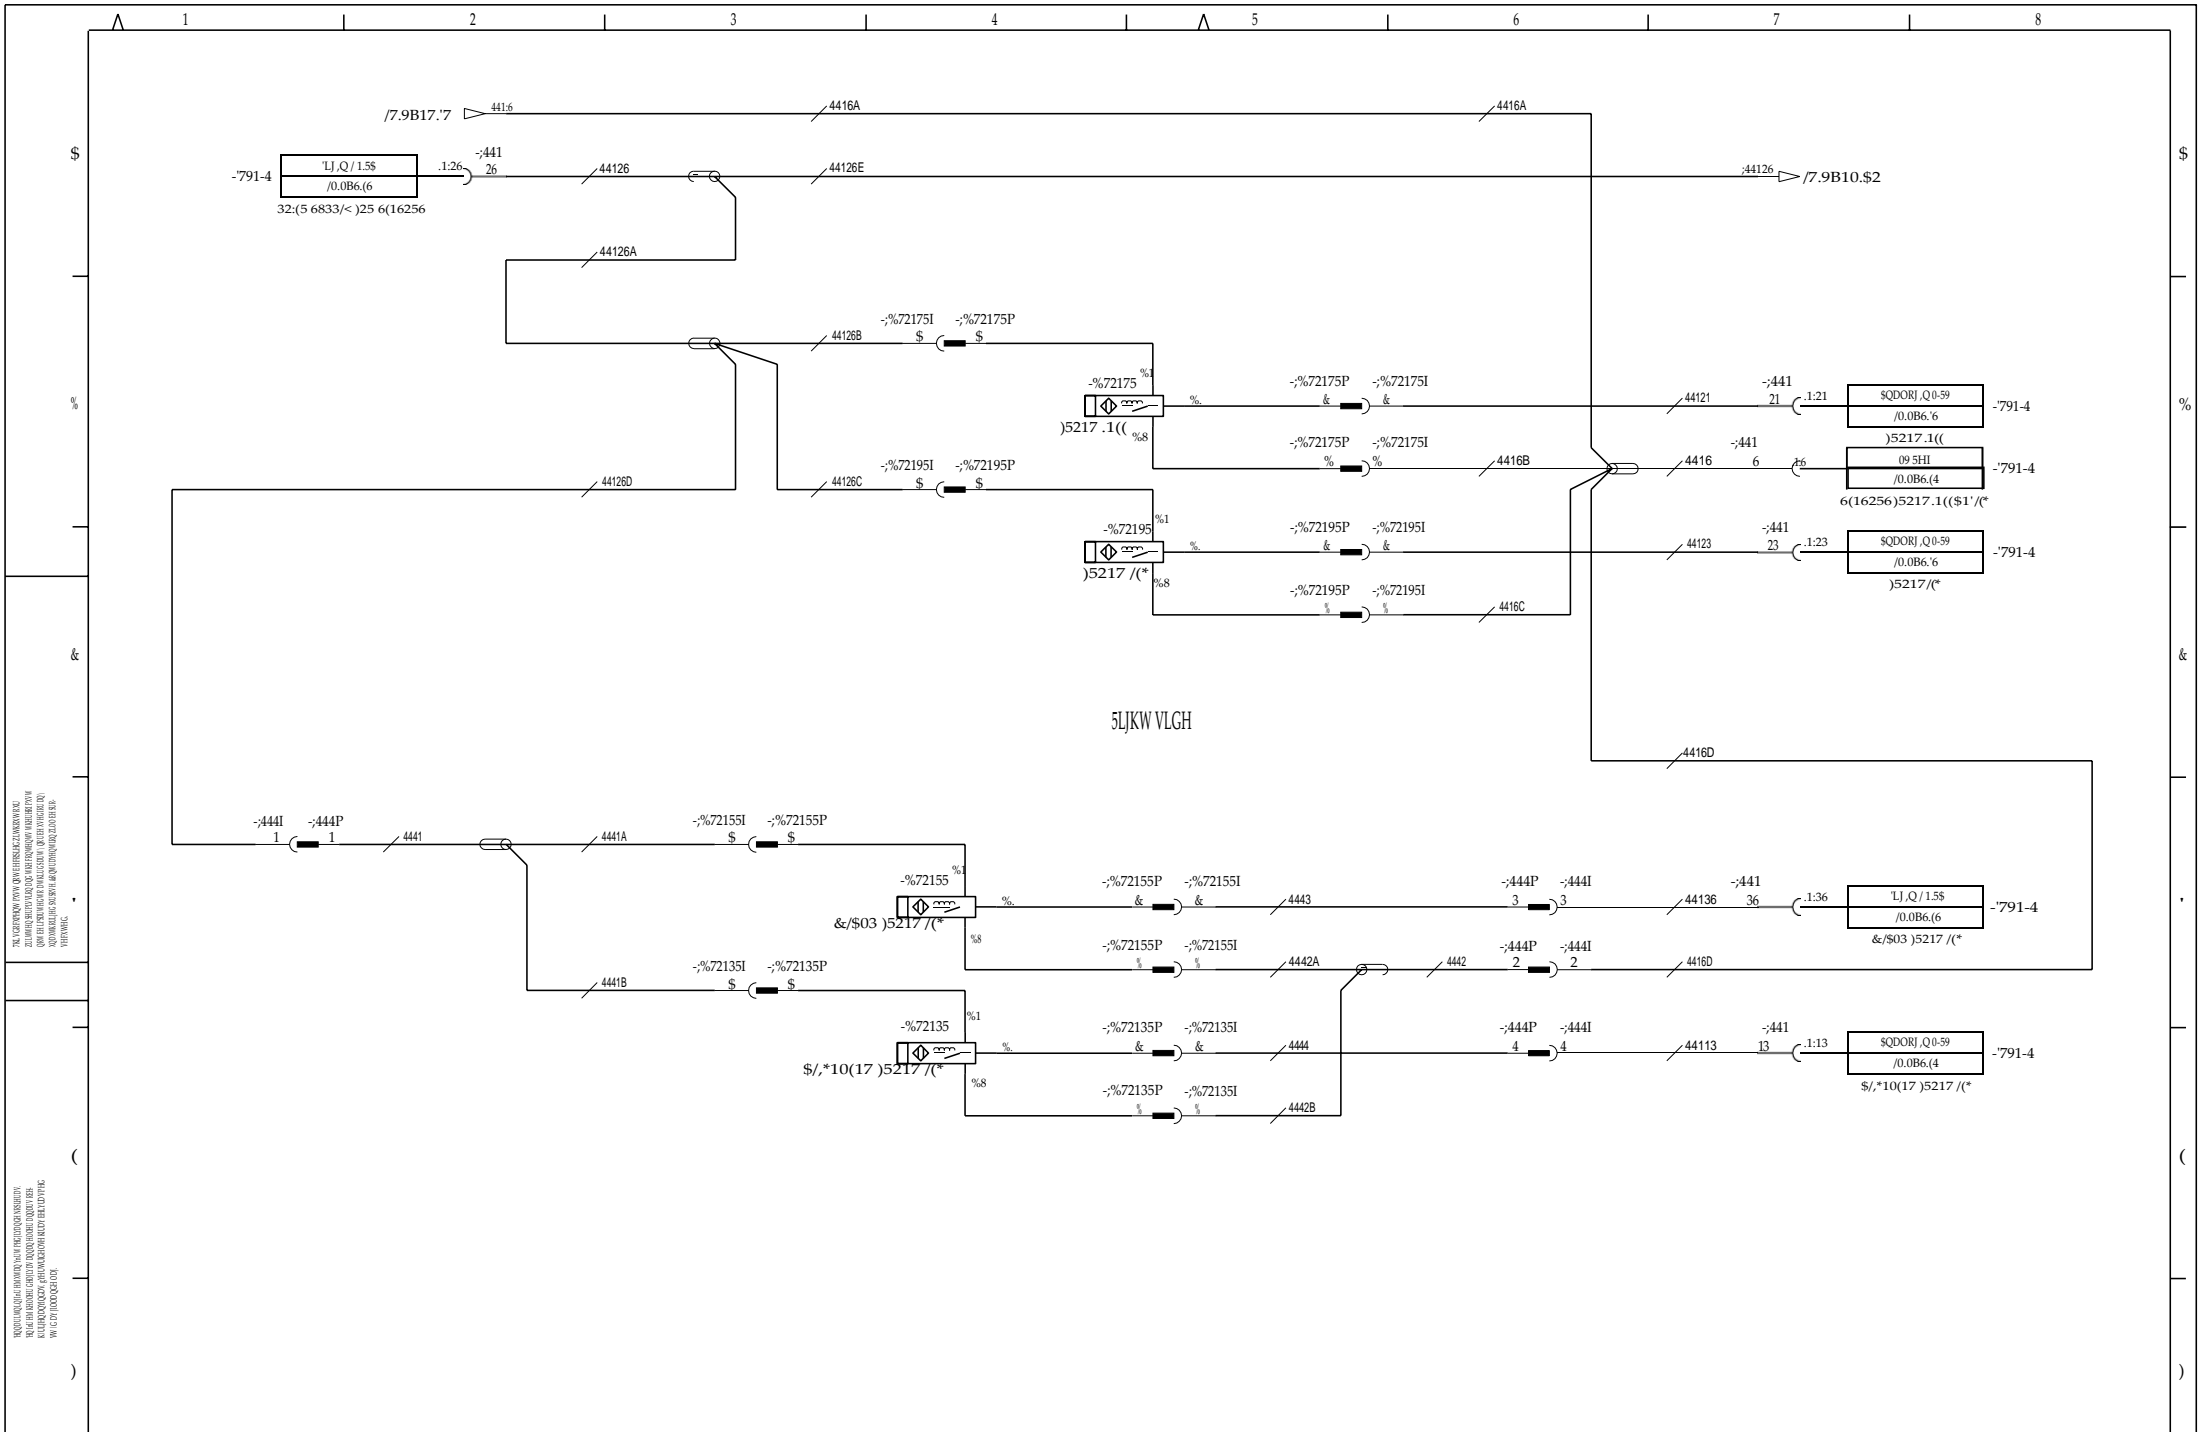

THE INFORMATION CONTAINED HEREIN IS THE PROPERTY OF KALMAR AND IS TO BE USED ONLY FOR THE PURPOSES SPECIFIED HEREIN. NO OTHER USES ARE PERMITTED WITHOUT THE WRITTEN PERMISSION OF KALMAR.

THIS DOCUMENT IS THE PROPERTY OF KALMAR AND IS TO BE USED ONLY FOR THE PURPOSES SPECIFIED HEREIN. NO OTHER USES ARE PERMITTED WITHOUT THE WRITTEN PERMISSION OF KALMAR.


| | | | | | | | | | | | | | |
|--------------------------------------|-------------|--------------------------------|-----------------------|-------|------------|-----------|---------|----------------|--------------|-------------|-----------------------------|------------------------------|--------------------|
| SHD
ST. | 1U b
IR. | CULQJ
HVLQ FKDJH | IQQLQJ QU
&KDJH IR | 6LJQ. | DWP
DWH | 6LQ | DWP/DWH | QXQLQJLHDFH Q. | + | \$77S&+0(17 | SHQPOLQJ
.UHWV .RPEL\$JJ | SHQPOLQJ
'5)& 400-450 | SQOGKSHH
7.9B9/ |
| 1 | 1 | \$GGHG 9.1B5 & 8.2B4 & .059-2. | 060600 | 7.0% | 060615 | 8LWQJLWZQ | 7.0% | 050511 | \$50000.0600 | +M.S. 6 | LDPH
:LULQJ &RPEL \$WW | SLWQJLWZQ IR
\$50001.0100 | SHWBYELVYAH
05 |
| 77LOON/SGGHC 8 8WJnU/HOHWHG 9 9DU/DV | | | | | | | | | | | | | |




<https://www.forkliftpdfmanuals.com/>

THE INFORMATION CONTAINED HEREIN IS THE PROPERTY OF KALMAR AND IS NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM.

THIS DOCUMENT IS THE PROPERTY OF KALMAR AND IS NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM.

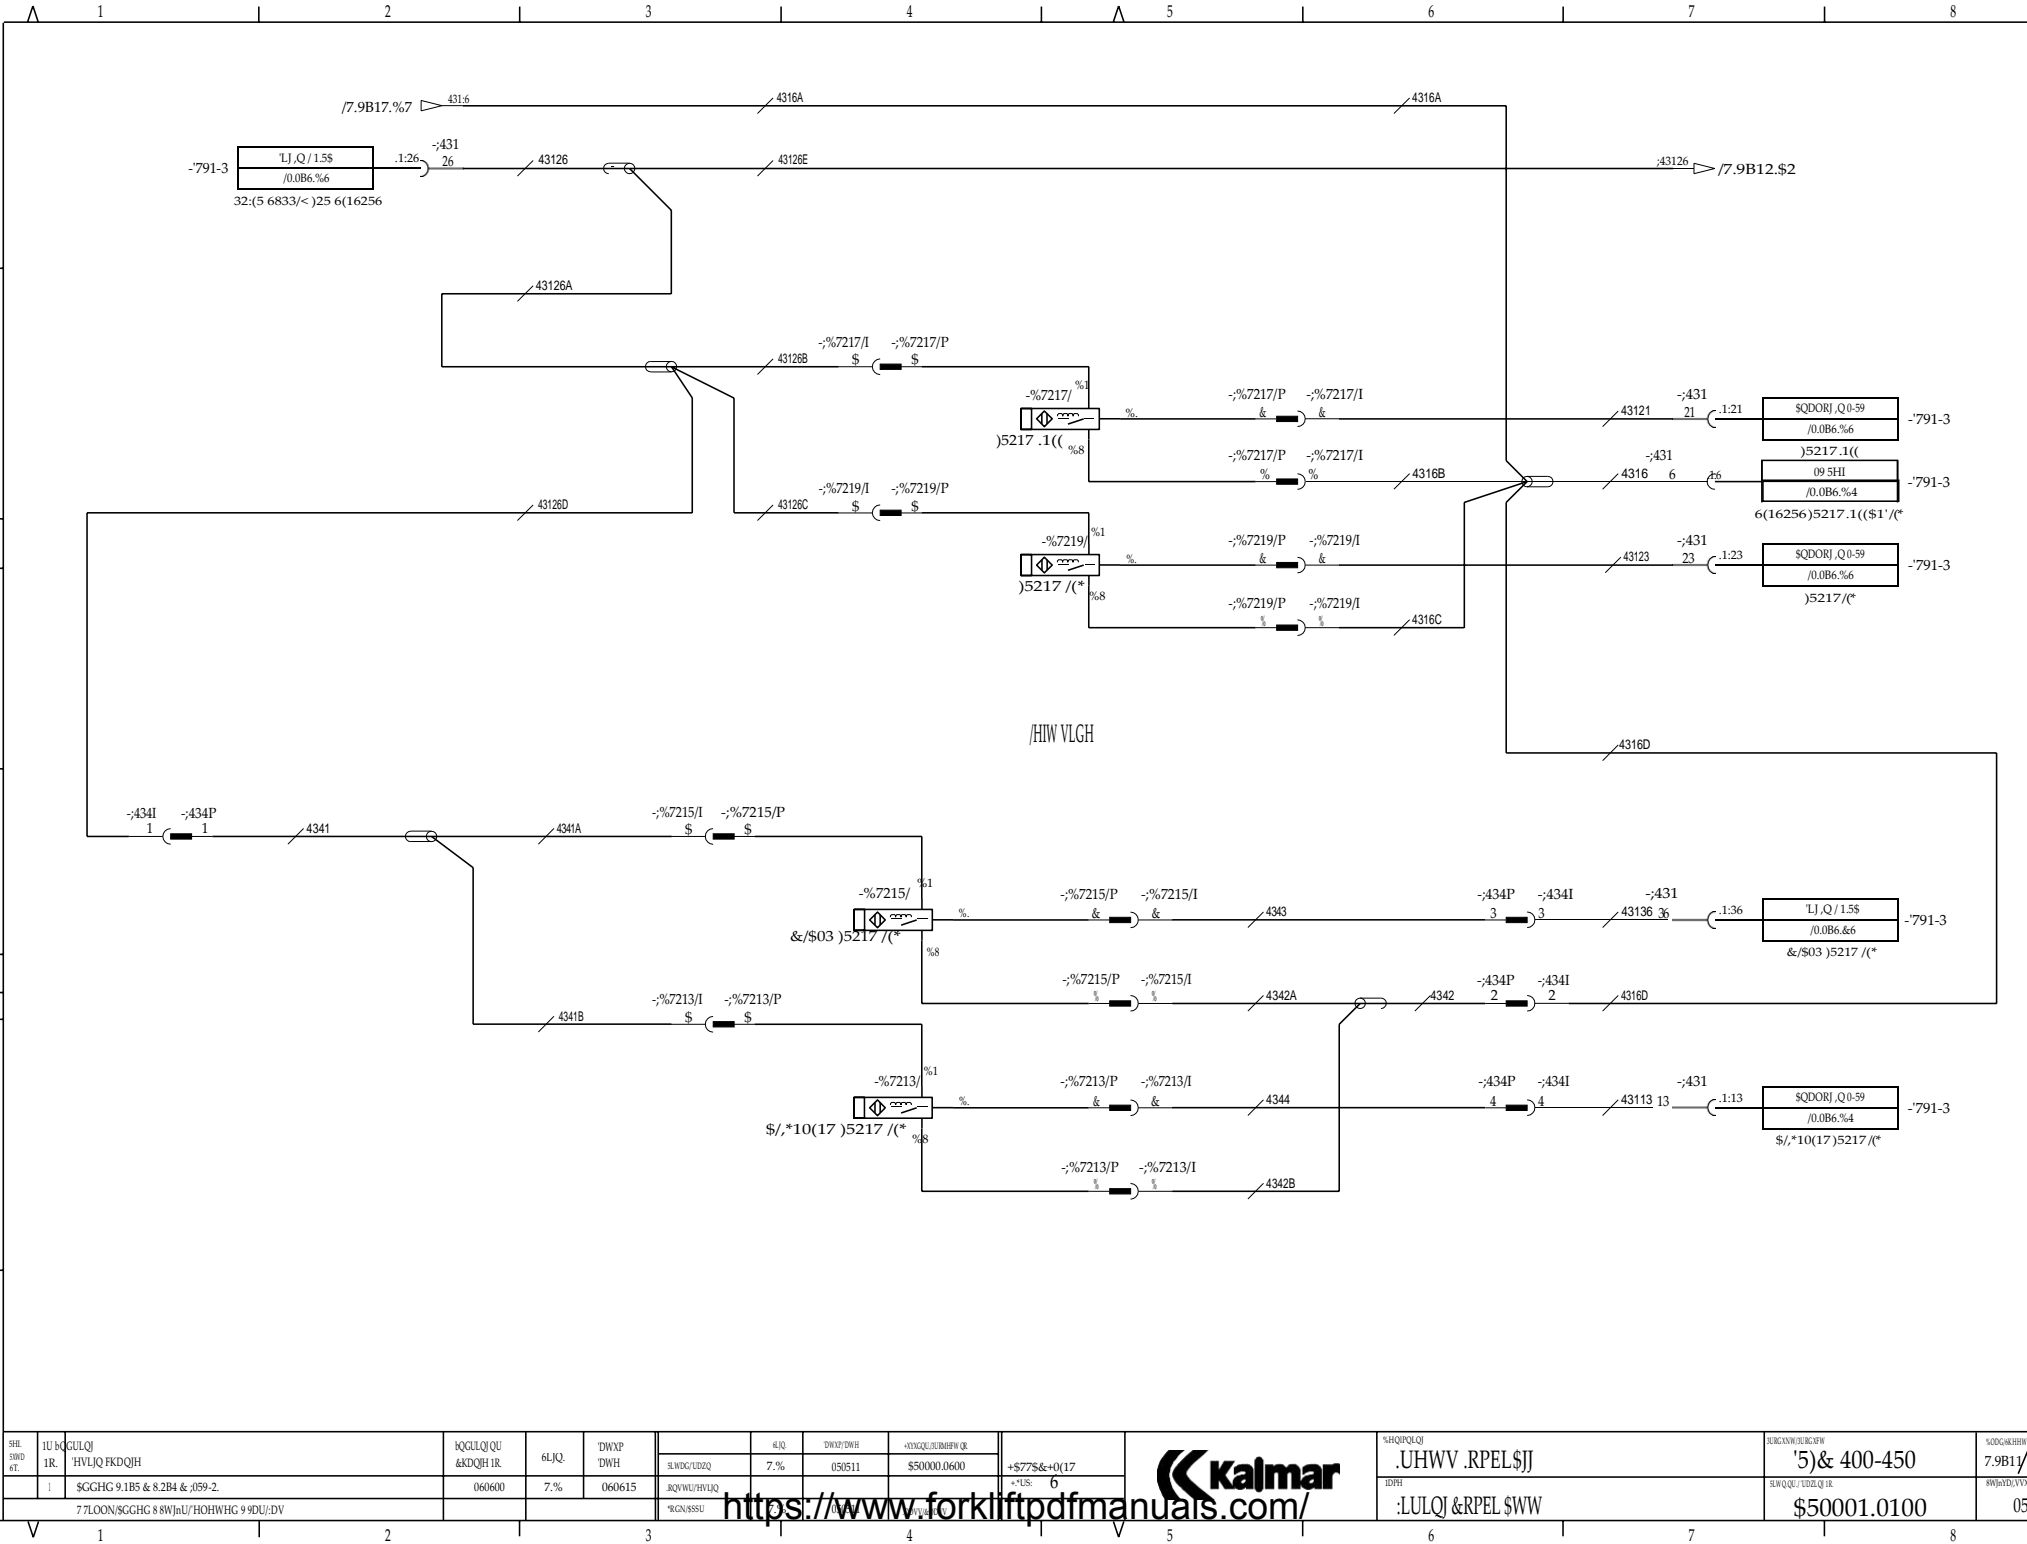

<https://www.forkliftpdfmanuals.com/>

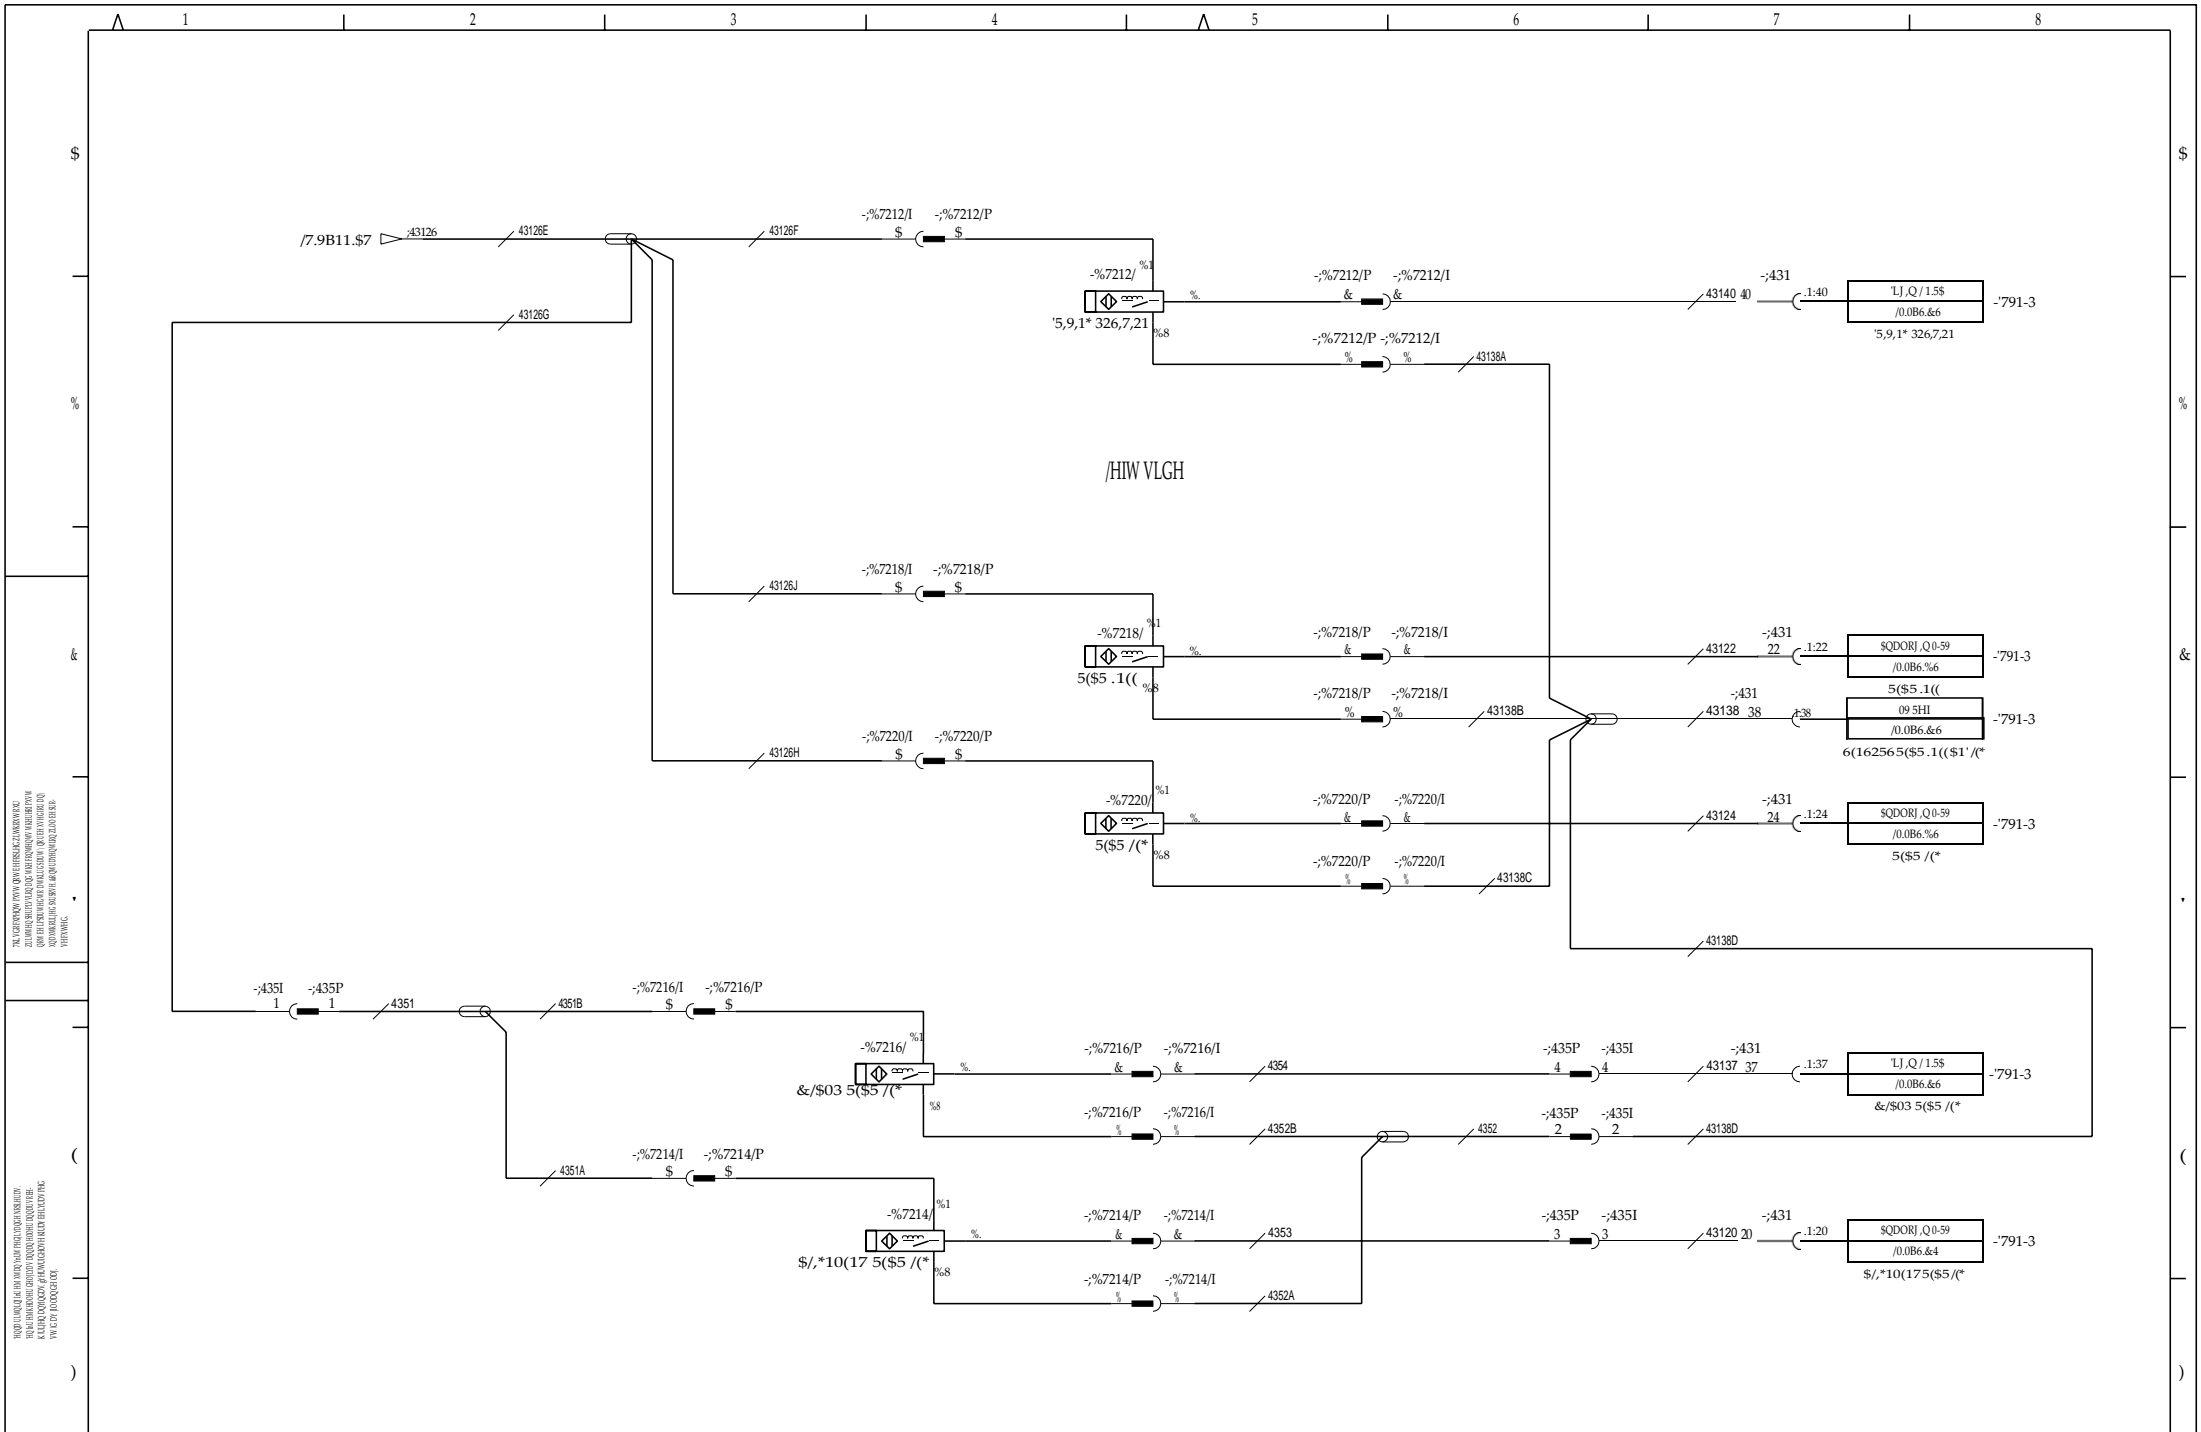


THE INFORMATION CONTAINED HEREIN IS THE PROPERTY OF KALMAR. IT IS TO BE USED ONLY FOR THE PURPOSES SPECIFIED HEREIN. NO PART OF THIS PUBLICATION IS TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM.

THIS DOCUMENT IS THE PROPERTY OF KALMAR. IT IS TO BE USED ONLY FOR THE PURPOSES SPECIFIED HEREIN. NO PART OF THIS PUBLICATION IS TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM.

| | | | | | | | | | | | | |
|---------------------------------------|-------------|--------------------------------|------------------------|-------|-------------|------------|----------|-----------------|--------------------------|-----------------------------|--------------------------------|----------------------|
| SHD
ST. | 1U b
1R. | CULQJ
HVLQJ FKDJH | IQGULQJ QU
&KDJH IR | 6LJQ. | DWXP
DWH | 4LQ | DWXP/DWH | 4XGULQJ/DHFW QK | | %HQPOLOJ
.UHWV .RPEL\$JJ | %ODUNRSHW
'5)& 400-450 | %ODUNRSHW
7.9B12/ |
| | 1 | \$GCHG 9.1B5 & 8.2B4 & .059-2. | 060600 | 7.0% | 060615 | SLWDG/LBZQ | 050511 | \$50000.0600 | +\$77\$&+0(17
+*LS. 6 | IDPH
:LULQJ &RPEL \$WW | SLWQQJ/LBZQ IR
\$50001.0100 | SWHBYELVYAH
05 |
| 77L00N/SGCHG 8 8WJnU/HOHWHG 9 9DUU/DV | | | | | | | | | | | | |



<https://www.forkliftpdfmanuals.com/>

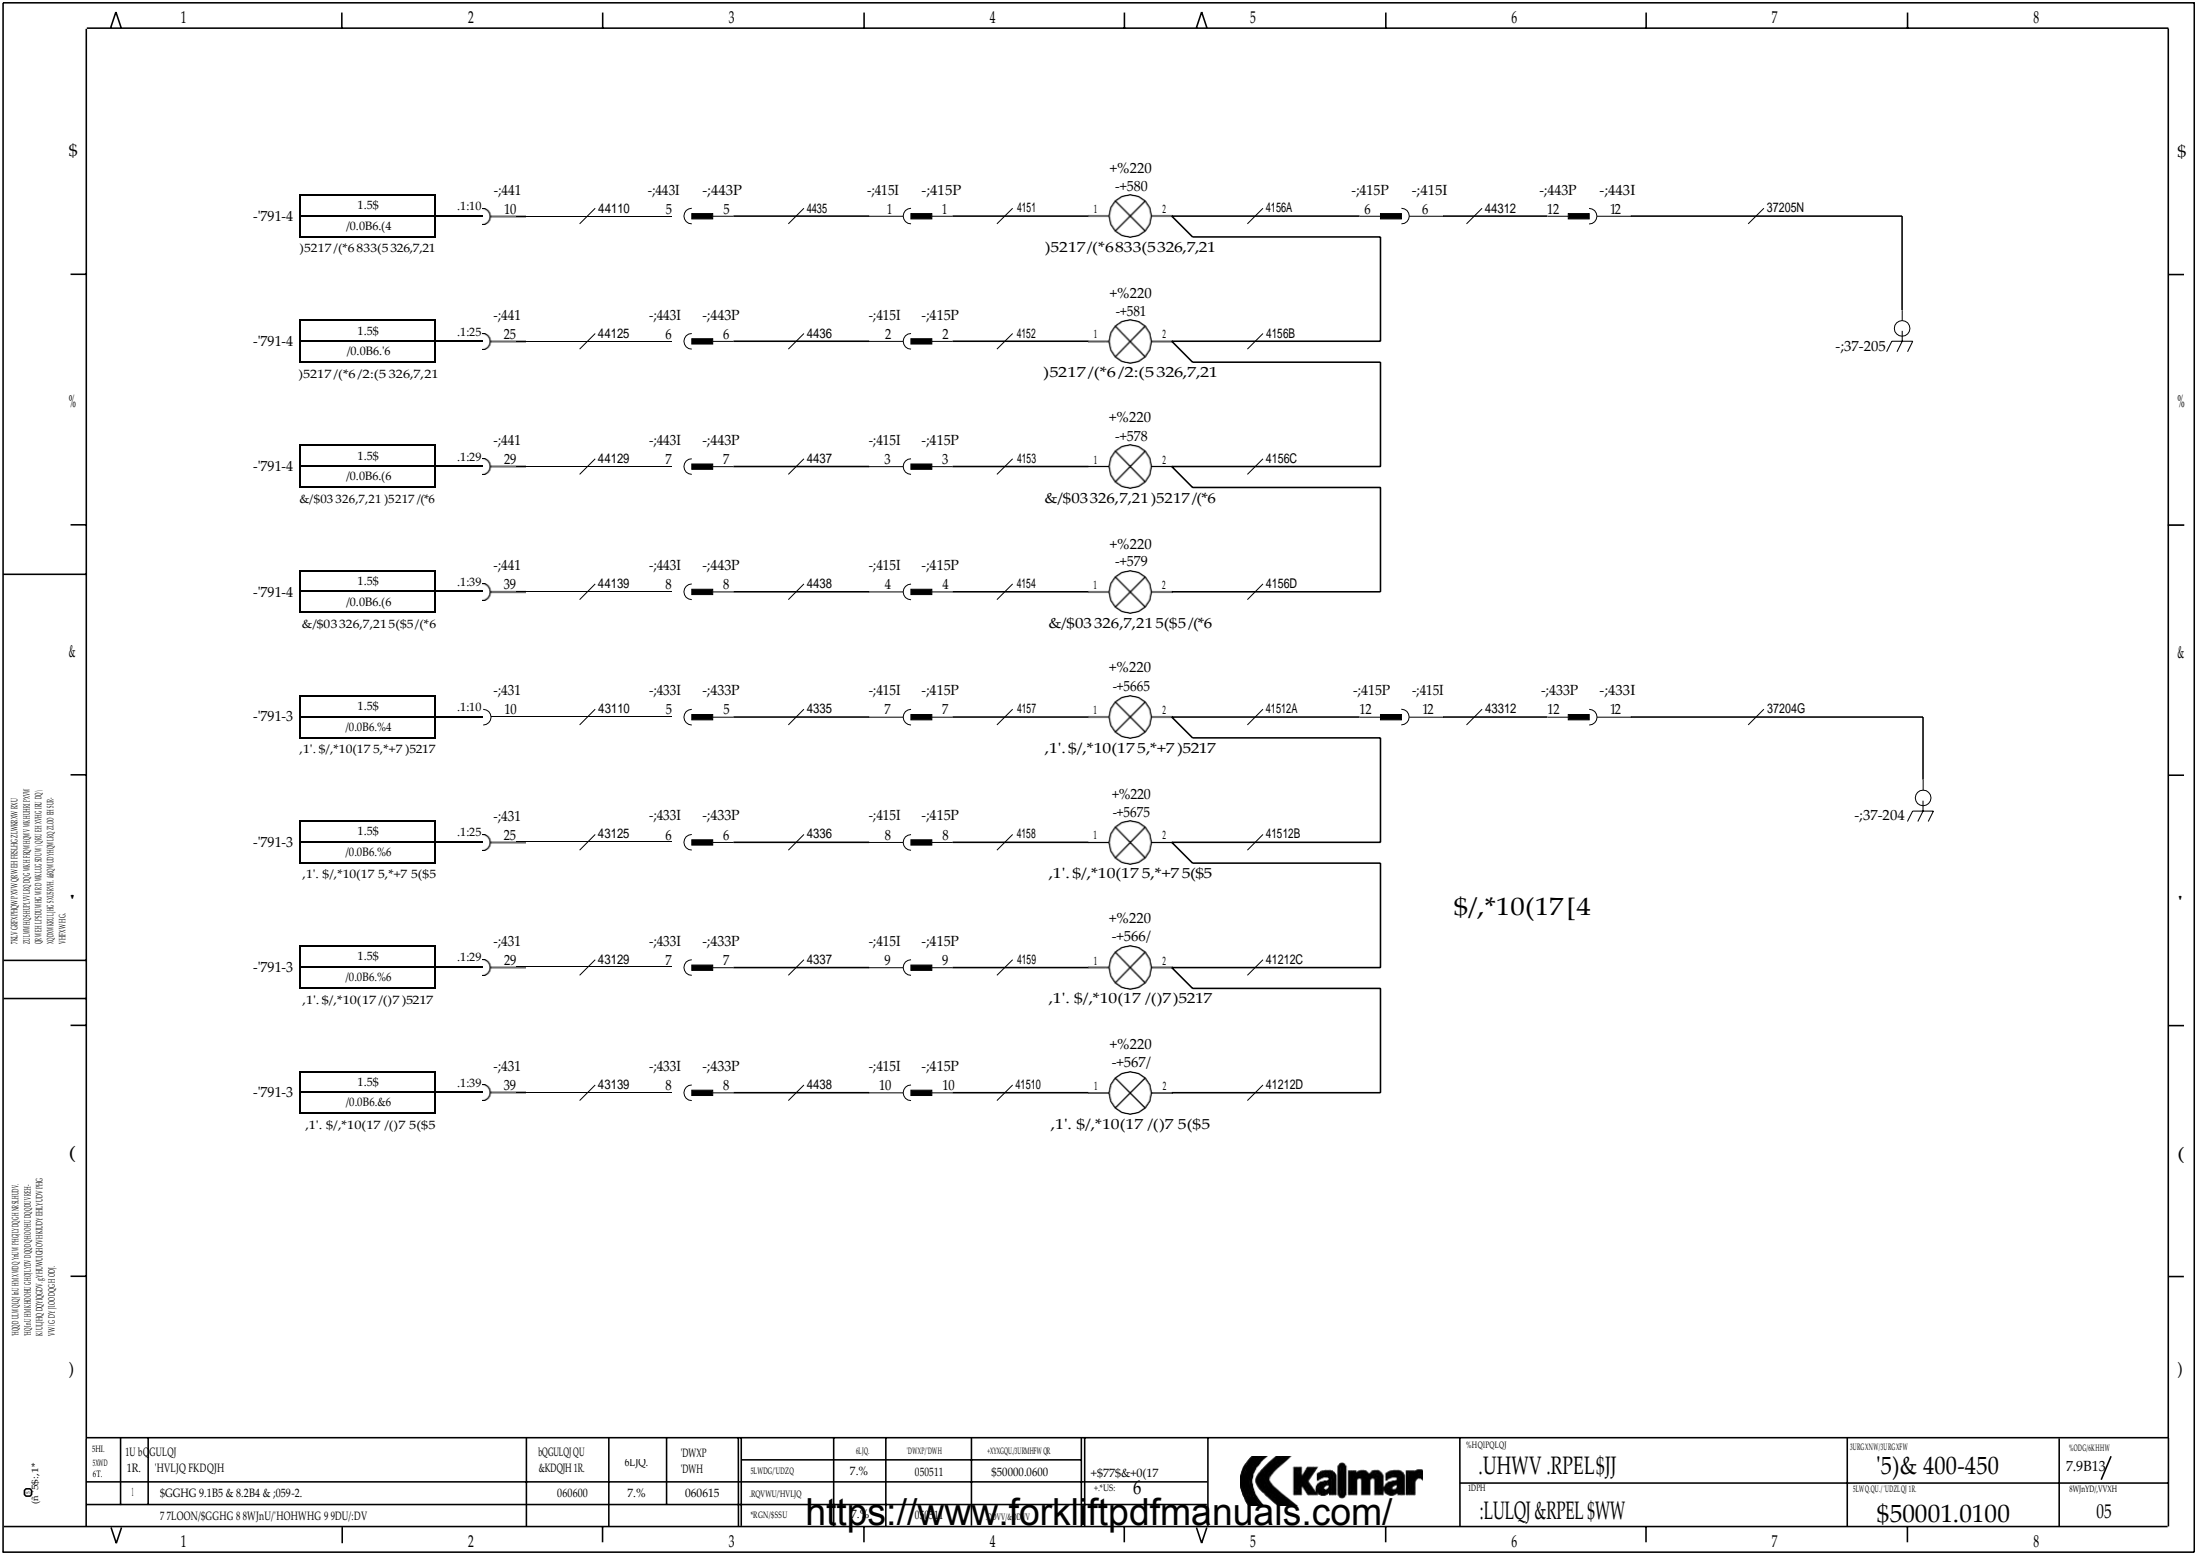


THE COMPANY SHALL BE RESPONSIBLE FOR THE DESIGN AND CONSTRUCTION OF THE FORK LIFT AND SHALL BE RESPONSIBLE FOR THE DESIGN AND CONSTRUCTION OF THE FORK LIFT AND SHALL BE RESPONSIBLE FOR THE DESIGN AND CONSTRUCTION OF THE FORK LIFT.

THE COMPANY SHALL BE RESPONSIBLE FOR THE DESIGN AND CONSTRUCTION OF THE FORK LIFT AND SHALL BE RESPONSIBLE FOR THE DESIGN AND CONSTRUCTION OF THE FORK LIFT AND SHALL BE RESPONSIBLE FOR THE DESIGN AND CONSTRUCTION OF THE FORK LIFT.

| | | | | | | | | | | | |
|-----------|-----------|--------------------------------------|-----------------------|------|-------------|-----|----------|-----------------|---------------------------|-----------------------------------|------------------------------|
| SH
ST. | 1U
IR. | CULQJ
HVLQ FKDJH | IQULQJ QU
&KDJH IR | 6LJQ | DWXP
DWH | 6LQ | DWXP/DWH | QXQJLQJLHFWU QK | SHQJLQJ
.UHWV .RPEL\$J | SHQJLQJLHFWU
'5)& 400-450 | QXQJLQJLHFWU
7.9B13/ |
| | 1 | \$GCHG 9.1B5 & 8.2B4 & .059-2. | 060600 | 7% | 060615 | | 030511 | \$50000.0600 | +\$775&+0(17
+15.6 | SHQJLQJLHFWU
:LULQJ &RPEL \$WW | SHQJLQJLHFWU
\$50001.0100 |
| | | 77LOON/SGCHG 8 8WJNU/HOHWHG 9 9DU/DV | | | | | | | | | SHQJLQJLHFWU
05 |



<https://www.forkliftpdfmanuals.com/>

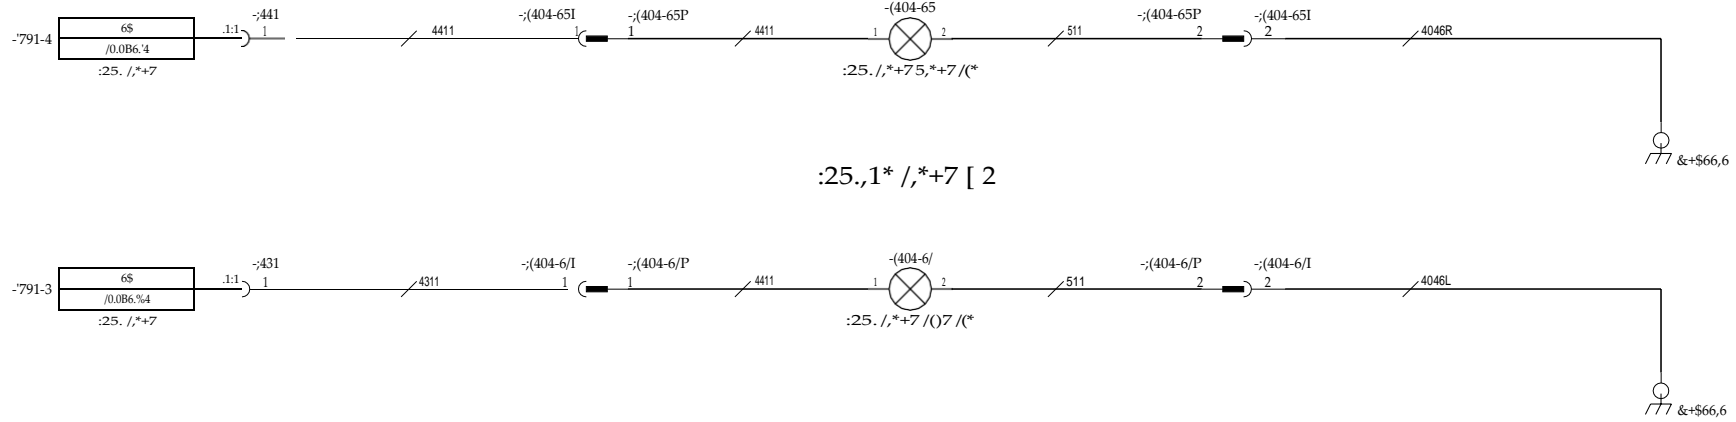

791-4
6S
/0.086.4
:25. /,*+7

791-4
6S
/0.086.4
:25. /,*+7


791-3
6S
/0.086.4
:25. /,*+7

| | | | | | | | | | |
|----|------------------------------------|-----------|--------|-----|----------|-----------------|---------------|---------------------|--------------|
| SH | 1U K CULQJ | KQULQJ QU | DWXP | 6LQ | DWXP/DWH | +XDCQJLUBHPP QK | | 4HQPCQJ | 5ODGKSHHW |
| IR | HVLQJ FKDQJH | &KDQJH IR | DWH | 7% | 050511 | \$50000.0600 | +\$77\$&+0(17 | .UHWV .RPEL\$JJ | '5)& 400-450 |
| 1 | SCGHC 9.1B5 & 8.2B4 & .059-2. | 060600 | 060615 | 7% | | | +*US. 6 | | 7.9B14/ |
| | 77LOON/SCGHC 88VJmL/HOHWHC 99DU/DV | | | | | | | :LULQJ & RPEL \$WWW | \$50001.0100 |
| | | | | | | | | | 05 |



<https://www.forkliftpdfmanuals.com/>


THE INFORMATION CONTAINED HEREIN IS THE PROPERTY OF KALMAR AND IS TO BE USED ONLY FOR THE PURPOSES SPECIFIED IN THE TITLE. IT IS NOT TO BE REPRODUCED, COPIED, OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM, WITHOUT THE WRITTEN PERMISSION OF KALMAR.

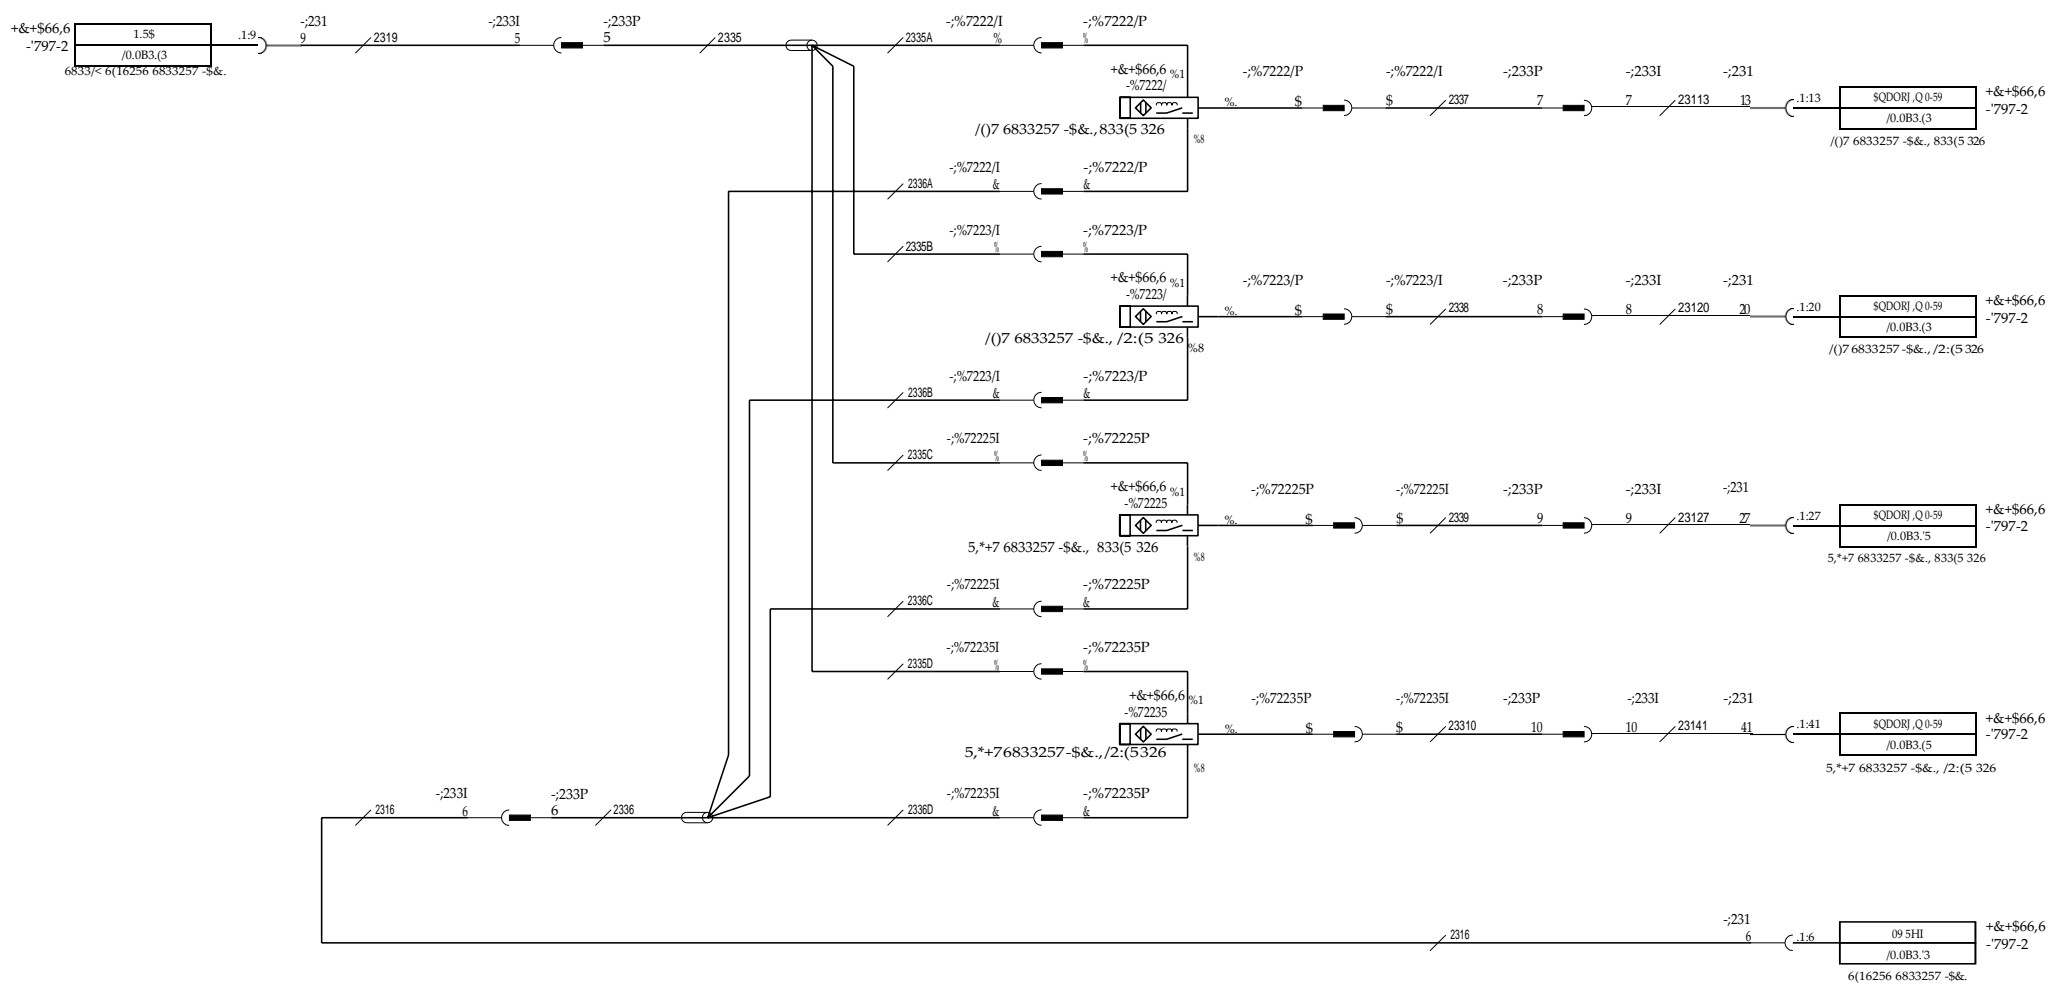

| | | | | | | | | | | | | | |
|----------------------------------------|----------|-------------------------------|-----------------------|------|-------------|-------------|----------|----------------|----------------------------------|-----------------|--------------|-------------|---------|
| SHL
3WD
AT | 1U
IR | COLQJ
HVLQ FKDJH | IQQLQJ QU
&KDQH IR | 6LJQ | DWXP
DWH | 8LQ | DWXP/DWH | ADYQJLUBHFN QJ | SHQJLQJ
.UHWV +\G 6W\GEHQ | 8LQJVVUJLQJFW | '5)& 400-450 | 50DQJREH | 7.10B2/ |
| 1 | 1 | SGGHG 9.1B5 & 8.2B4 & .059-2. | 060600 | 7.7% | 060615 | 8QNWUJFVUJQ | 050511 | \$50000.0600 | ADPH
:LULQJ +\G 6XSSRUW MDFNV | 8LWQJL/DZLQJ IR | \$50001.0100 | 8WJBYE VVXH | 05 |
| 7 LLOON/SGGHG 8 8WJNU/HOHWHG 9 9DUJ/DV | | | | | | | | | | | | | |



<https://www.forkliftpdfmanuals.com/>

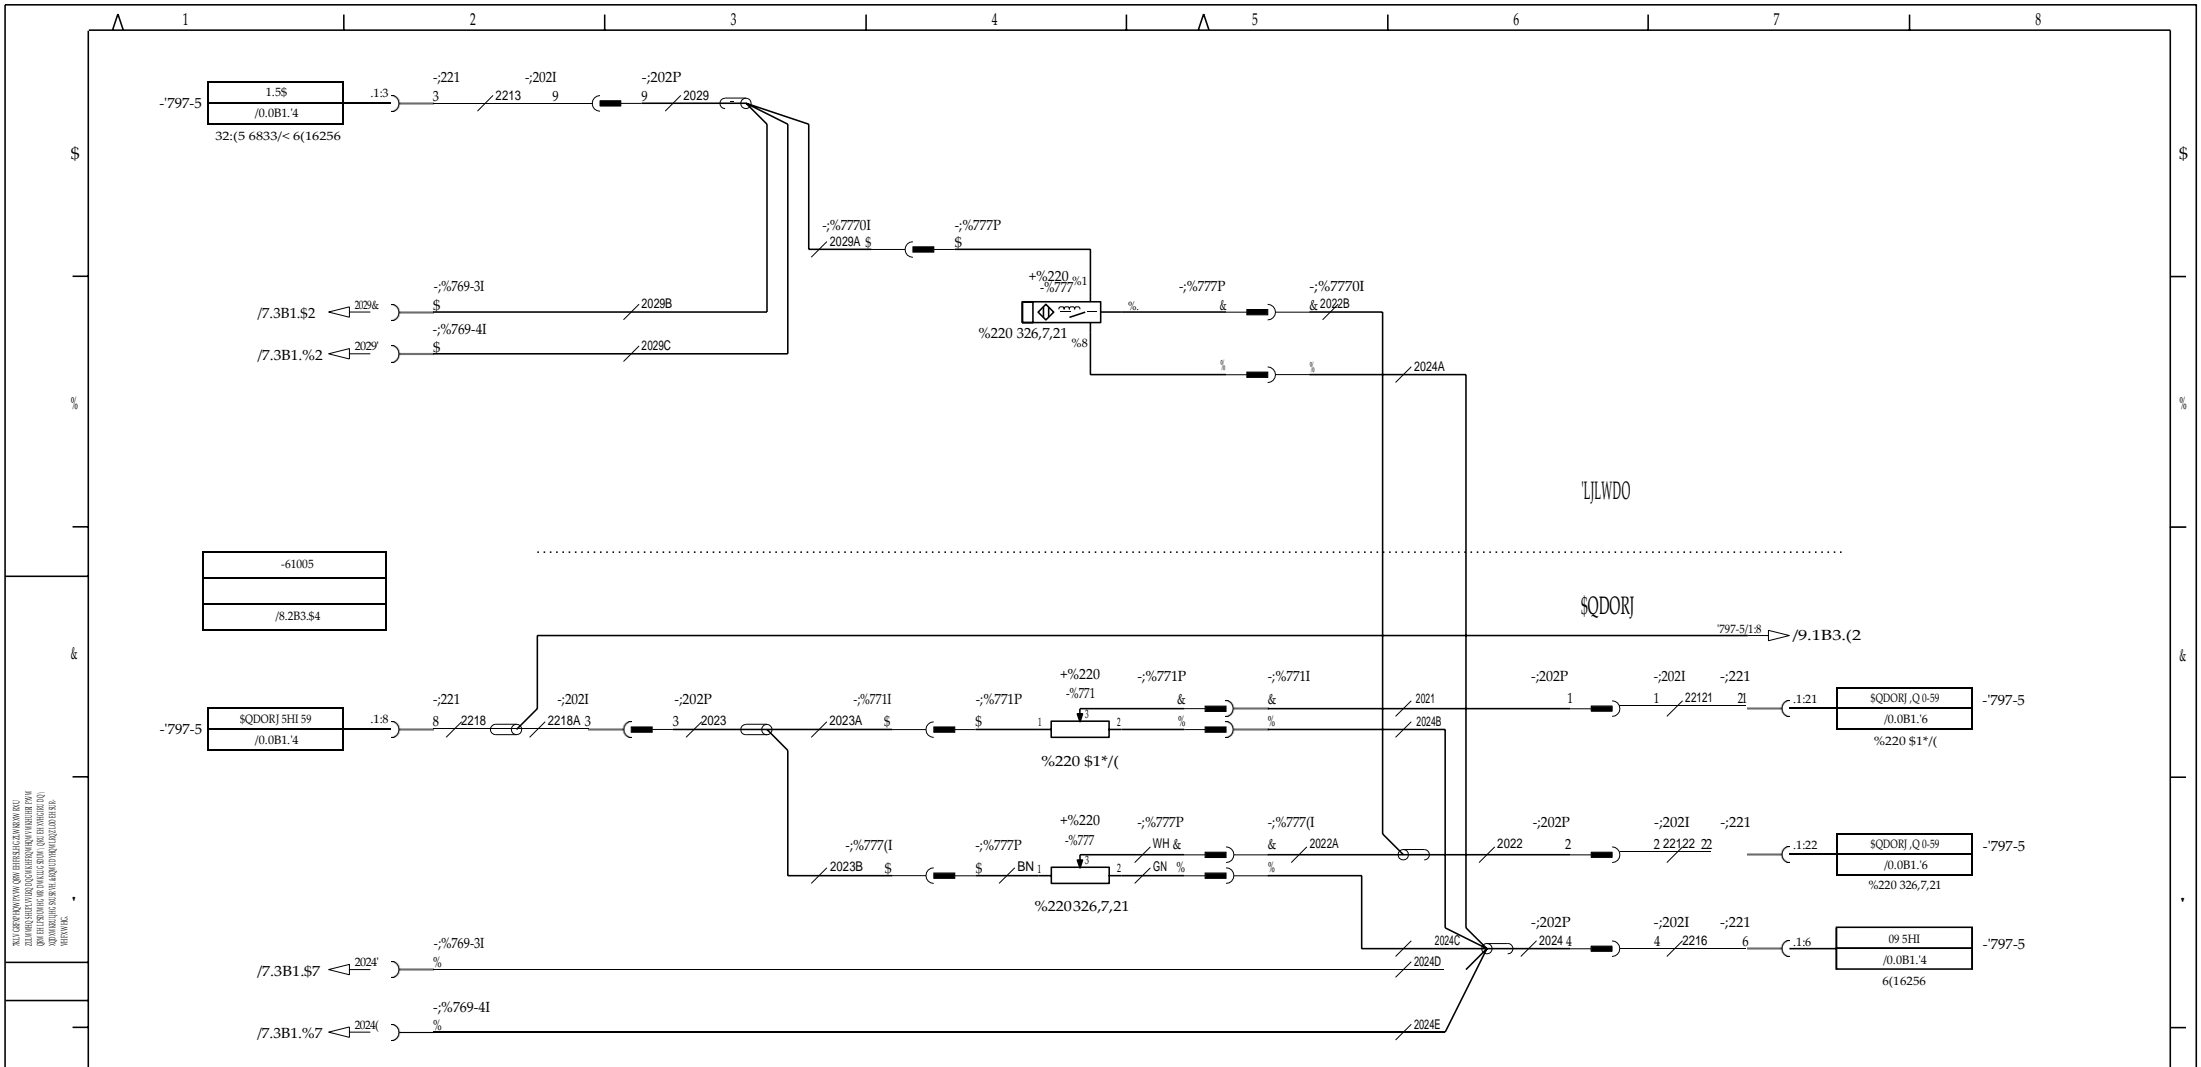

ALL OPERATIONS MUST BE PERFORMED BY A QUALIFIED PERSONNEL ONLY. THE OPERATOR MUST BE TRAINED AND CERTIFIED IN THE USE OF THIS EQUIPMENT. THE OPERATOR MUST READ AND UNDERSTAND THE OPERATING MANUAL BEFORE OPERATING THIS EQUIPMENT.


THIS DOCUMENT IS THE PROPERTY OF KALMAR. IT IS TO BE USED ONLY FOR THE PURPOSES SPECIFIED HEREIN. IT IS NOT TO BE REPRODUCED, COPIED, OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM.

| XQFWLRQ | 6HQVRU | 768-51 | 768-52 | 768-/1 | 768-/2 | \$QDORJ 777 | \$QDORJ 771 | LJLWDO 777 | 7221/72215 | 7224 |
|---------|------------------------------------|--------|----------------|--------|--------|-------------|-------------|------------|------------|------|
| | | 1 | 0HFKDQLFDO. 23 | | | ; | | | | |
| 2 | (0HFWULFDO. 23 | | | ; | | | | | | |
| 3 | '\Q. VFDOH + 0HF. 23 | | | ; | | | | | | |
| 4 |)L[VFDOH + 0HF. 23 | | | ; | | | | | | |
| 5 |)L[VFDOH + \$QDORJ ERRP + 0HF. 23 | | | ; | | | | | | |
| 6 | \$QDORJ ERRP + 0HF. 23 | | | ; | | | | | | |

| | | | | | | | | | | | | |
|--------------------------------------|-------|--------------------------------|----------------------|------|----------|------|----------|---------------|----------------|-------------|--------------|-----------|
| SHI 590 | 1U 1R | CULQJ HVLQJ FKDJH | IQQLQJ QU & KDQJH IR | 6LQJ | DWXP DWH | 6LQ | DWXP DWH | QDQJLURHFW QK | SHQDQJLQJ | SHQDQJLQJ | SHQDQJLQJ | SHQDQJLQJ |
| 1 | 1 | \$GCHG 9.1B5 & 8.2B4 & .059-2. | 060600 | 7.0% | 060615 | 7.0% | 050511 | \$50000.0600 | .UHWV23+9nJ | 5)& 400-450 | 8.2B1/ | 05 |
| 77LOON/SGCHG 8 8WJnU/HOHWHG 9 9DU/DV | | | | | | | | | :LULQJ23+6FDOH | | \$50001.0100 | 05 |



<https://www.forkliftpdfmanuals.com/>

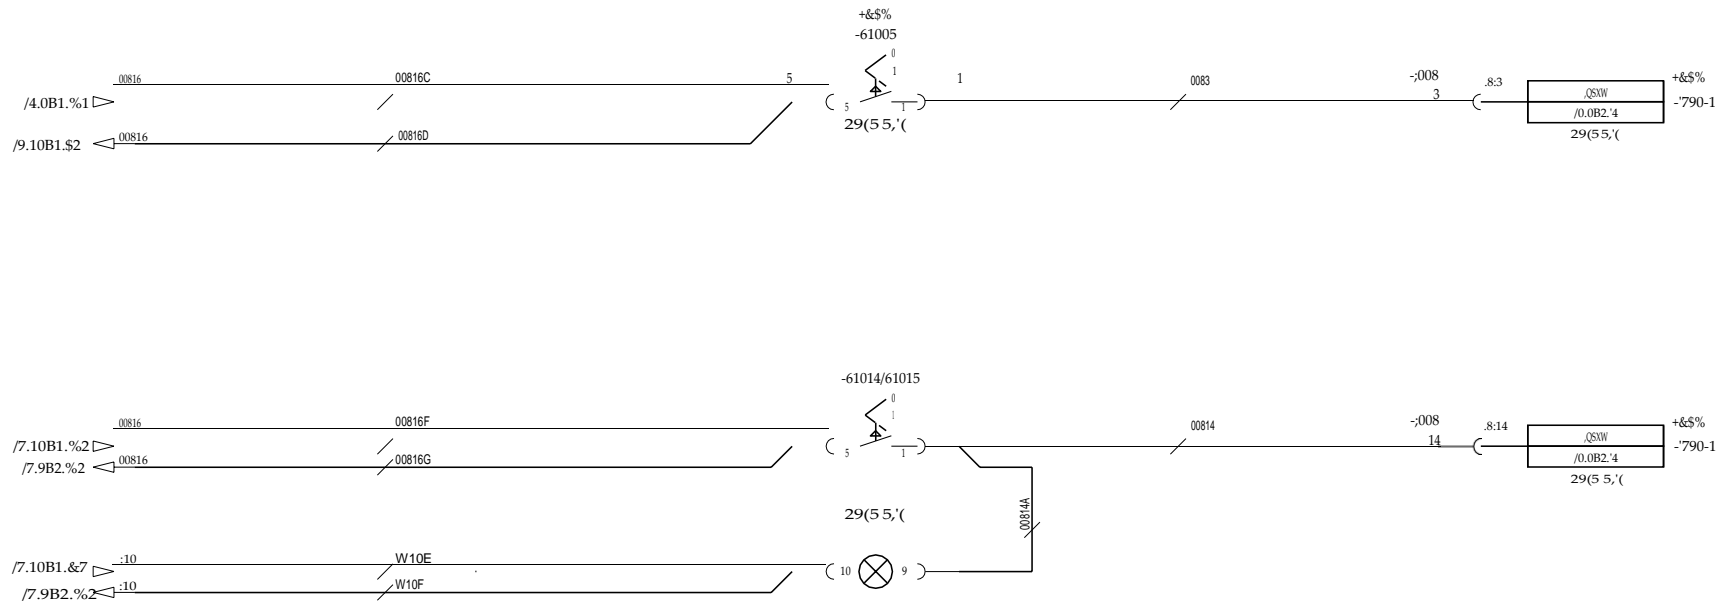


THE INFORMATION CONTAINED HEREIN IS THE PROPERTY OF KALMAR AND IS NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM.

THIS DOCUMENT IS THE PROPERTY OF KALMAR AND IS NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM.

| | | | | | | | | | | | |
|-----|------------|-------------------------------------|------|--------|------|----------|-----------------|--------------|---------------------|-----------------|------------|
| SH | 1U K CULQJ | KQULQJ QU | 6LQJ | DWXP | 6LQJ | DWXP/DWH | -XDCQJLUBHPP QJ | | *KHOPOLQJ | *KCNWUJGKJW | *KODGKJHJW |
| SRQ | IR | HVLQJ FKDQJH | 6LQJ | DWH | 6LQJ | DWH | 050511 | \$50000.0600 | .UHWV)UJELNRSSOLQJ | '5)& 400-450 | 8.2B3/ |
| ST | 1 | SGGHC 9.1B5 & 8.2B4 & .059-2. | 7% | 060615 | 6LQJ | DWH | 050511 | \$50000.0600 | DPH | SWQJLQJLQJ QJ R | HWYD.VVSH |
| | | 77LOON/SGGHC 88VJmL/HHWHHC 99DUJ/DV | | | | | | | :LULQJ 2YHUULGH | \$50001.0100 | 05 |



<https://www.forkliftpdfmanuals.com/>

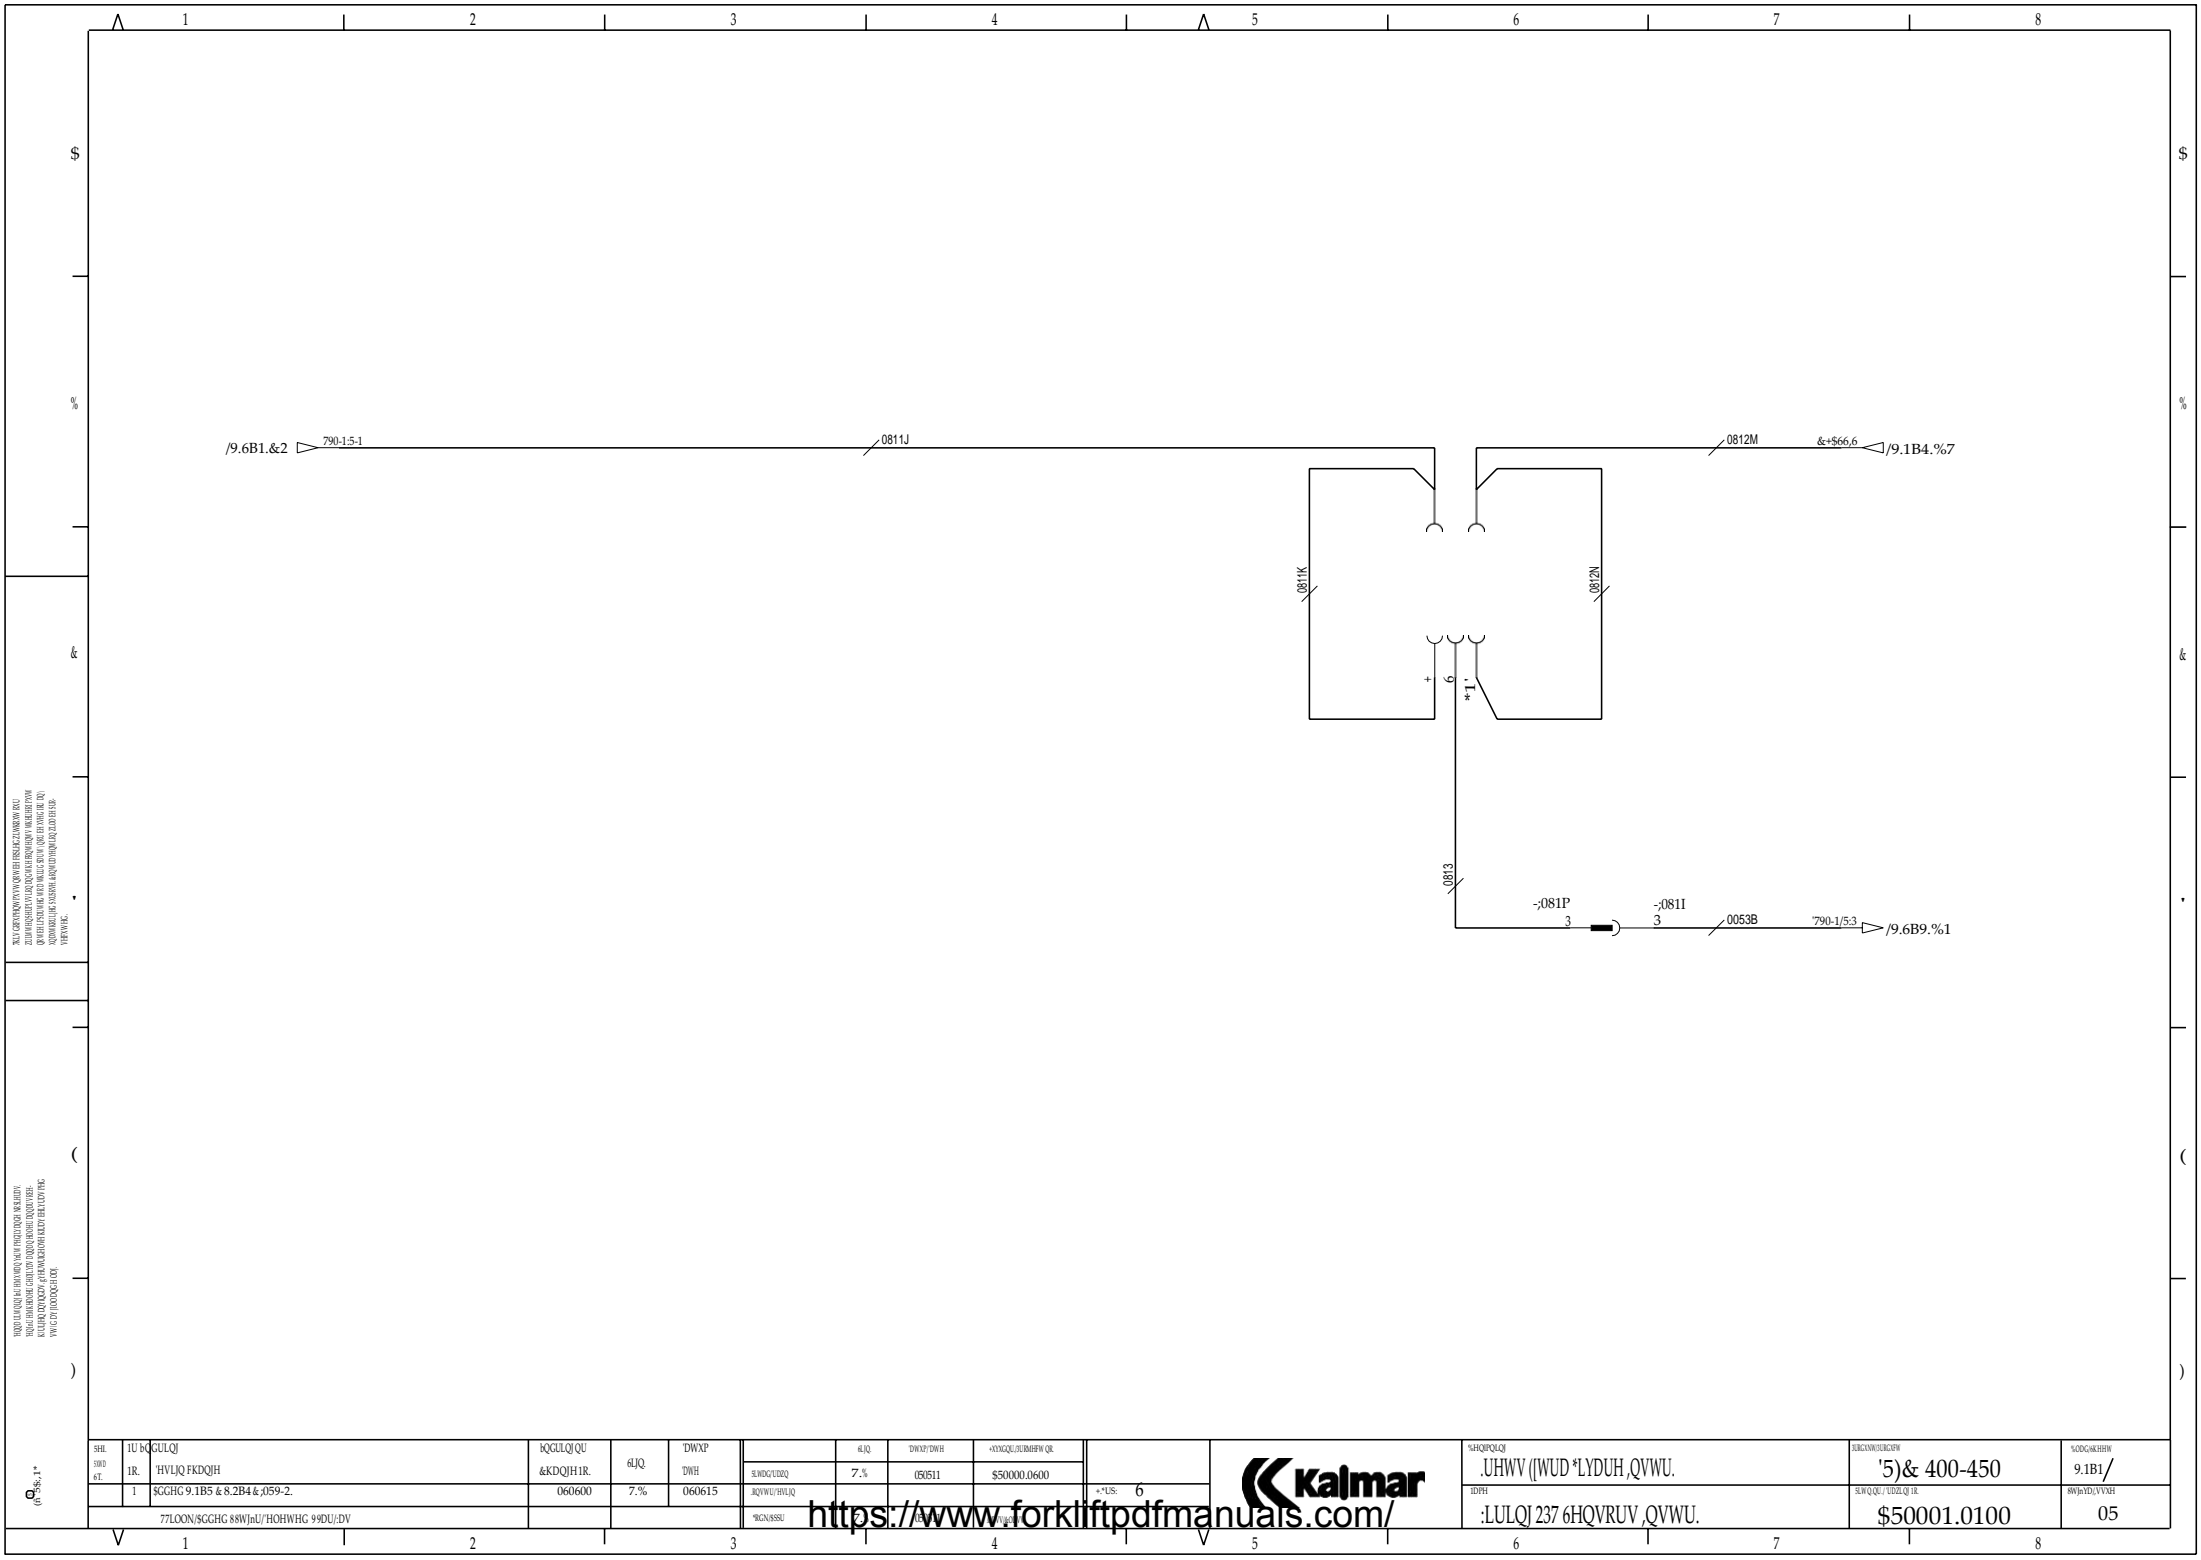


1. 2. 3. 4. 5. 6. 7. 8.
 \$
 %
 &
 (

1. 2. 3. 4. 5. 6. 7. 8.
 \$
 %
 &
 (

| | | | | | | | | | | |
|----|------------------------------------|-----------|--------|-----|----------|----------------|---------|--------------------------|---------------|-------------|
| SH | 1U K CULQJ | KQULQ QU | DWXP | 6LQ | DWXP/DWH | NDQC/LUBHPI QK | | *HQPQLQ | RECNUKREKX | %ODGKHEW |
| IR | HVLQ FKDQH | &KDDQH IR | DWH | 7% | 050511 | \$50000.0600 | | .UHWV (IWUD *LYDUH,QVWU. | '5)& 400-450 | 9.1B1/ |
| 1 | SCGHC 9.1B5 & 8.2B4 & .059-2. | 060600 | 060615 | | | | +*L5. 6 | IDPH | 5LWQQ/LUHQ IR | \$WBYDUVVAH |
| | 77LOON/SGGHC 88VJmU/HOHWHC 99DU/DV | | | | | | | :LULQJ 237 6HQVRUV,QVWU. | \$50001.0100 | 05 |



<https://www.forkliftpdfmanuals.com/>

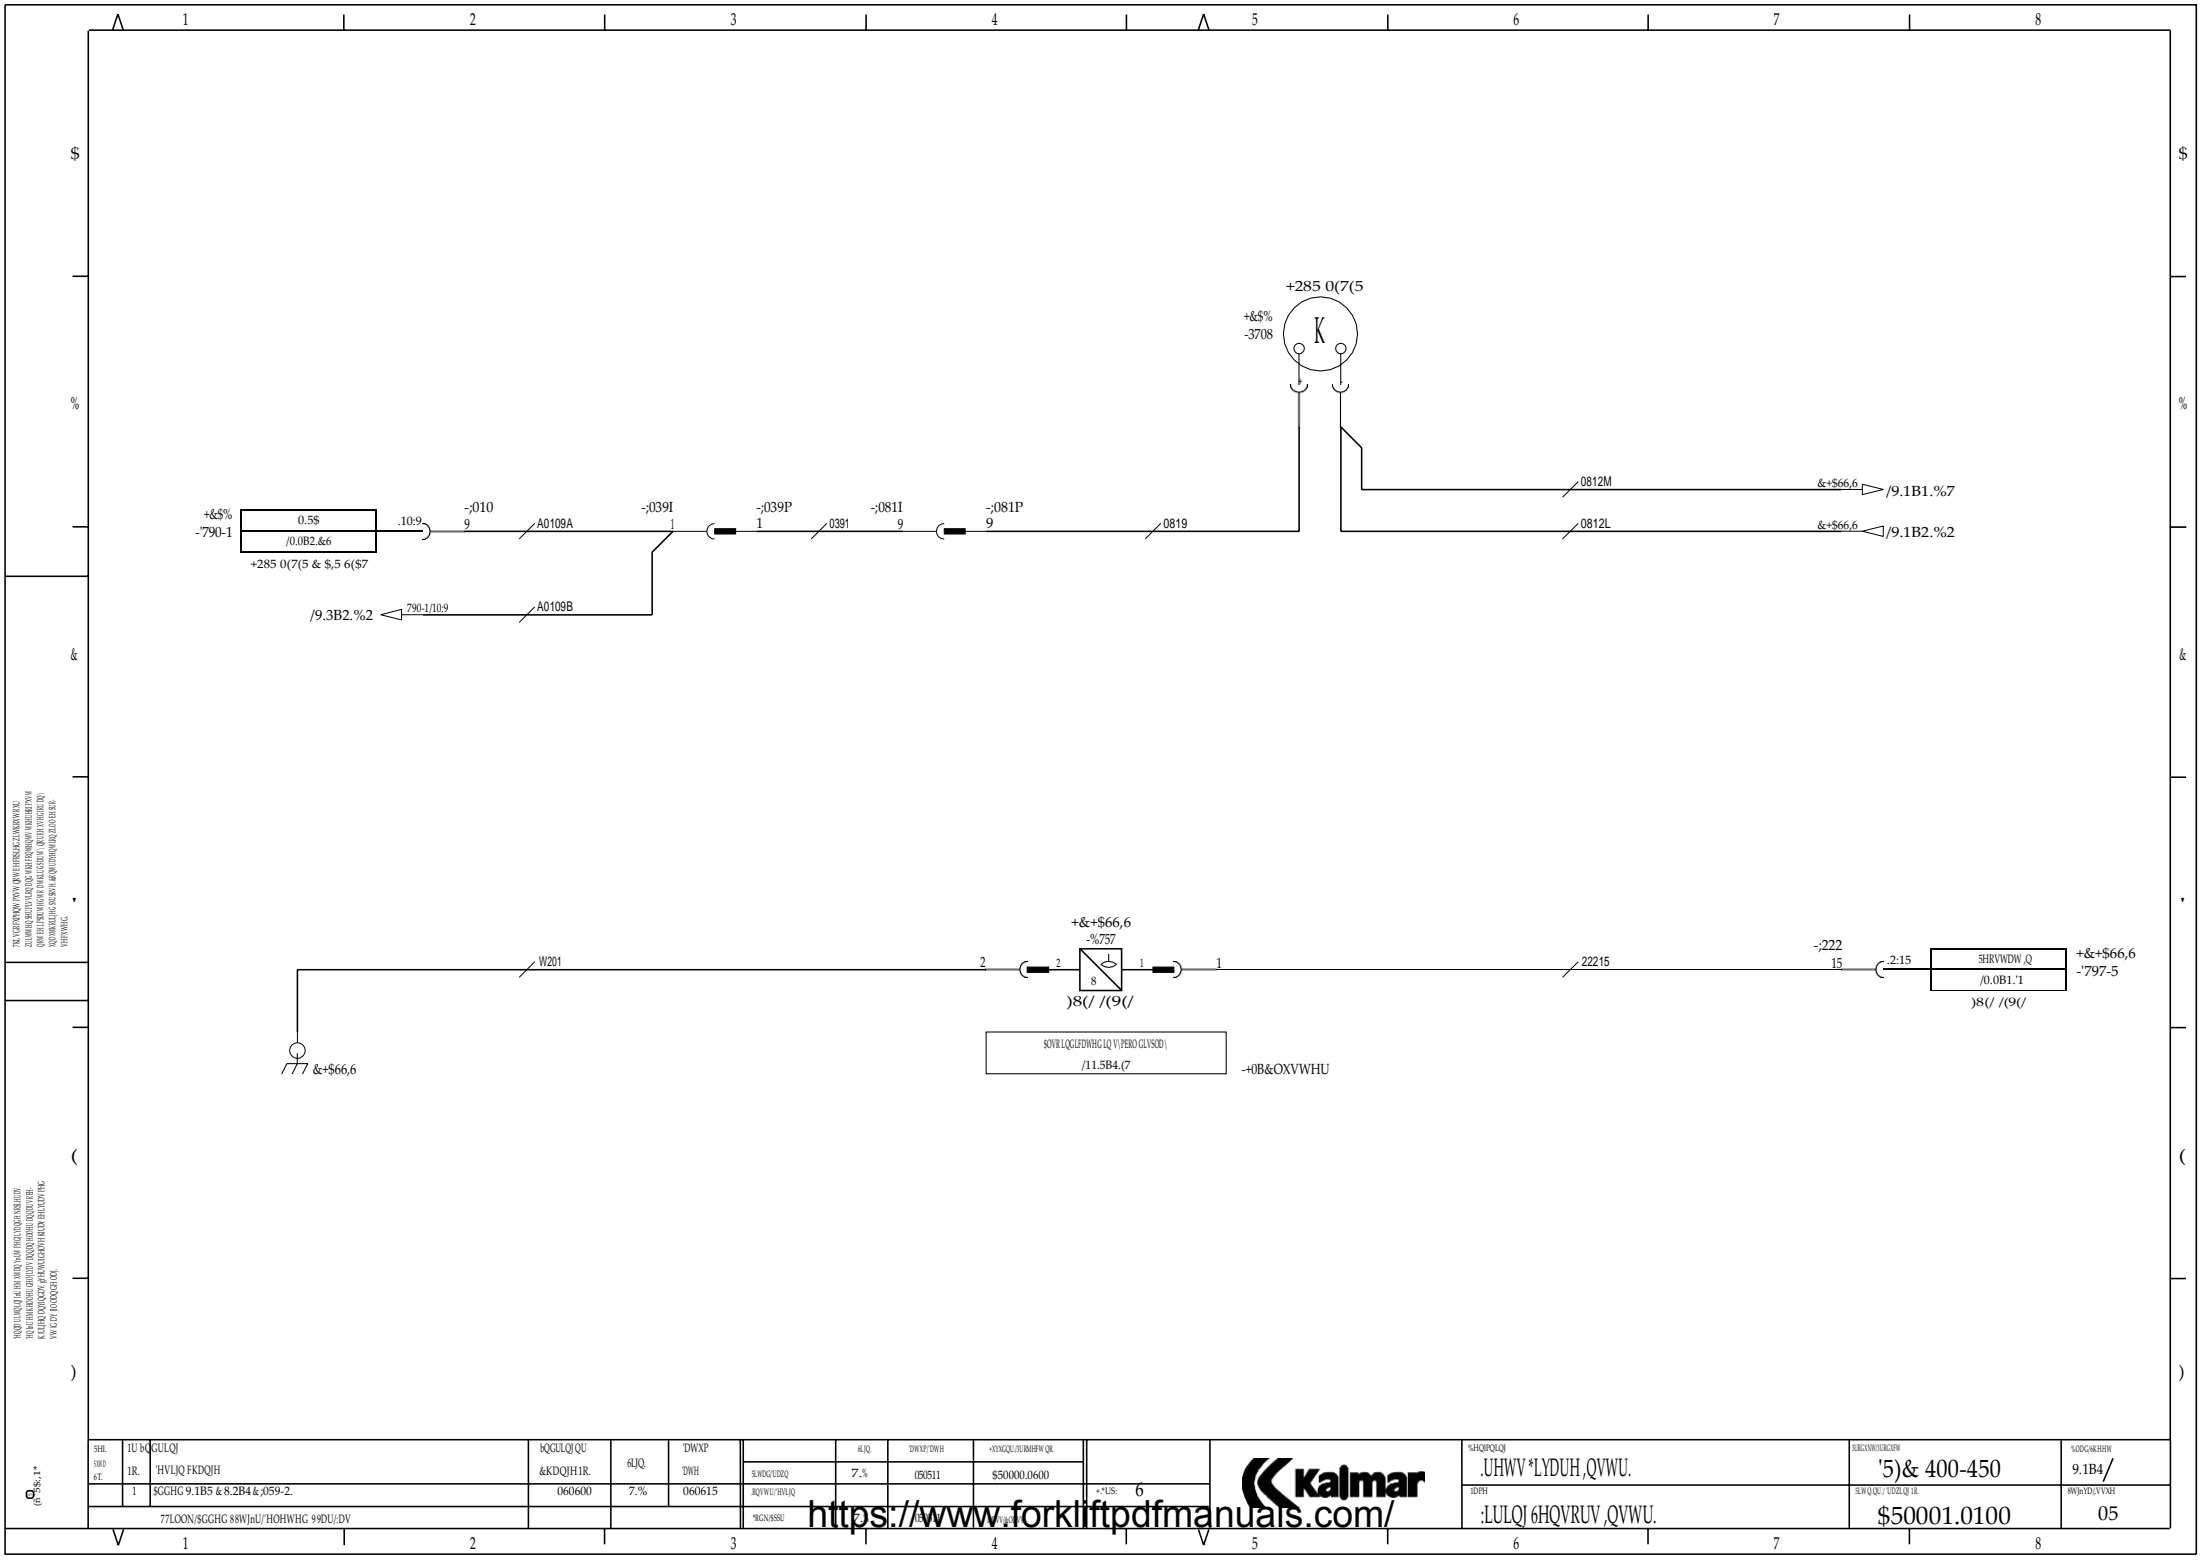


THE INFORMATION CONTAINED HEREIN IS THE PROPERTY OF KALMAR AND IS NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM.

THIS DOCUMENT IS THE PROPERTY OF KALMAR AND IS NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM.

| | | | | | | | | | | |
|----|-------------------------------------|-----------|--------|-----|----------|----------------|---------|----------------------|--------------|----------|
| SH | 1U K CULQJ | KGULQJ QU | DWXP | 6LQ | DWXP/DWH | NDXQJLUBHPP QK | | *HQWPLQJ | SHCNWUHQWU | %DGNHSHW |
| IR | HVLUQ FKDQJH | &KDQJH IR | DWH | 7% | 050511 | \$50000.0600 | | .UHWV *LYDUH.QVWU. | '5)& 400-450 | 9.1B4/ |
| 1 | SGGHC 9.1B5 & 8.2B4 & .059-2. | 060600 | 060615 | 7% | | | +M.S. 6 | | | |
| | 77LOON/SGGHC 88VJmU/HOHWHG 99DUJ/DV | | | | | | | :LULQJ 6HQVRUV.QVWU. | \$50001.0100 | 05 |



<https://www.forkliftpdfmanuals.com/>

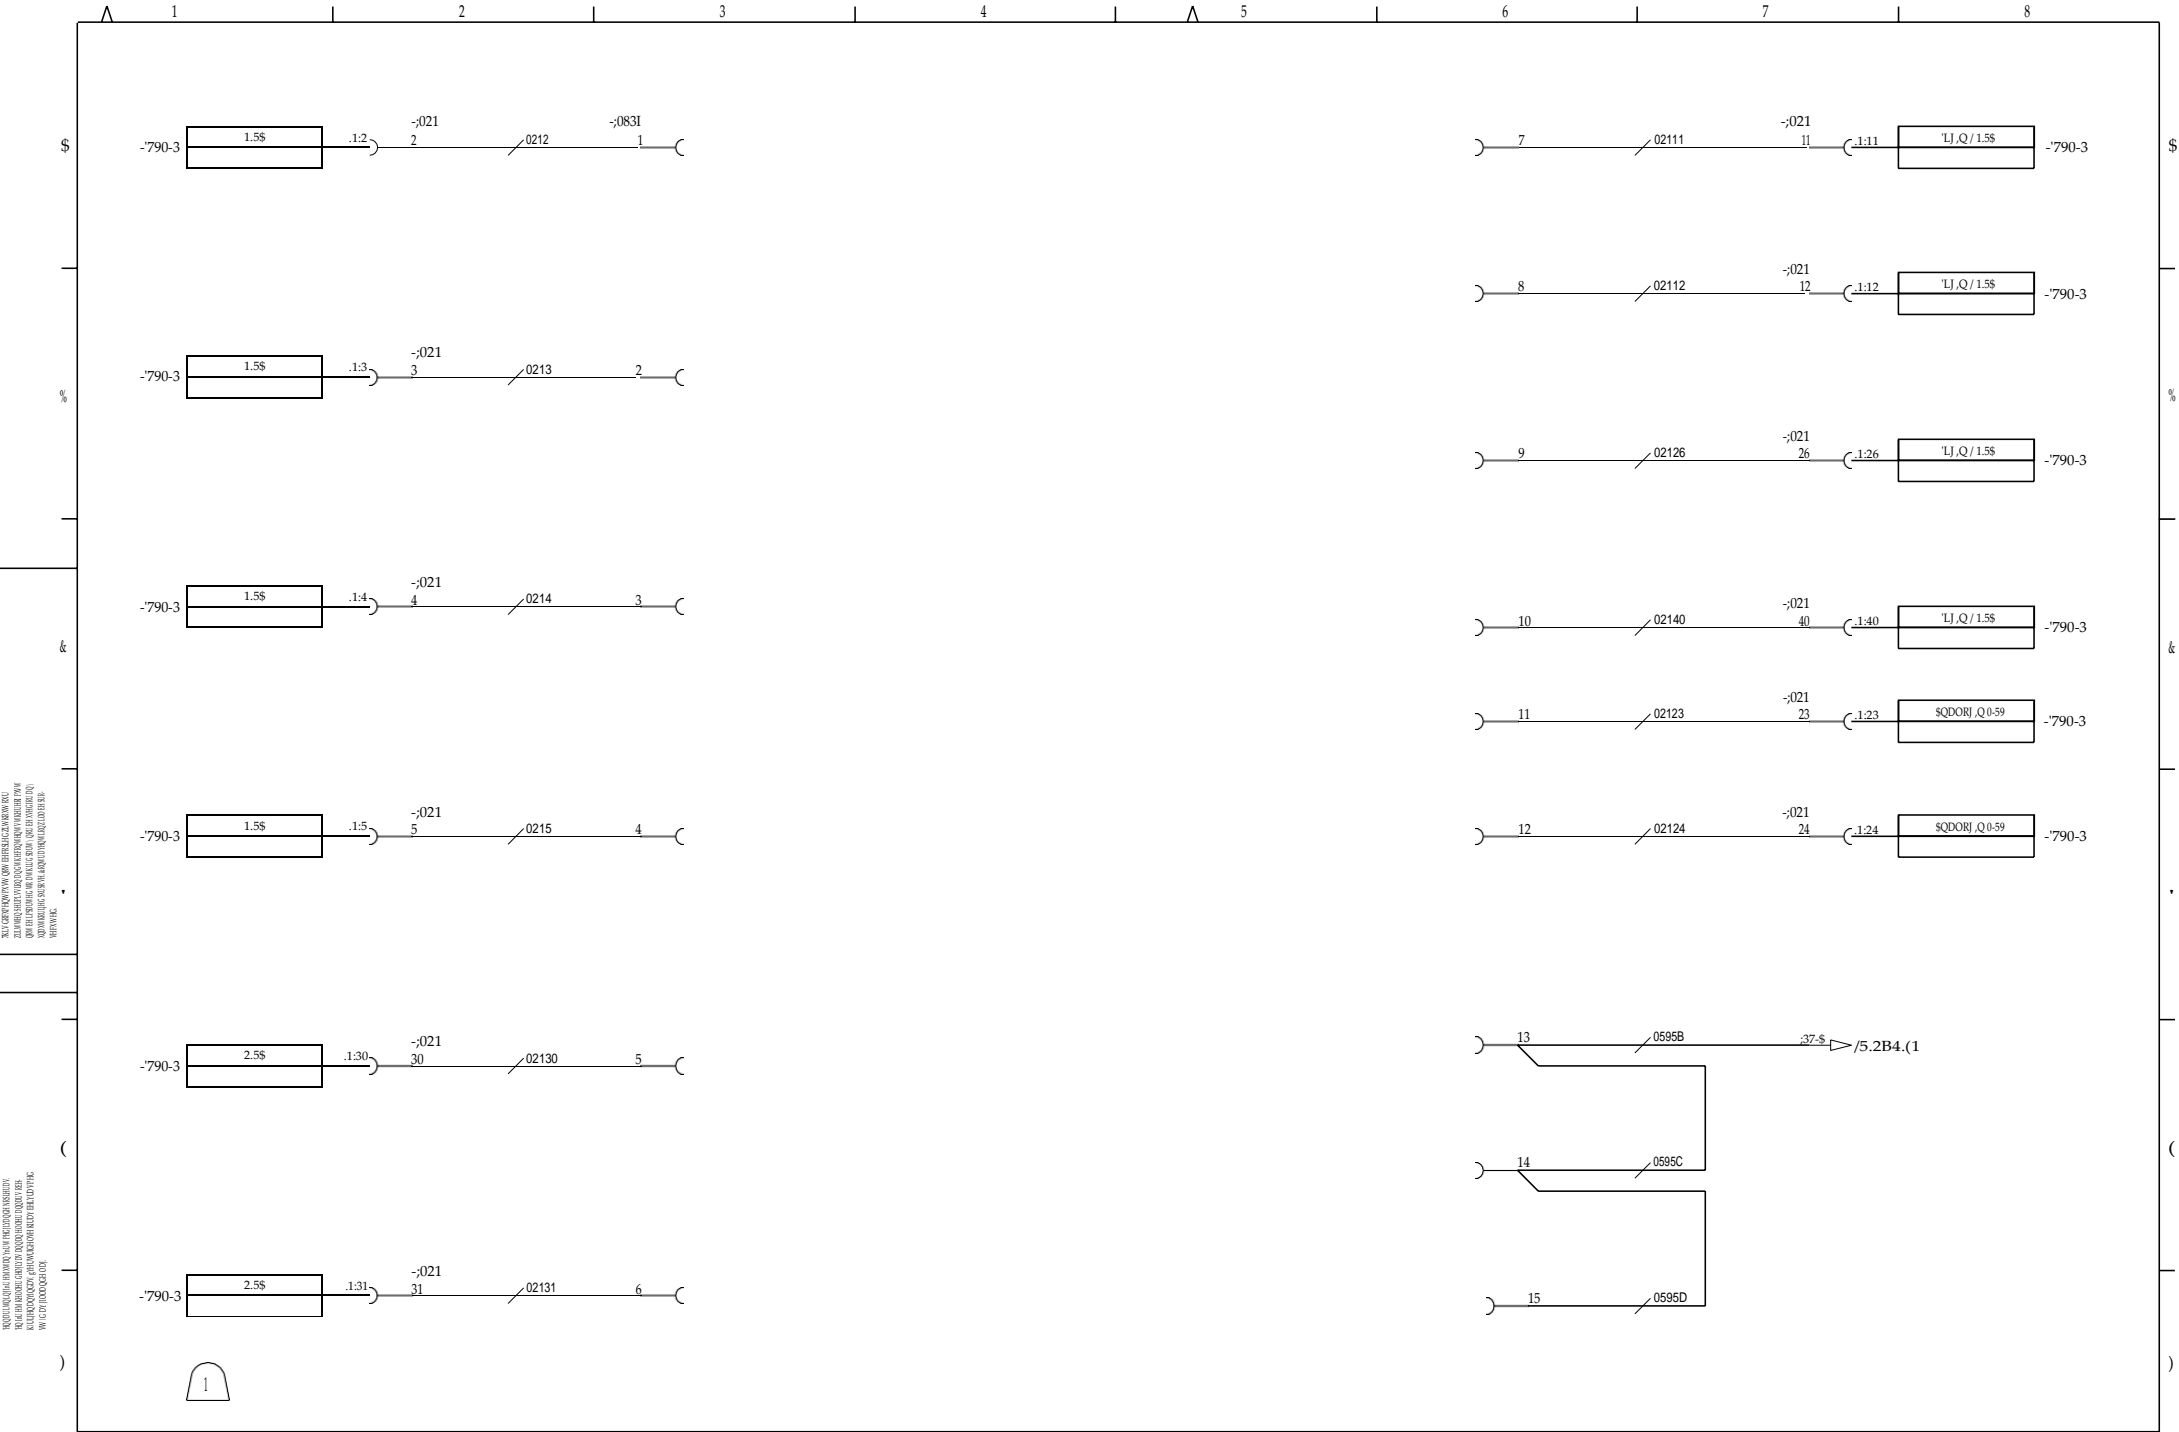


ALL DIMENSIONS ARE IN INCHES UNLESS OTHERWISE SPECIFIED.
 DIMENSIONS IN PARENTHESES ARE FOR REFERENCE ONLY.
 DIMENSIONS IN BRACKETS ARE FOR REFERENCE ONLY.

ALL DIMENSIONS ARE IN INCHES UNLESS OTHERWISE SPECIFIED.
 DIMENSIONS IN PARENTHESES ARE FOR REFERENCE ONLY.
 DIMENSIONS IN BRACKETS ARE FOR REFERENCE ONLY.

| | | | | | | | | | | | | |
|---------------------------------------|----------|-------------------------------|----------------|------|-------------|------|-------------|----------------|---------|--------------------------------|--------------------------------|-----------------------|
| SHL
SWD
RT | 1U
IR | CULQJ
HVLQ FKDJH | 1Q
6KDJH IR | 6LQJ | DWXP
DWH | 6LQ | DWXP
DWH | 4XQJLQJLHWH QJ | | 4HQJLQJ
.UHWV 2SWLRQ + WW | 4UJLQJLQJLHWH
'5) & 400-450 | 4DQJLQJLHWH
9.1B5/ |
| 1 | 1 | SGGHG 9.1B5 & 8.2B4 & .059-2. | 060600 | 7.7% | 060615 | 7.7% | 060522 | \$50000.0600 | 4LUS: 6 | 4DPRH
:LULQJ 2SWLRQ & DELQ | 4UJLQJLQJLHWH
\$50001.0100 | 4DQJLQJLHWH
05 |
| 77L00N/SGGHG 8 8WJNU/HOHWHG 9 9DUJ/DV | | | | | | | | | | | | |



<https://www.forkliftpdfmanuals.com/>

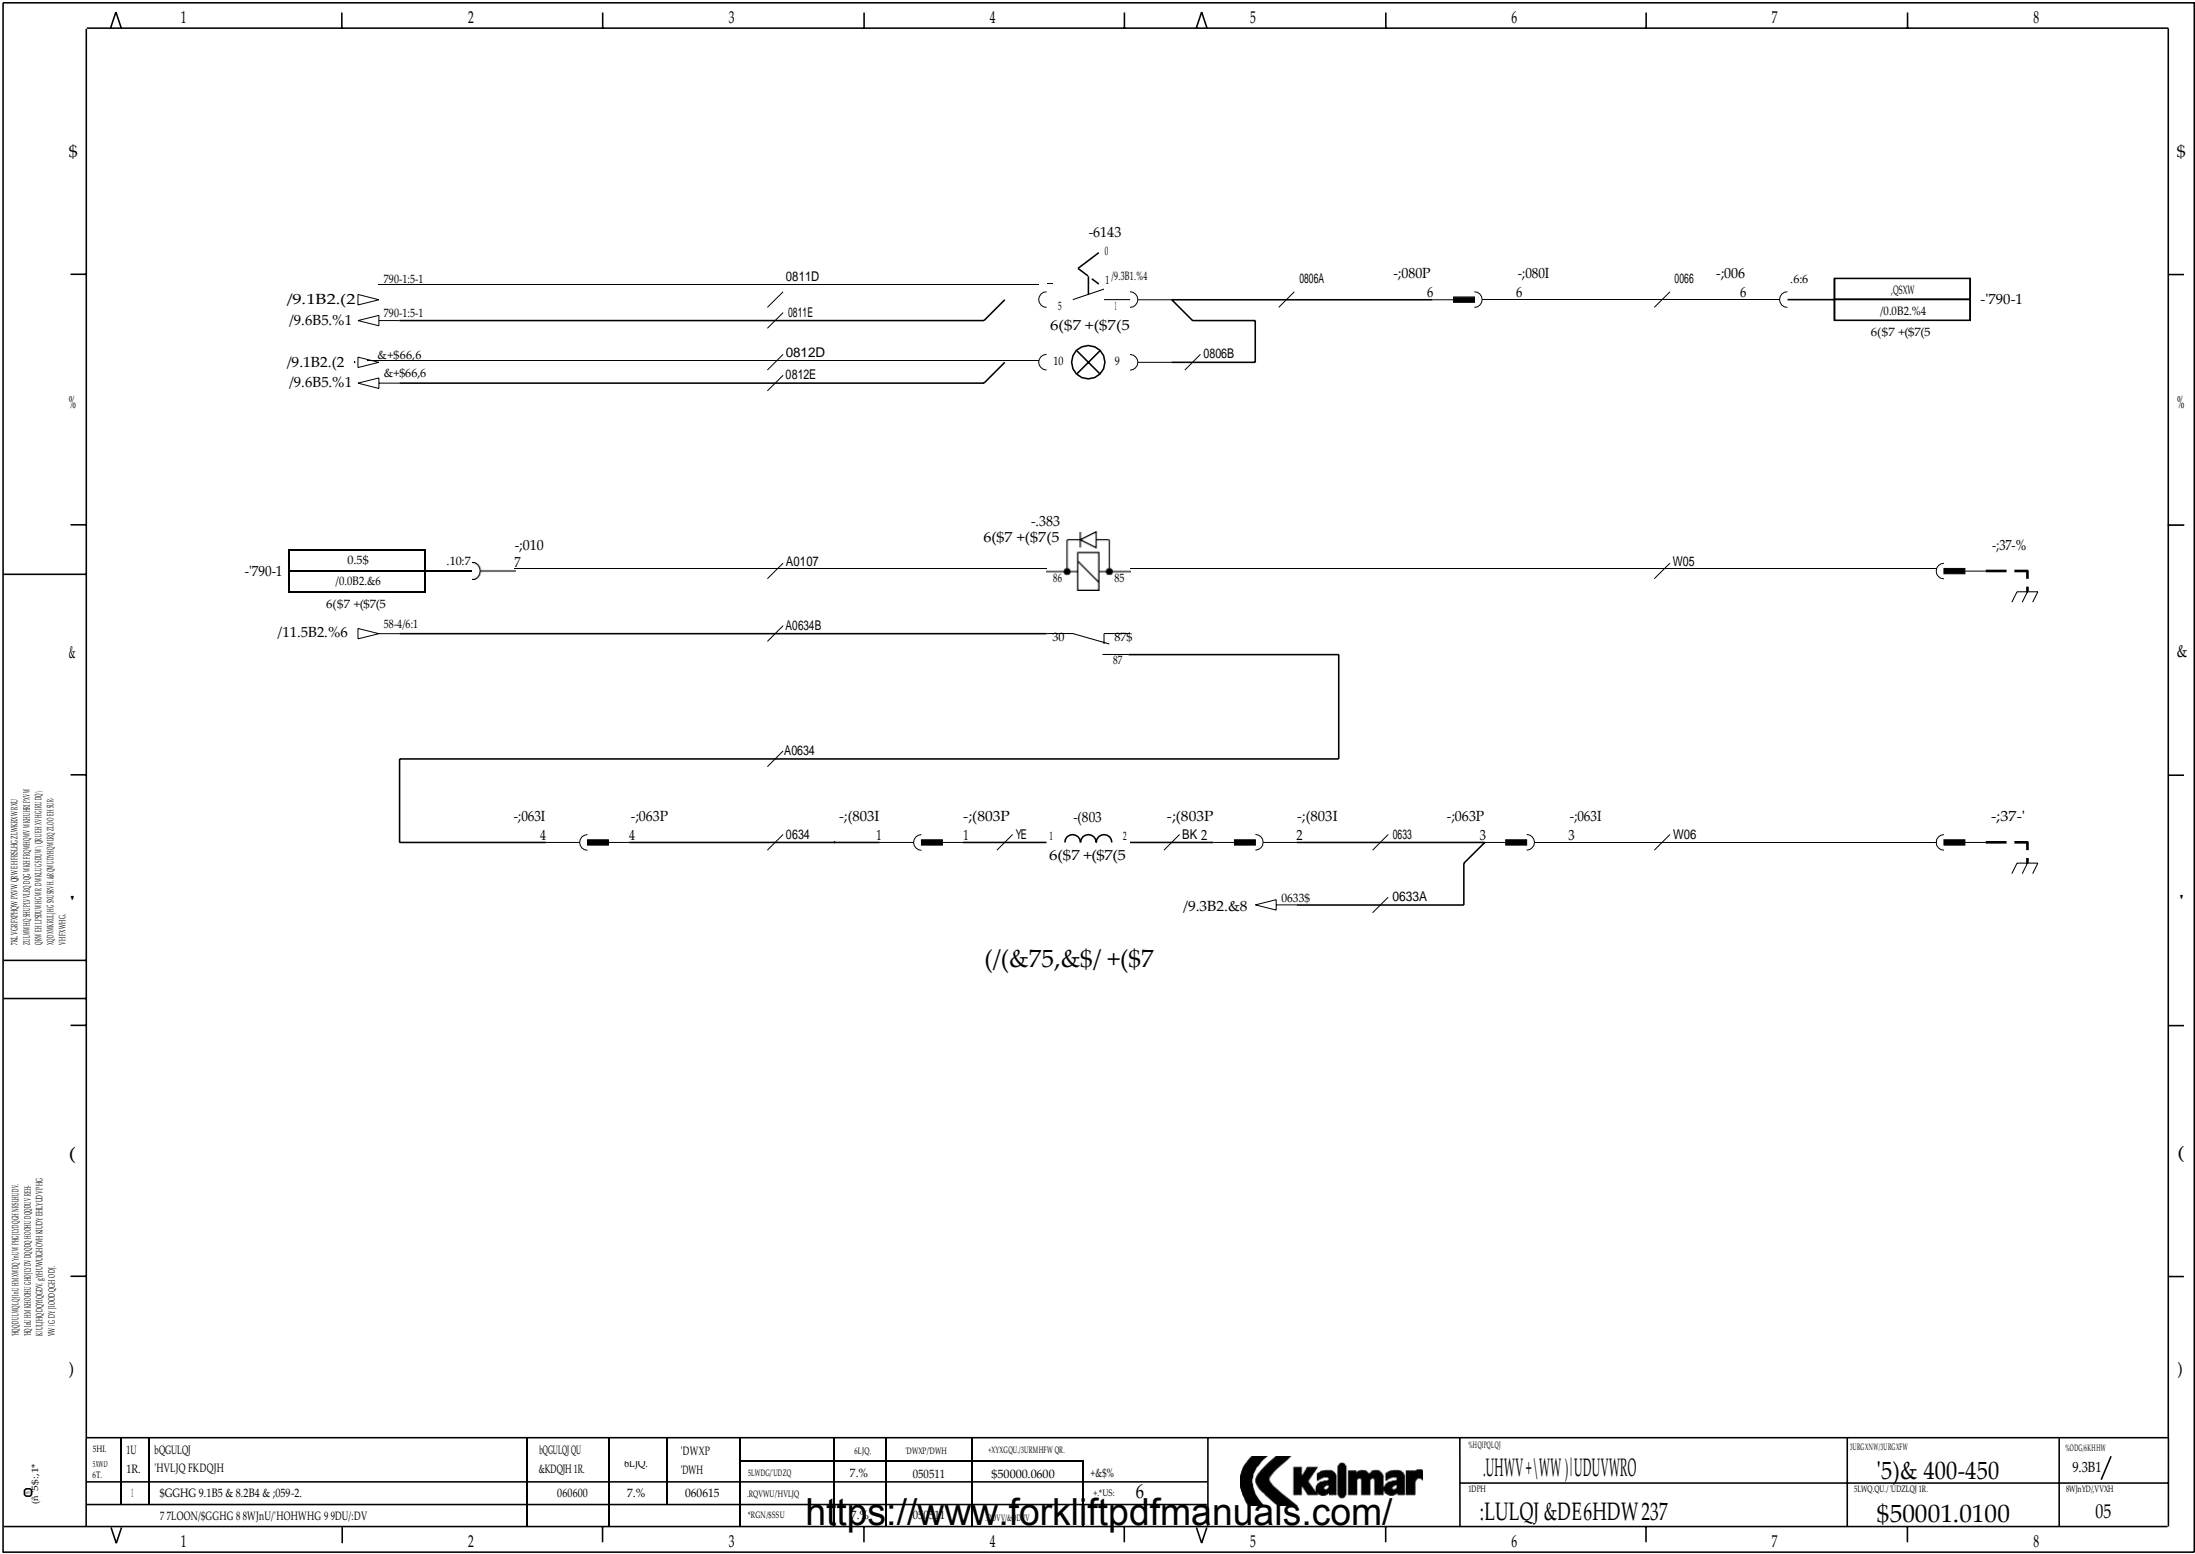

THE INFORMATION CONTAINED HEREIN IS THE PROPERTY OF KALMAR AND IS NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM.


THIS DOCUMENT IS THE PROPERTY OF KALMAR AND IS NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM.

| SHL | IR | bQGLUQ
HVLJQ FKDJH | bQGLUQ QU
&KDJH IR | bLJQ | DWXP
DWH | 4LJQ | DWXP/DWH | XYXQUURMHEW QR | + | % |
|-----|----|---------------------------------------|-----------------------|------|-------------|-------------|----------|----------------|---|---|
| 1 | 1 | SGGHG 9.1B5 & 8.2B4 & .059-2. | 060600 | 7.7% | 060615 | JKVWU/RYLJQ | 050511 | \$50000.0600 | + | 6 |
| | | 77LOON/SGGHG 8 8WJnU/HOHWHHG 9 9DU/DV | | | | *RCN,ASSU | | | | |



<https://www.forkliftpdfmanuals.com/>

| | | |
|-----------------------------|----------------------------------|---------------------|
| SHQRLQ
JHWV+(WV)UDUVWRO | RUCVWUJUCVW
'5)& 400-450 | SDOGRKREH
9.3B1/ |
| IDPH
:LULQJ & DE6HDW 237 | SLWQUL/EDZLQJ IR
\$50001.0100 | SHWEDVVXH
05 |

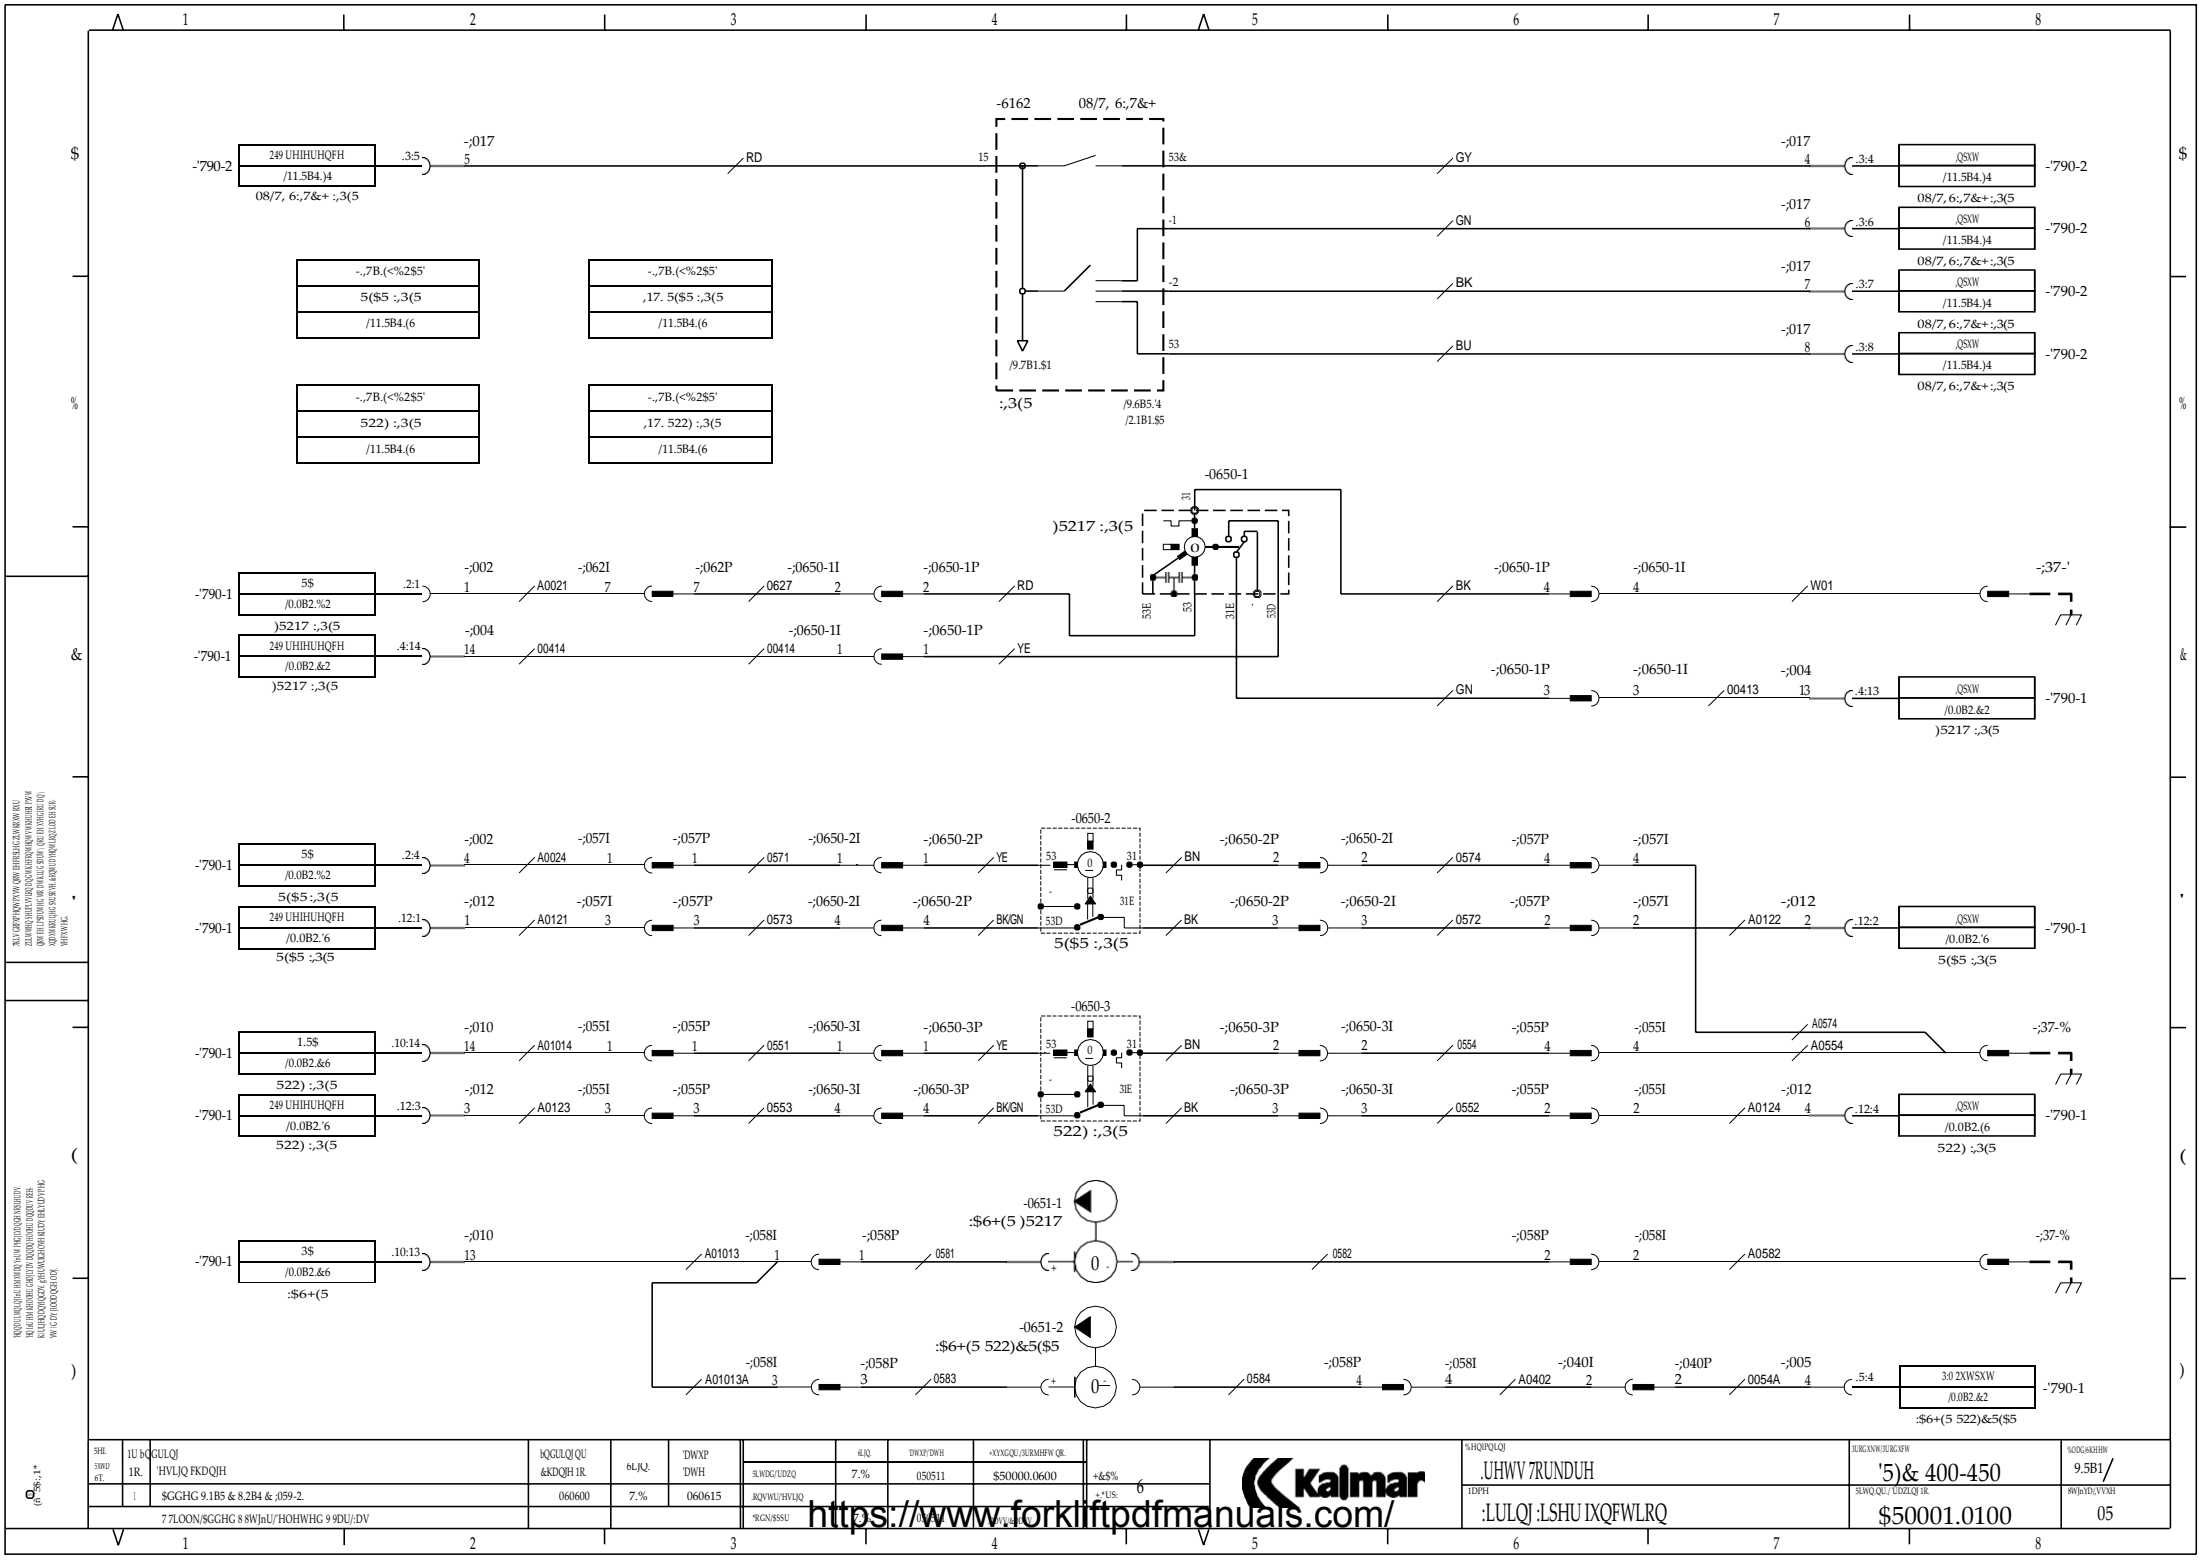


1. KALMARIN OY:n tekniset asiakaspiirrokset
 2. KALMARIN OY:n tekniset asiakaspiirrokset
 3. KALMARIN OY:n tekniset asiakaspiirrokset
 4. KALMARIN OY:n tekniset asiakaspiirrokset
 5. KALMARIN OY:n tekniset asiakaspiirrokset
 6. KALMARIN OY:n tekniset asiakaspiirrokset
 7. KALMARIN OY:n tekniset asiakaspiirrokset
 8. KALMARIN OY:n tekniset asiakaspiirrokset
 9. KALMARIN OY:n tekniset asiakaspiirrokset
 10. KALMARIN OY:n tekniset asiakaspiirrokset
 11. KALMARIN OY:n tekniset asiakaspiirrokset
 12. KALMARIN OY:n tekniset asiakaspiirrokset
 13. KALMARIN OY:n tekniset asiakaspiirrokset
 14. KALMARIN OY:n tekniset asiakaspiirrokset
 15. KALMARIN OY:n tekniset asiakaspiirrokset
 16. KALMARIN OY:n tekniset asiakaspiirrokset
 17. KALMARIN OY:n tekniset asiakaspiirrokset
 18. KALMARIN OY:n tekniset asiakaspiirrokset
 19. KALMARIN OY:n tekniset asiakaspiirrokset
 20. KALMARIN OY:n tekniset asiakaspiirrokset

1. KALMARIN OY:n tekniset asiakaspiirrokset
 2. KALMARIN OY:n tekniset asiakaspiirrokset
 3. KALMARIN OY:n tekniset asiakaspiirrokset
 4. KALMARIN OY:n tekniset asiakaspiirrokset
 5. KALMARIN OY:n tekniset asiakaspiirrokset
 6. KALMARIN OY:n tekniset asiakaspiirrokset
 7. KALMARIN OY:n tekniset asiakaspiirrokset
 8. KALMARIN OY:n tekniset asiakaspiirrokset
 9. KALMARIN OY:n tekniset asiakaspiirrokset
 10. KALMARIN OY:n tekniset asiakaspiirrokset
 11. KALMARIN OY:n tekniset asiakaspiirrokset
 12. KALMARIN OY:n tekniset asiakaspiirrokset
 13. KALMARIN OY:n tekniset asiakaspiirrokset
 14. KALMARIN OY:n tekniset asiakaspiirrokset
 15. KALMARIN OY:n tekniset asiakaspiirrokset
 16. KALMARIN OY:n tekniset asiakaspiirrokset
 17. KALMARIN OY:n tekniset asiakaspiirrokset
 18. KALMARIN OY:n tekniset asiakaspiirrokset
 19. KALMARIN OY:n tekniset asiakaspiirrokset
 20. KALMARIN OY:n tekniset asiakaspiirrokset

| | | | | | | | | | | | | |
|---------------------------------------|------------|-------------------------------|------------------------|------|-------------|------------|----------|--------------|---------------|-------------------------------|------------------------------|--------------------|
| SHL
3300
AT | IU b
IR | CULQJ
HVLJQ FKDJH | IQCULQJ QU
&KDJH IR | 6LJQ | DWXP
DWH | 6LQ | DWXP/DWH | XYXQJURMBFQR | +&5%
+US 6 | SHQPNQI
.UHWV 7RUNDUH | SHQGNRHW
'5)& 400-450 | SOCGRHW
9.5B1/ |
| 1 | 1 | SGGHG 9.1B5 & 8.2B4 & .059-2. | 060600 | 7.7% | 060615 | 8QNWHFVJQJ | 050511 | \$50000.0600 | | LDPH
:LULQJ :LSHU IXQFWLRQ | SHWQJURMBFQR
\$50001.0100 | SHWQJURMBFQR
05 |
| 77LOON/SGGHG 8 8WJNU/HOHWHWC 9 9DU/DV | | | | | | | | | | | | |



<https://www.forkliftpdfmanuals.com/>

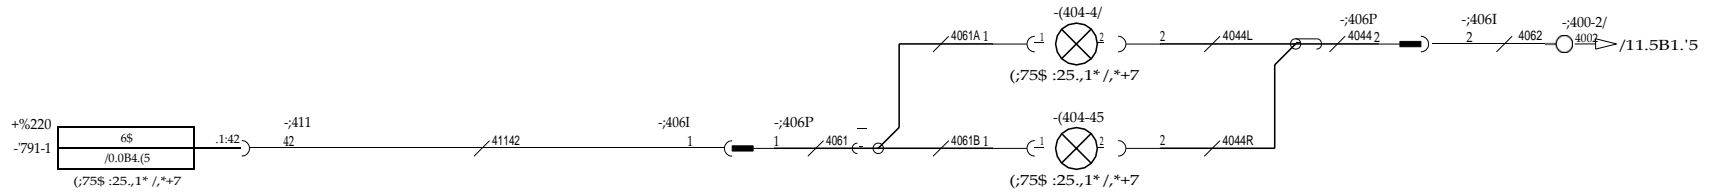

237,21 :25.,1* /,*+7 21 \$77\$&+0(17


TO: LULUON/SGGHC 881VJmJ/HHWHHC 99DU/DV
 FROM: LULUON/SGGHC 881VJmJ/HHWHHC 99DU/DV
 SUBJECT: LULUON/SGGHC 881VJmJ/HHWHHC 99DU/DV

TO: LULUON/SGGHC 881VJmJ/HHWHHC 99DU/DV
 FROM: LULUON/SGGHC 881VJmJ/HHWHHC 99DU/DV
 SUBJECT: LULUON/SGGHC 881VJmJ/HHWHHC 99DU/DV

| | | | | | | | | | | | |
|----|-------------------------------------|-----------|-----|--------|-----|----------|-----------------|---------------|---------------------------|---------------|------------|
| SH | 1U K CULQJ | KQULQJ QU | 6LQ | DWXP | 6LQ | DWXP/DWH | +XDCQJLUBHFF QK | | 4HQPQLQJ | 8KCNWJHCKB | 5ODGNHWH |
| IR | HVLQ FKDQJH | &KDQJH IR | 6LQ | DWH | 7.% | 0511 | \$50000.0600 | +\$77\$&+0(17 | .UHWV ([WUD \$UE.EHO.\$J] | '5)& 400-450 | 9.6B2/ |
| 1 | SGGHC 9.1B5 & 8.2B4 & .059-2. | 060600 | 7.% | 060615 | | | | +ULS. 6 | IDPH | 8WQQU/UDZQ IR | 8W8YD.VV8H |
| | 77L00N/SGGHC 881VJmJ/HHWHHC 99DU/DV | | | | | | | | :LULQJ 2SW. :RUN/LJKW\$WW | \$50001.0100 | 05 |



<https://www.forkliftpdfmanuals.com/>

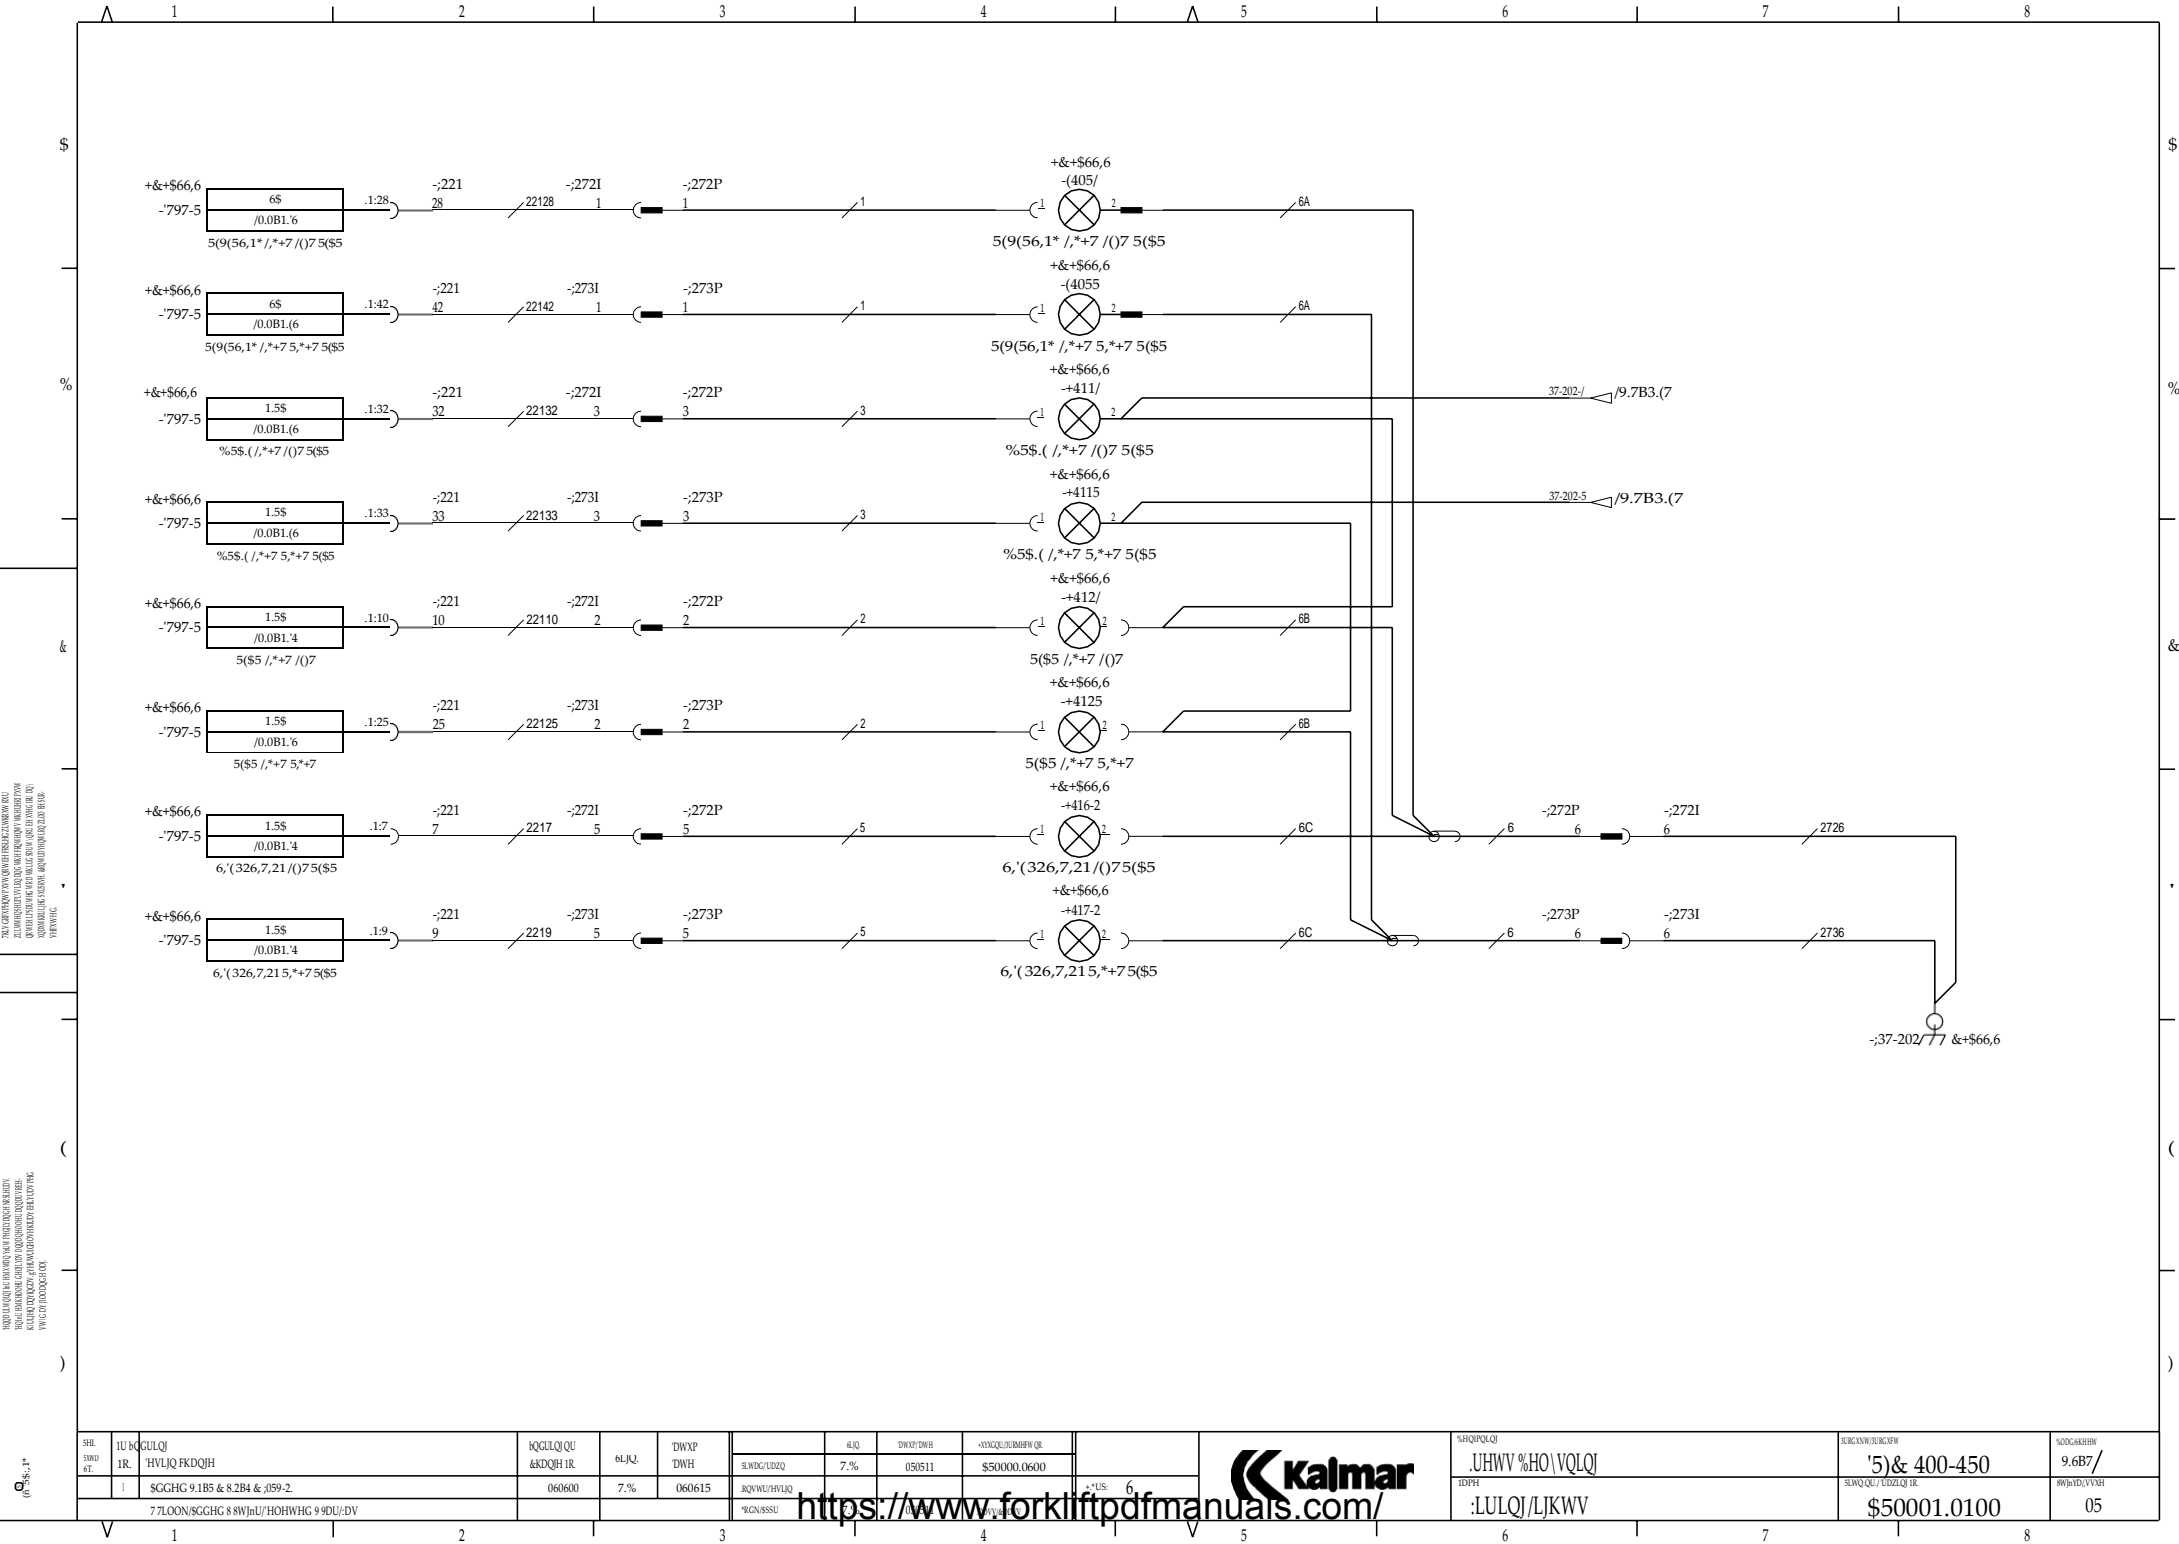


THE COMPANY AND/OR ITS SUPPLIERS MAKE NO WARRANTY, EXPRESS OR IMPLIED, AS TO THE ACCURACY, COMPLETENESS, OR QUALITY OF ANY INFORMATION PROVIDED HEREIN. THE COMPANY AND/OR ITS SUPPLIERS SHALL NOT BE LIABLE FOR ANY DAMAGES, INCLUDING BUT NOT LIMITED TO, DIRECT, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, ARISING FROM OR OUT OF THE USE OF THE INFORMATION PROVIDED HEREIN.

THE COMPANY AND/OR ITS SUPPLIERS MAKE NO WARRANTY, EXPRESS OR IMPLIED, AS TO THE ACCURACY, COMPLETENESS, OR QUALITY OF ANY INFORMATION PROVIDED HEREIN. THE COMPANY AND/OR ITS SUPPLIERS SHALL NOT BE LIABLE FOR ANY DAMAGES, INCLUDING BUT NOT LIMITED TO, DIRECT, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, ARISING FROM OR OUT OF THE USE OF THE INFORMATION PROVIDED HEREIN.

| | | | | | | | | | | | | |
|-----|------|---------------------------------------|-----------|------|--------|-------------|----------|----------------|--------------|----------------|------------------|------------|
| SHL | IU b | CULQJ | IQCULQ QU | 6LJQ | DWXP | 6LQ | DWXP/DWH | 4XQZULJRBHF QK | | SHQPLQJ | RUCVWUJUCZWF | SOCGRKRW |
| 3W0 | IR | HVLJQ FKDJH | &KDJH IR | | DWH | SLWQ/LBZQ | 7.% | 050511 | \$50000.0600 | .UHWV %HO/VLQJ | '5)& 400-450 | 9.6B7/ |
| 0 | 1 | SGGHG 9.1B5 & 8.2B4 & ;059-2. | 060600 | 7.% | 060615 | RQVWUHFVUJQ | | | +US: 6 | SDPH | SLWQZULJRBZQJ IR | 8W0YD/VVXH |
| | | 77LOON/SGGHG 8 8WJnU/HOHWHG 9 9DUJ/DV | | | | *RGNSSU | | | | :LULQJ/LJKWV | \$50001.0100 | 05 |




<https://www.forkliftpdfmanuals.com/>

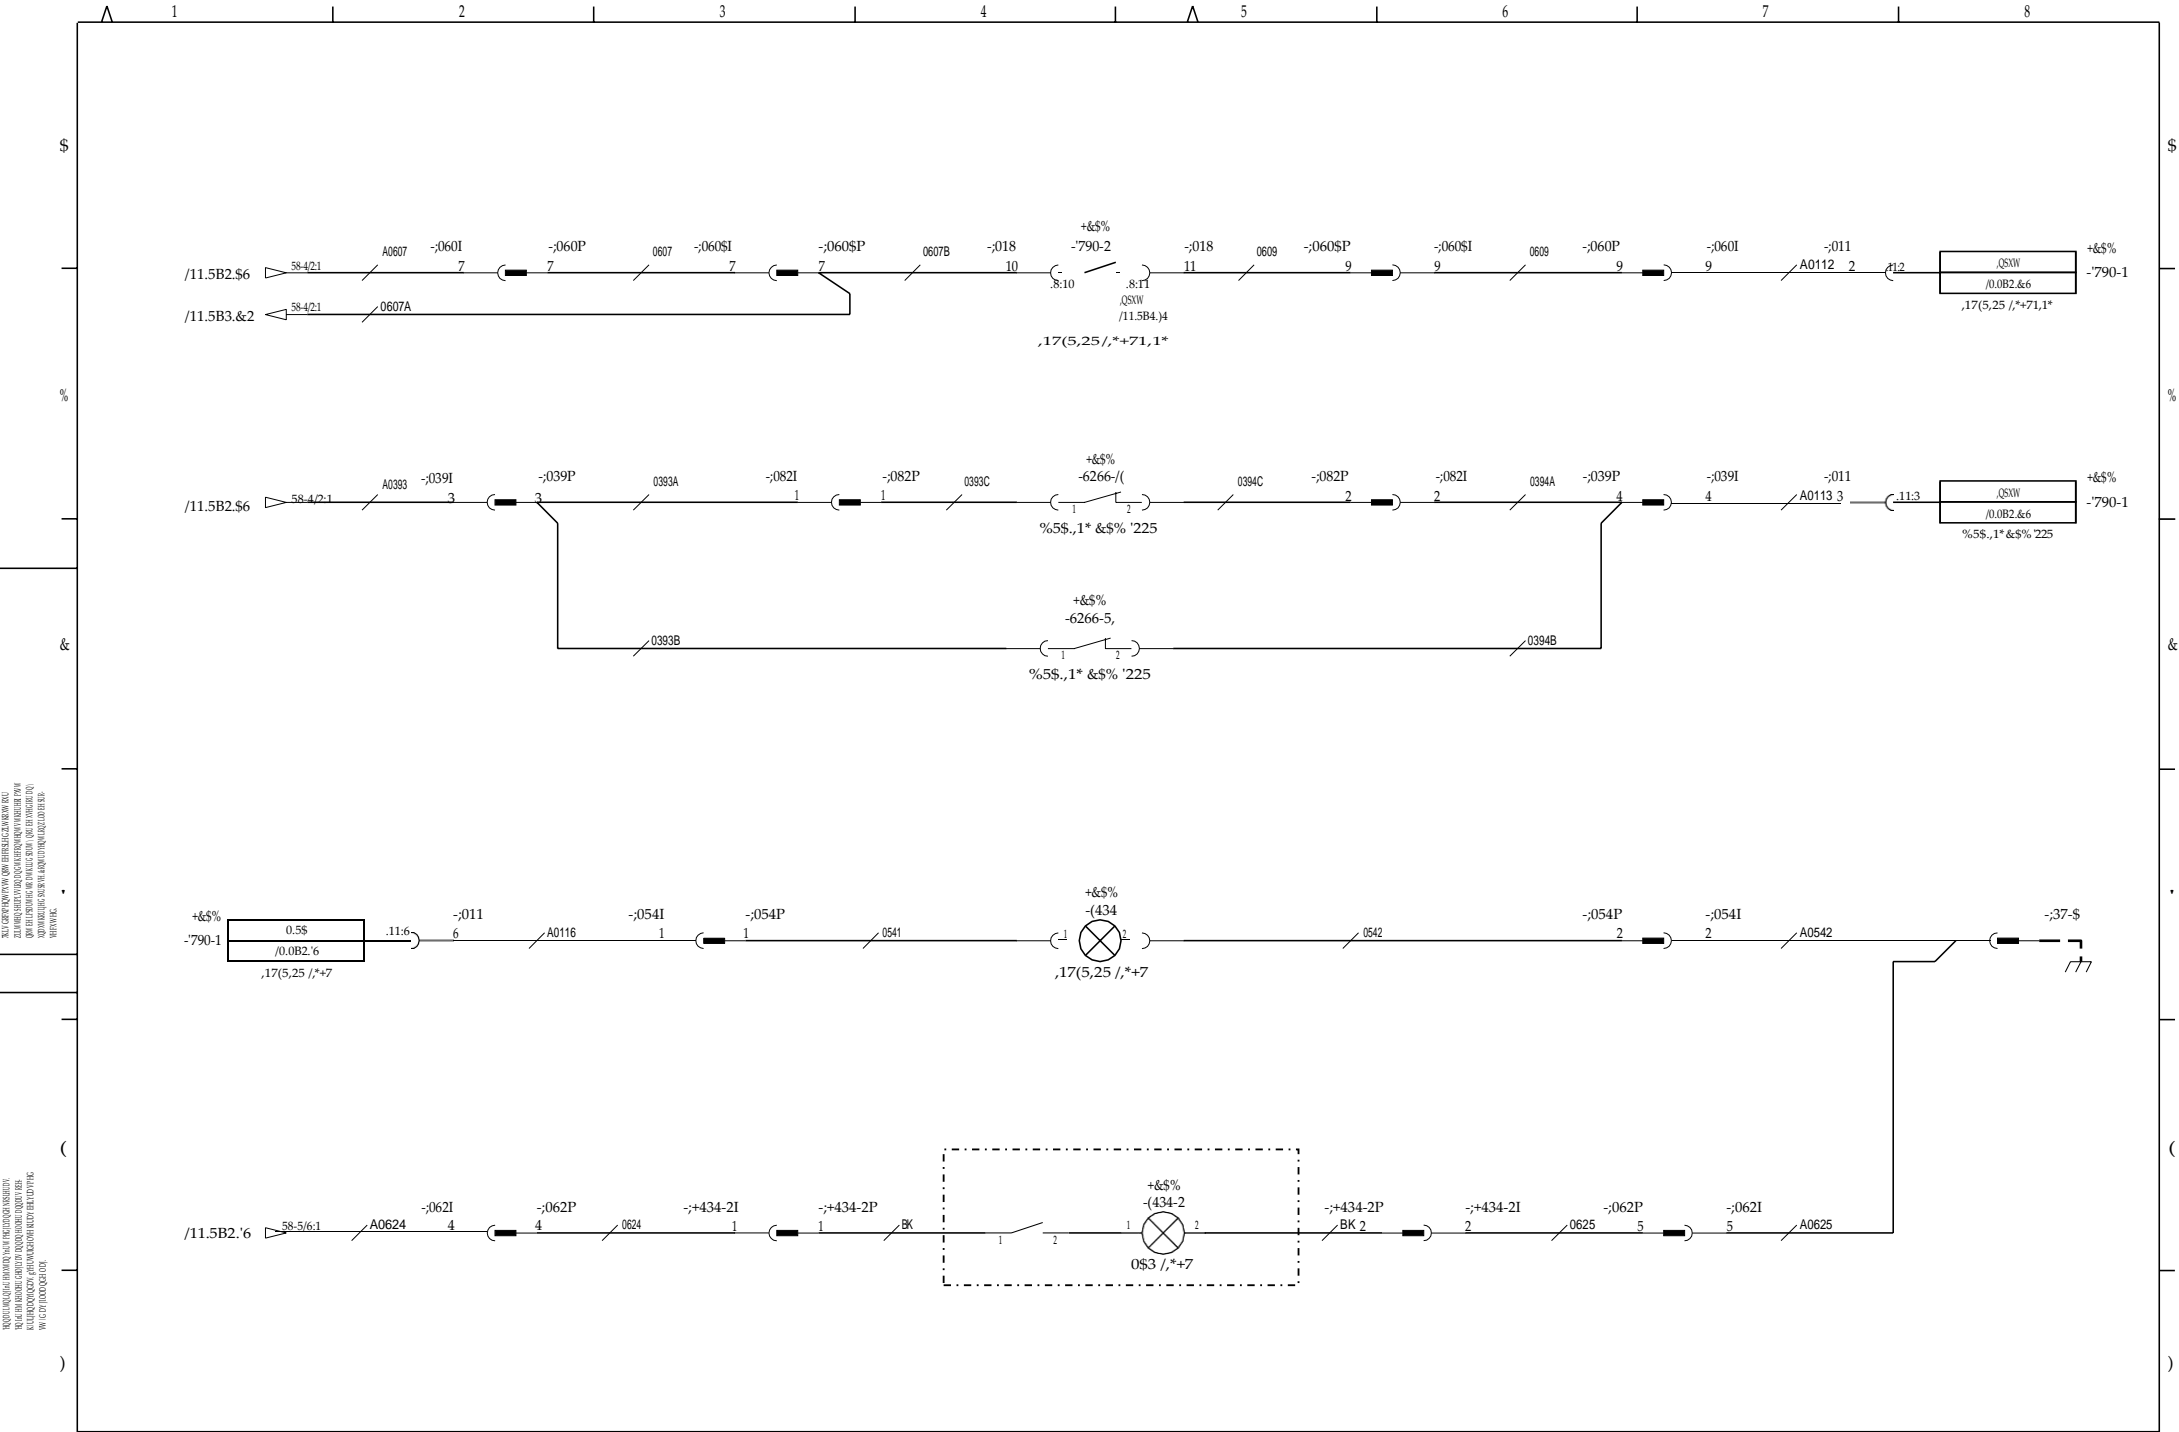

| | | | | | | | | | | | | |
|---------------------------------------|--------------|-------------------------------|------------------------|------|----------|------|----------|----------------|----------|---------------|--------------|--------|
| SHL SWD RT | 1U bCULQJ IR | 1U bCULQJ HVLIQ FKDJQH | 1U bCULQJ QU &KDJQH IR | 6LJQ | DWXP DWH | 6LJQ | DWXP DWH | <X>QJLJRHFN QJ | SHQJQJQJ | UHWV %HO\VLQJ | 5) & 400-450 | 9.688/ |
| 1 | 1 | SGGHG 9.1B5 & 8.2B4 & .059-2. | 060600 | 7.7% | 060615 | 7.7% | 050511 | \$50000.0600 | ADPH | :LULQJ/LJKWV | \$50001.0100 | 05 |
| 77L00N/SGGHG 8.8WJNU/HOHWHG 9.9DUJ/DV | | | | | | | | | | | | |



<https://www.forkliftpdfmanuals.com/>

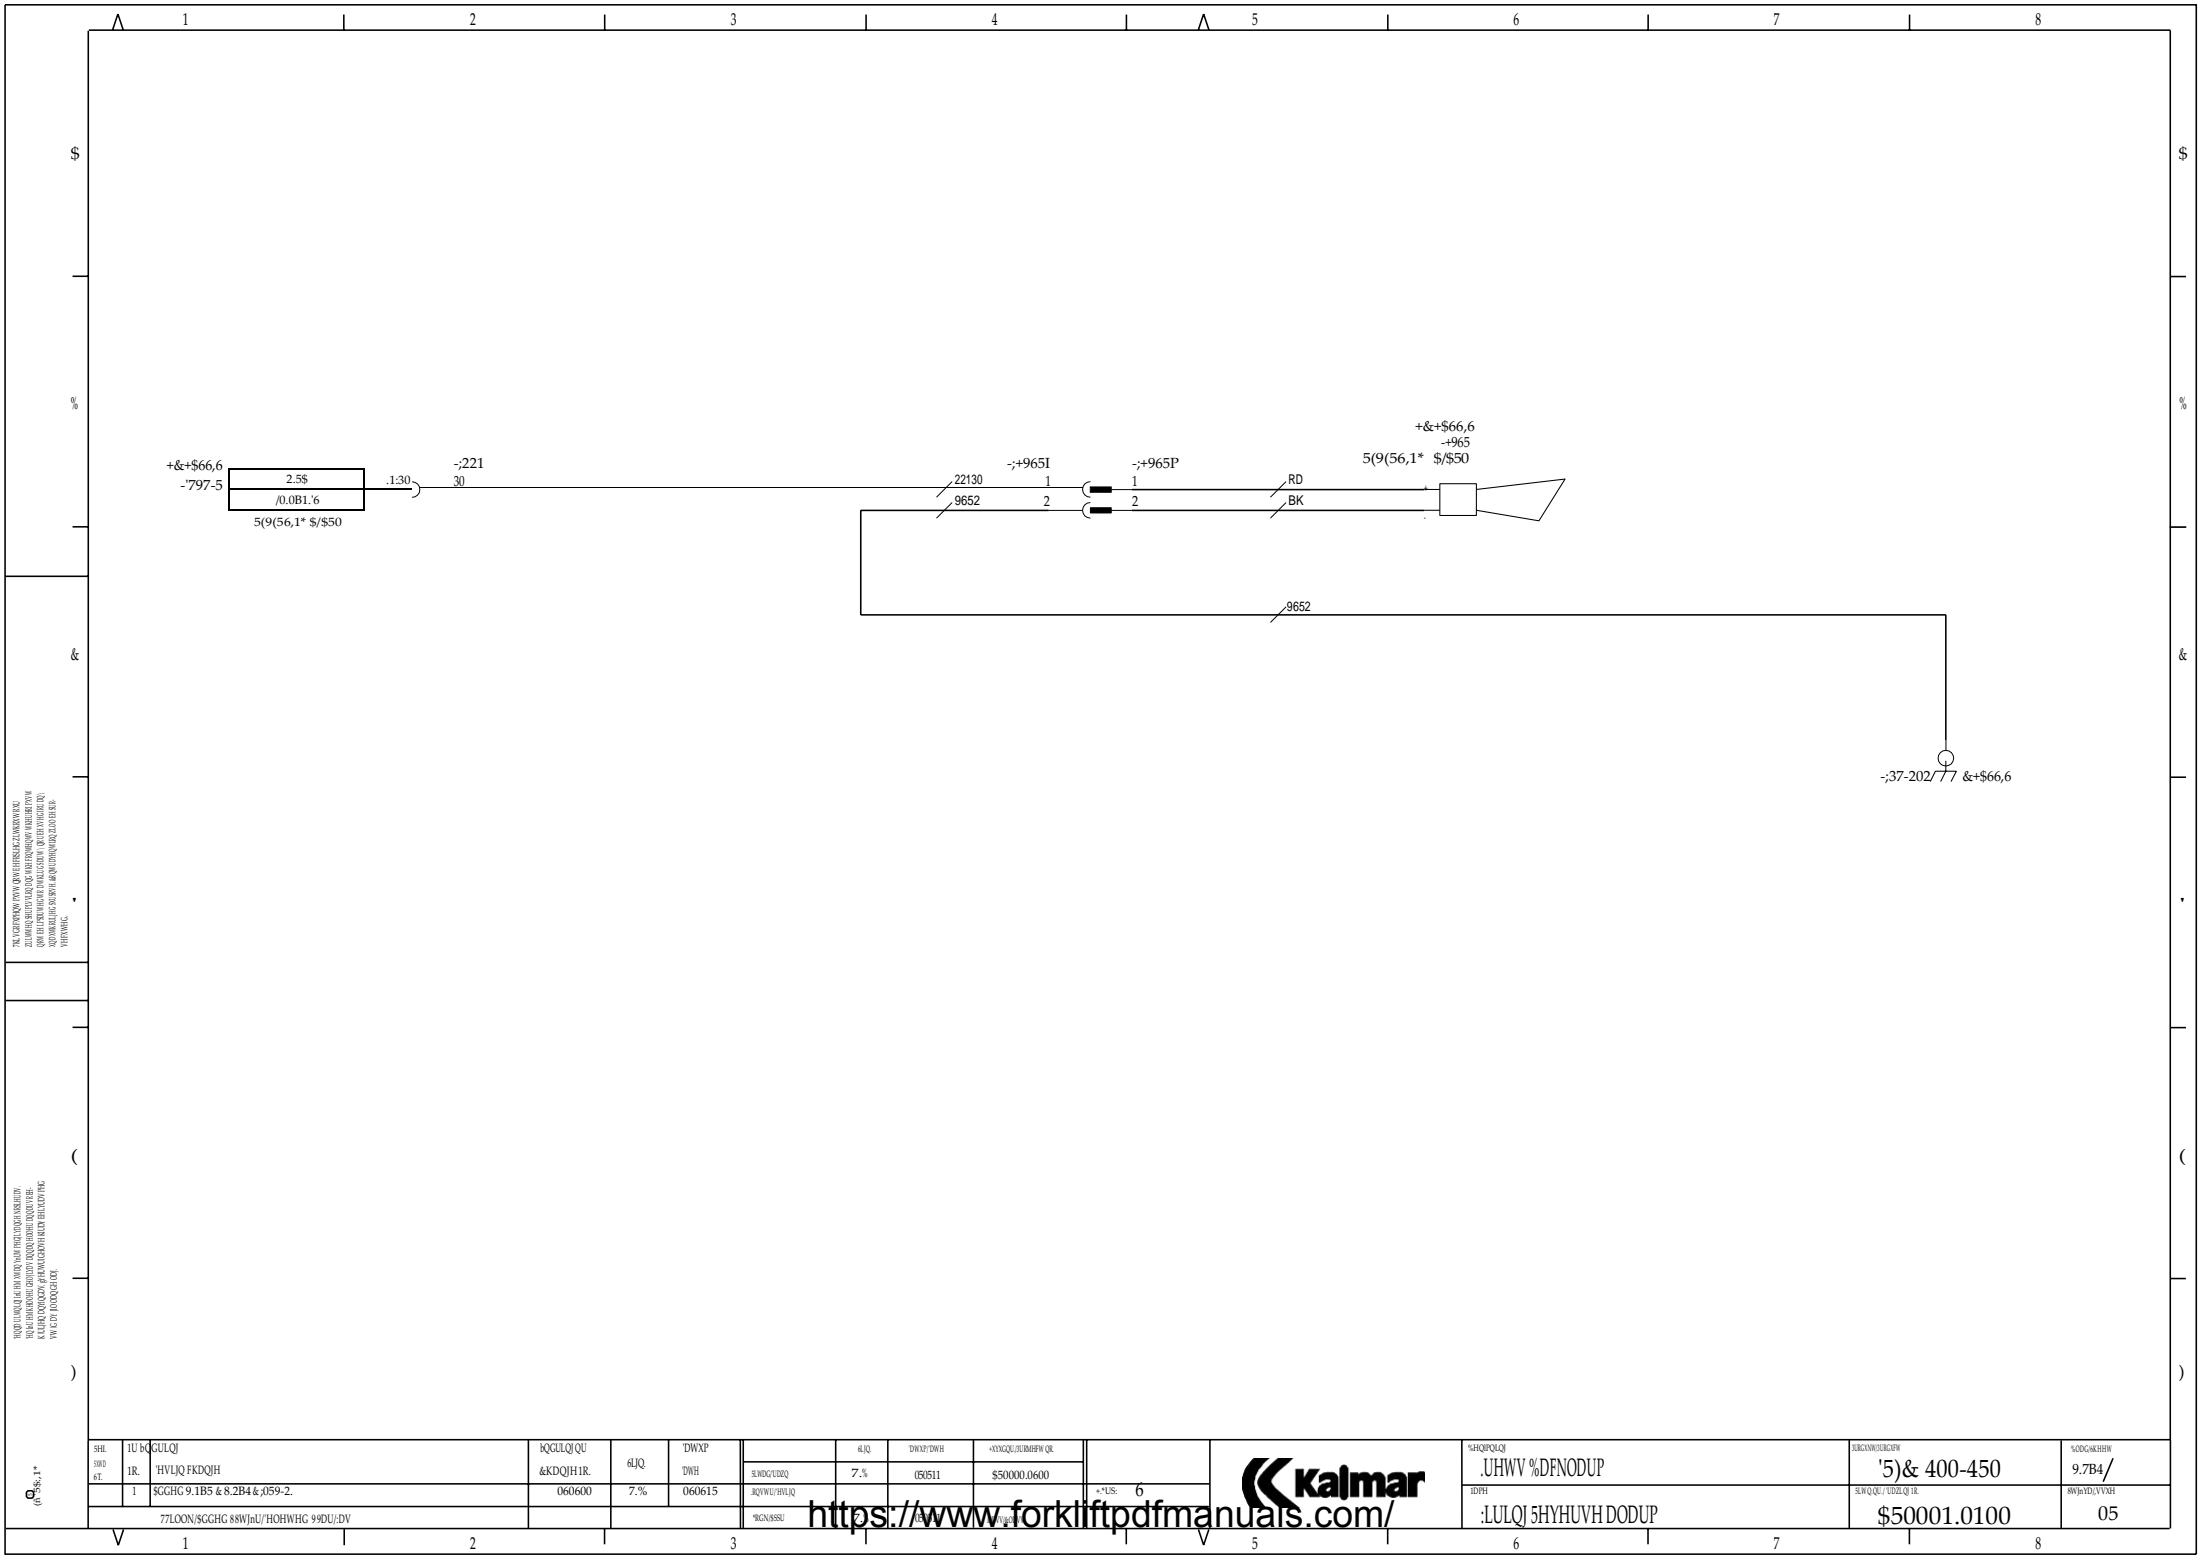


1. 2. 3. 4. 5. 6. 7. 8.
 \$
 %
 &
 (

1. 2. 3. 4. 5. 6. 7. 8.
 \$
 %
 &
 (

| | | | | | | | | | | |
|----|-------------------------------------|-----------|--------|-----|----------|-----------------|----------|----------------------|-----------------|-------------|
| SH | 1U K CULQJ | KQULQJ QU | DWXP | 6LQ | DWXP/DWH | ~XDCQJLUBHPP QK | | *KHOPQJQJ | %KCNWUDODUP | %ODGNHWH |
| IR | HVLQJ FKDQJH | &KDQJH IR | DWH | 7% | 050511 | \$50000.0600 | | .UHWV %DENODUP | '5)& 400-450 | 9.7B4/ |
| 1 | SCGHC 9.1B5 & 8.2B4 & .059-2. | 060600 | 060615 | 7% | | | ++LUS. 6 | IDPH | \$WQQU/UDZQJ IR | \$WBYD.VVXH |
| | 77LOON/SCGHC 88VJmL/HOHWHC 99DUJ/DV | | | | | | | :LULQJ SHYHUVH DODUP | \$50001.0100 | 05 |



<https://www.forkliftpdfmanuals.com/>

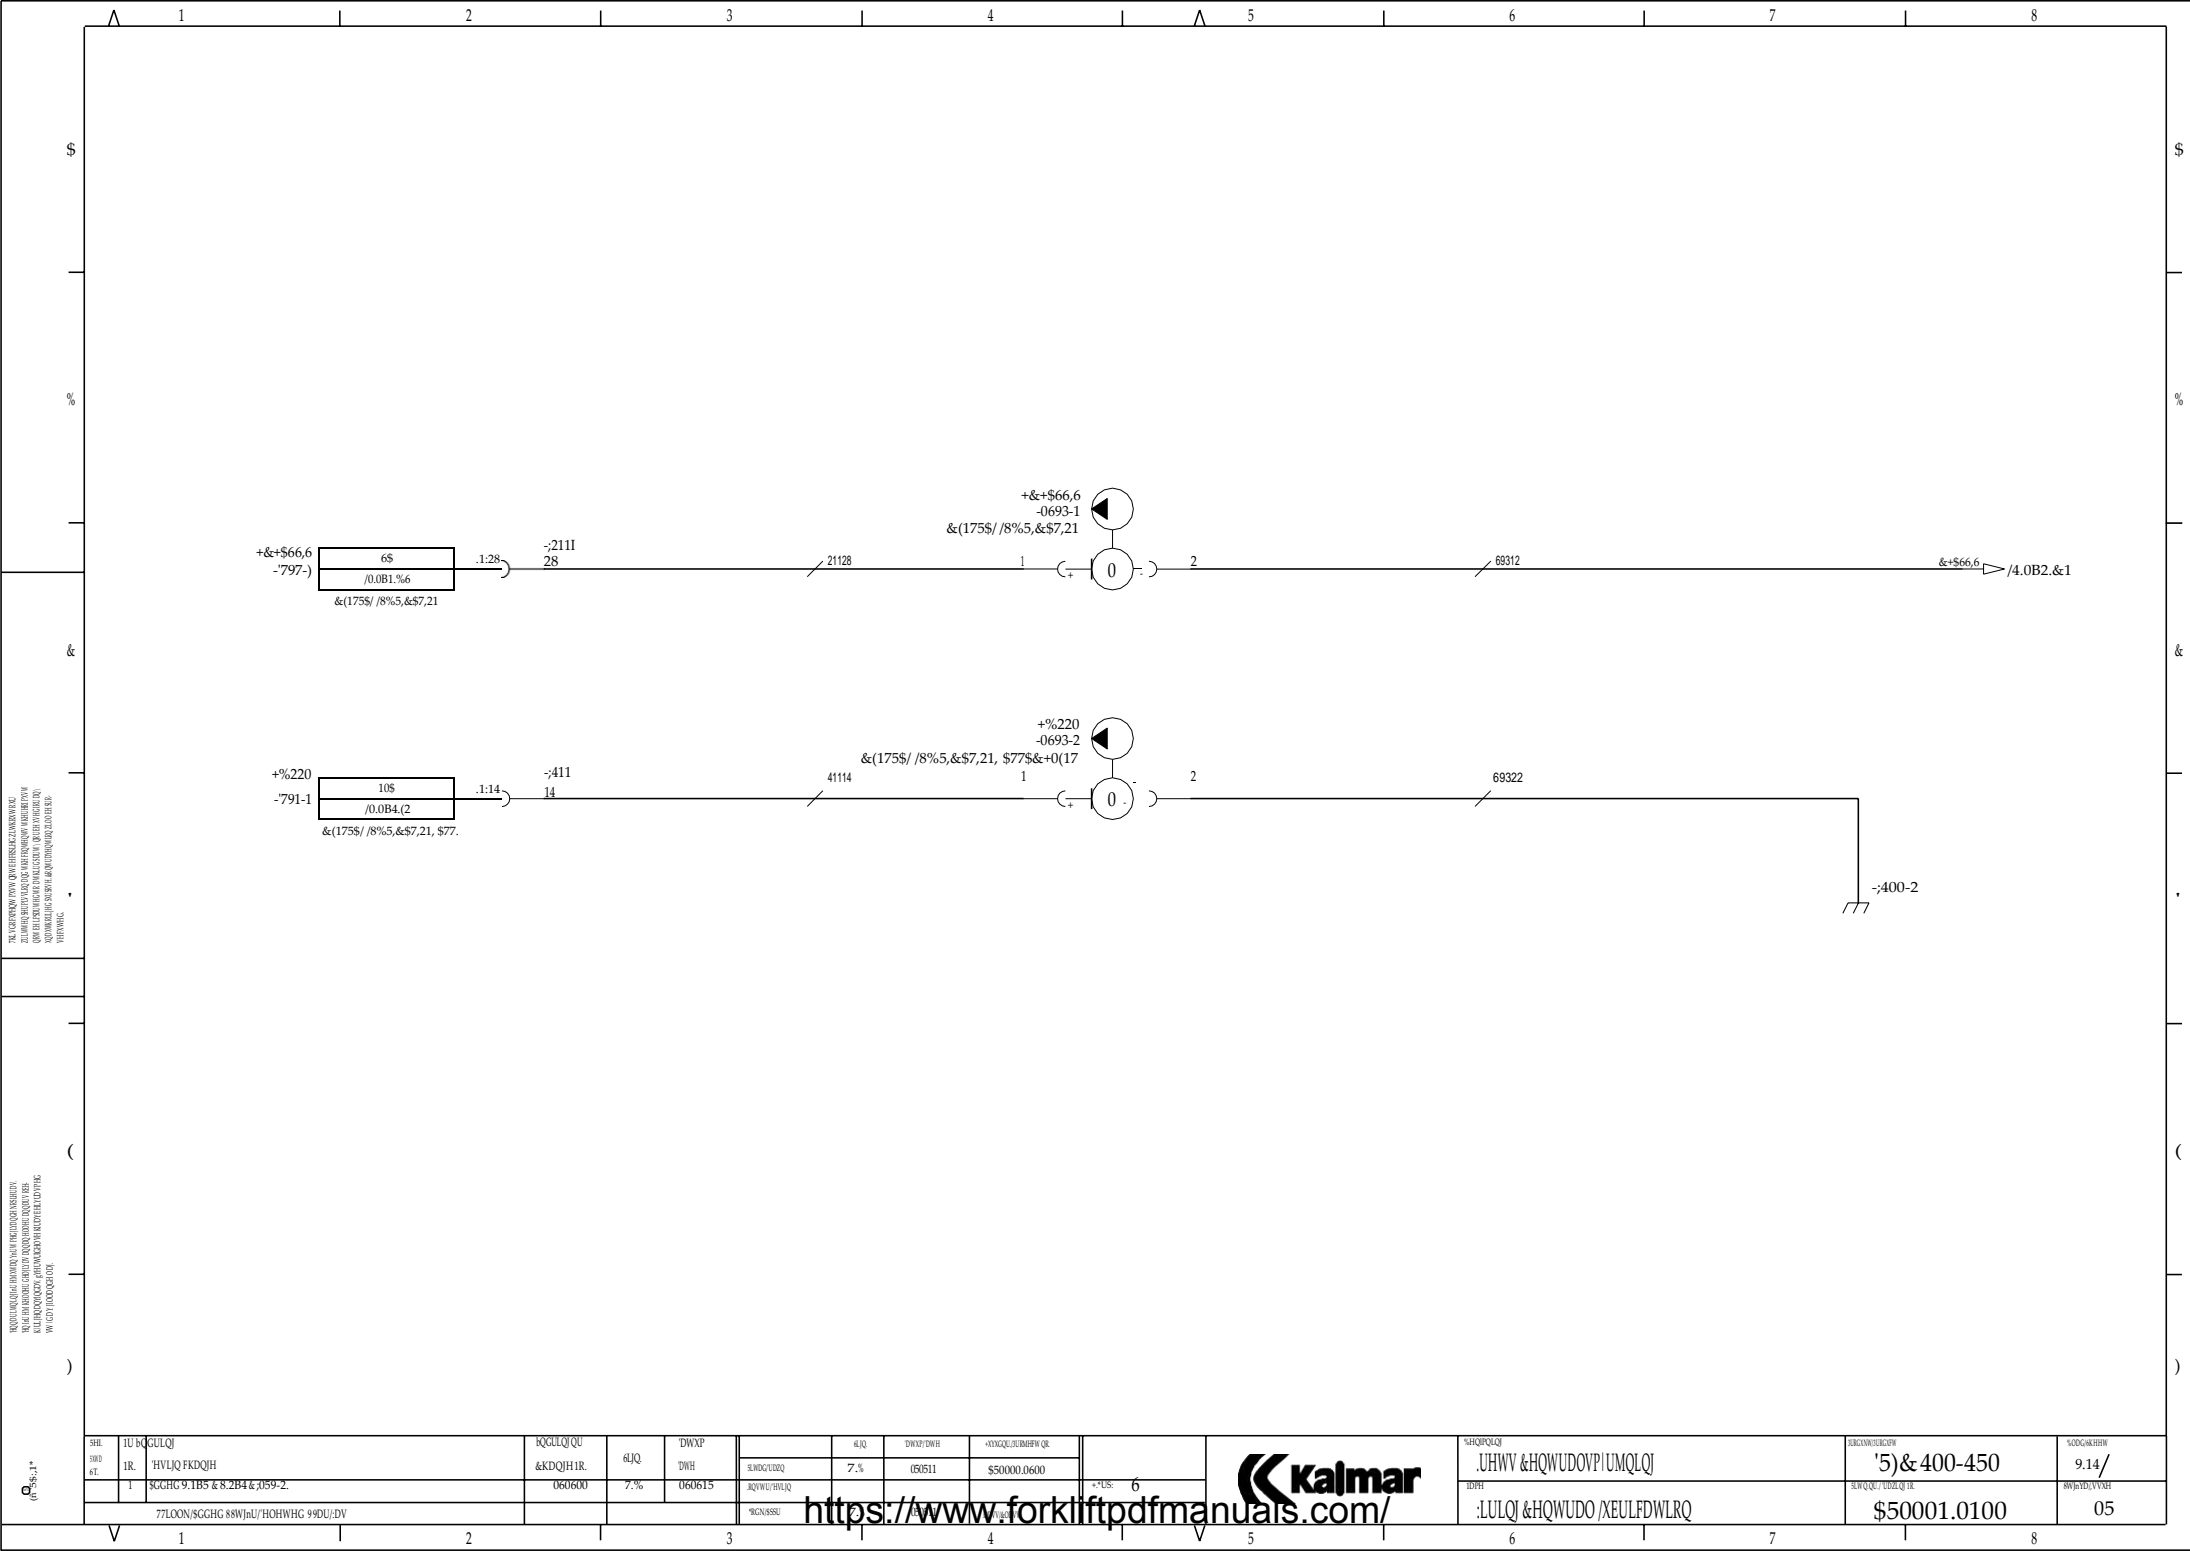


TRUCK CHASSIS WITH OVERHEAD RIGGING
 FOR FORK LIFT TRUCKS
 WITH OVERHEAD RIGGING
 WITH OVERHEAD RIGGING
 WITH OVERHEAD RIGGING

TRUCK CHASSIS WITH OVERHEAD RIGGING
 FOR FORK LIFT TRUCKS
 WITH OVERHEAD RIGGING
 WITH OVERHEAD RIGGING
 WITH OVERHEAD RIGGING

| | | | | | | | | | |
|-----|------------------------------------|------------|--------|-----|----------|---------------|----------------------------|----------------|------------|
| SH | 1U BK CULQJ | RQQLQJ QU | DWXP | 6LQ | DWXP/DWH | NDXQJLUBHP QJ | SHQWPLQJ | SEKNUJURQJ | SDCGRBHW |
| SRO | IR: HVLQ FKDJH | &KDQJH IR. | DWH | 7% | 05B11 | \$50000.0600 | .UHWV & HQWUDOVPIUMQLQJ | '5) & 400-450 | 9.14/ |
| ST | 1 SGGHG 9.1B5 & 8.2B4 & 7B9-2. | 060600 | 060615 | 7% | | | DPH | SEWQJLUDZQJ RE | SHWYDULVWH |
| | 77LOON/SGGHG 88WJmU/HOHWHG 99DU/DV | | | | | | :LULQJ & HQWUDO/XEULFDWLRQ | \$50001.0100 | 05 |



<https://www.forkliftpdfmanuals.com/>

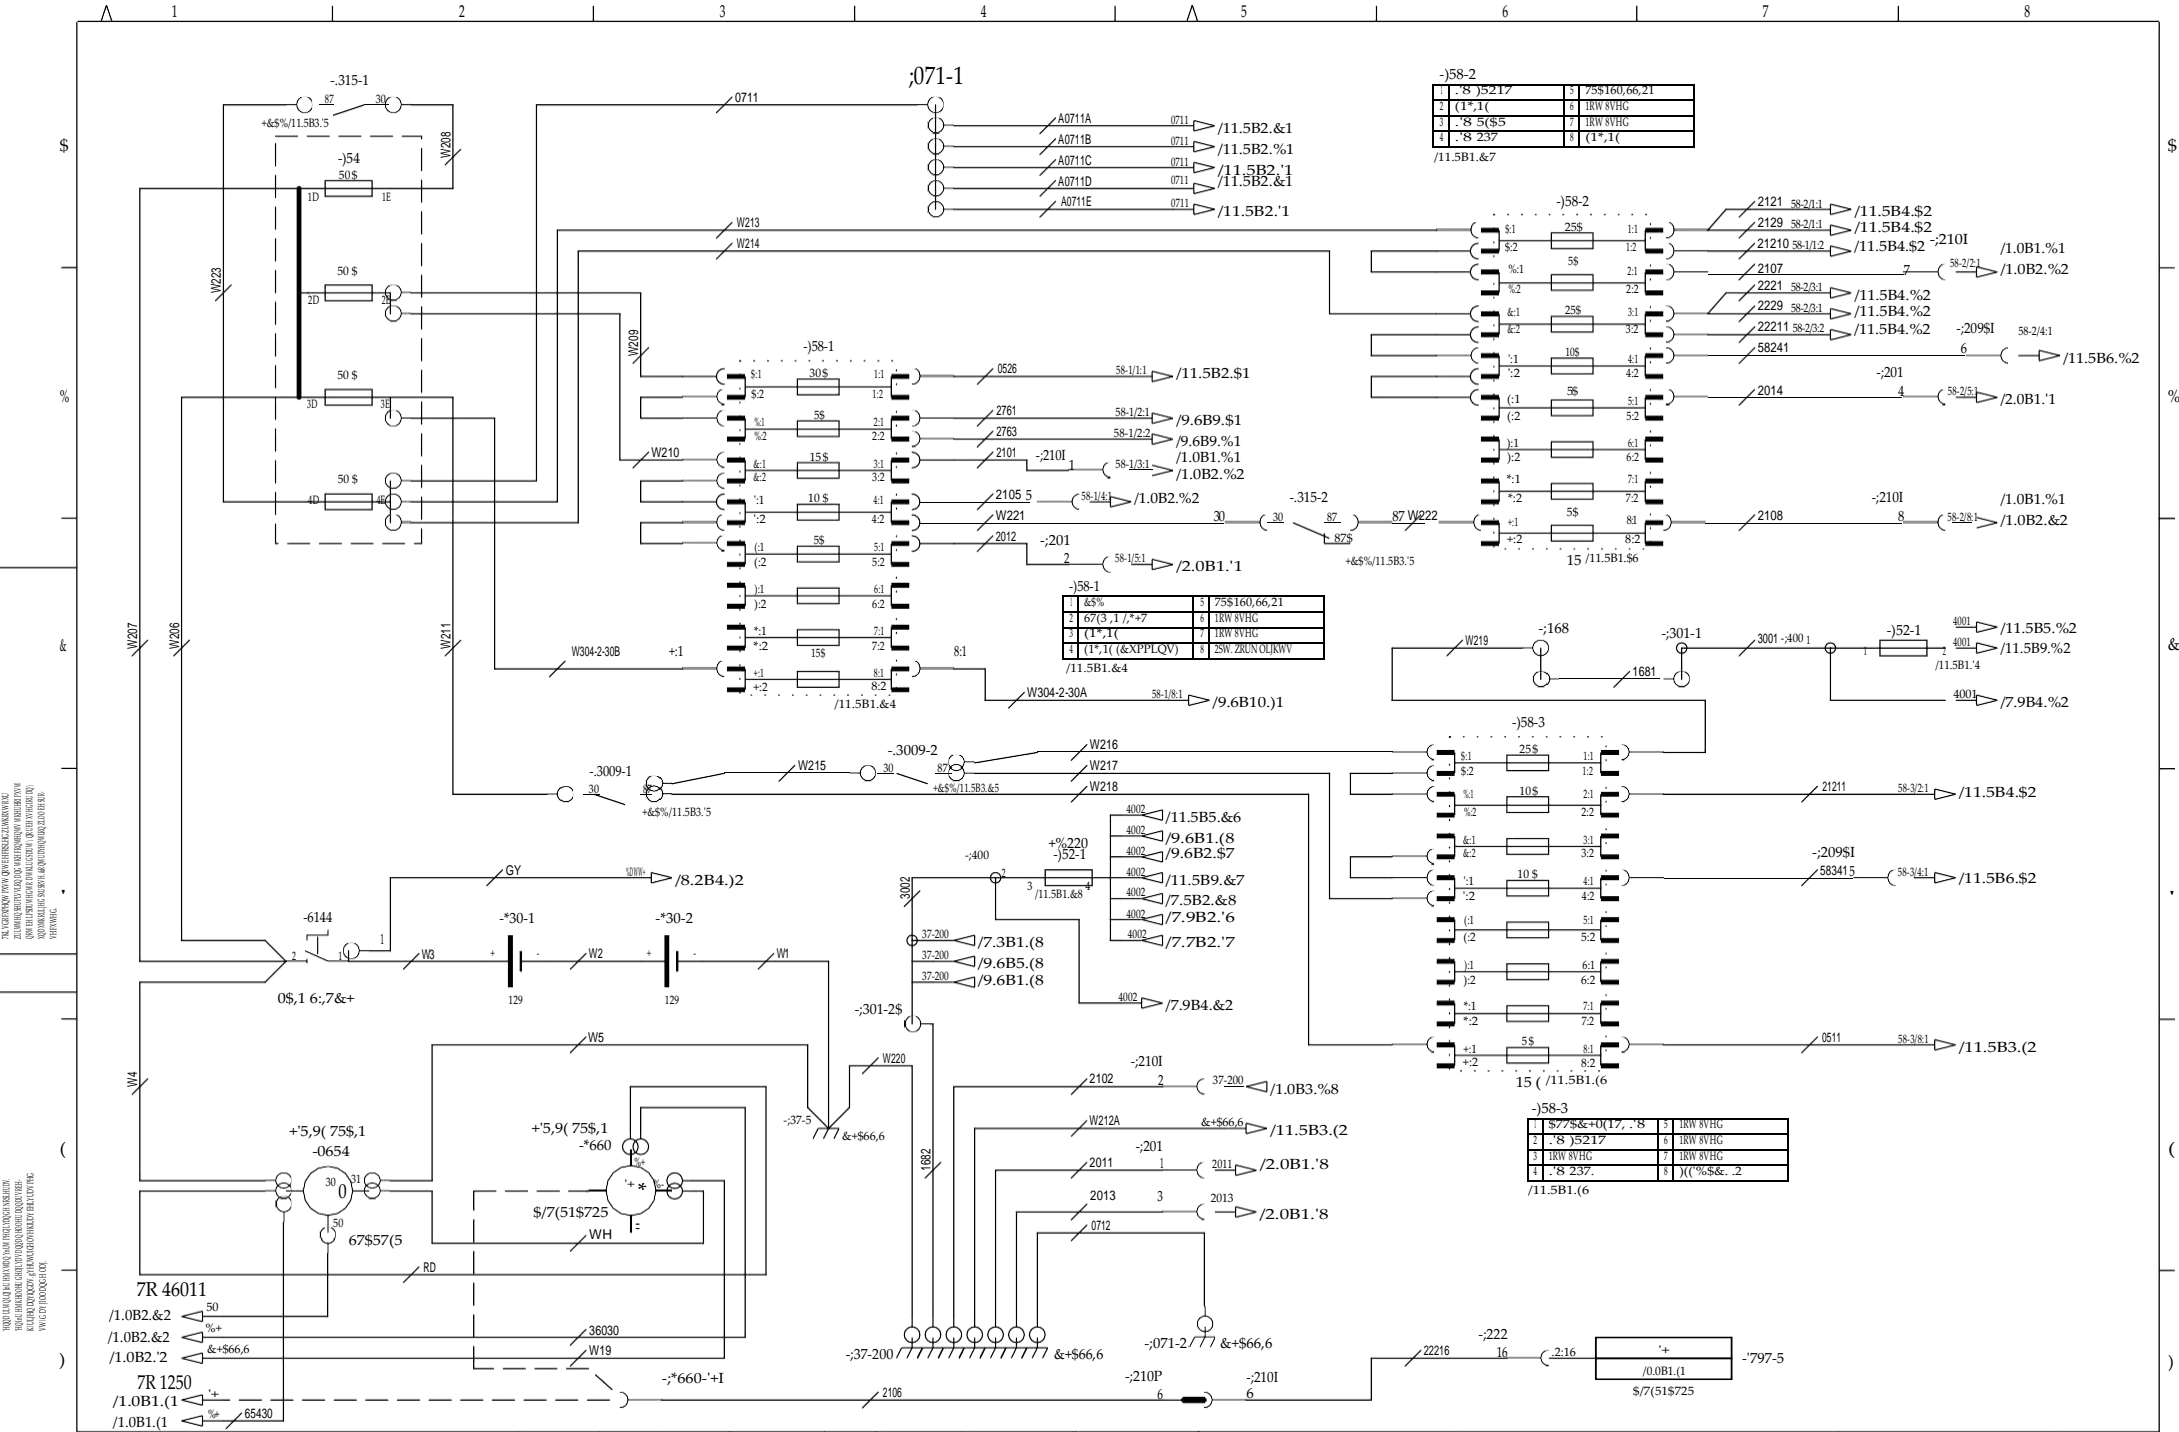

| | | | | | | | | |
|----|-------------------------------------|-----------|--------|-----|----------|-----------------|--------------|--------------|
| SH | 10 K GULQJ | HQULQJ QU | DWXP | 6LQ | DWXP/DWH | 4XGULQJURHPH QR | 4XHPQJQJ | 500GRHW |
| IR | HVLQJ FKDJQH | &KDQJHR | DWH | 6LQ | 0511 | \$50000.0600 | UHWV 6WU P | 5) & 400-450 |
| 1 | SGGHC 9 1B5 & 8.2B4 & .059-2. | 060600 | 060615 | 7% | | +&+\$66,6 | DPH | 5WUQJ/URZQR |
| | | | | | | +US. 6 | :LULQJ 3RZHU | \$50001.0100 |
| | 77LOON/SGGHC 88VJmL/HOHWHC 99DUJ/DV | | | | | | | 8WUWU/DVSH |
| | | | | | | | | 05 |




<https://www.forkliftpdfmanuals.com/>

ALL OPERATIONS AND REPAIRS MUST BE PERFORMED BY QUALIFIED PERSONNEL ONLY. THE USER SHALL BE RESPONSIBLE FOR THE PROPER USE AND MAINTENANCE OF THE EQUIPMENT. THE USER SHALL BE RESPONSIBLE FOR THE PROPER USE AND MAINTENANCE OF THE EQUIPMENT. THE USER SHALL BE RESPONSIBLE FOR THE PROPER USE AND MAINTENANCE OF THE EQUIPMENT.

THIS DOCUMENT IS THE PROPERTY OF KALMAR. IT IS LOANED TO YOU FOR YOUR USE ONLY. IT IS NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM.


© 2011

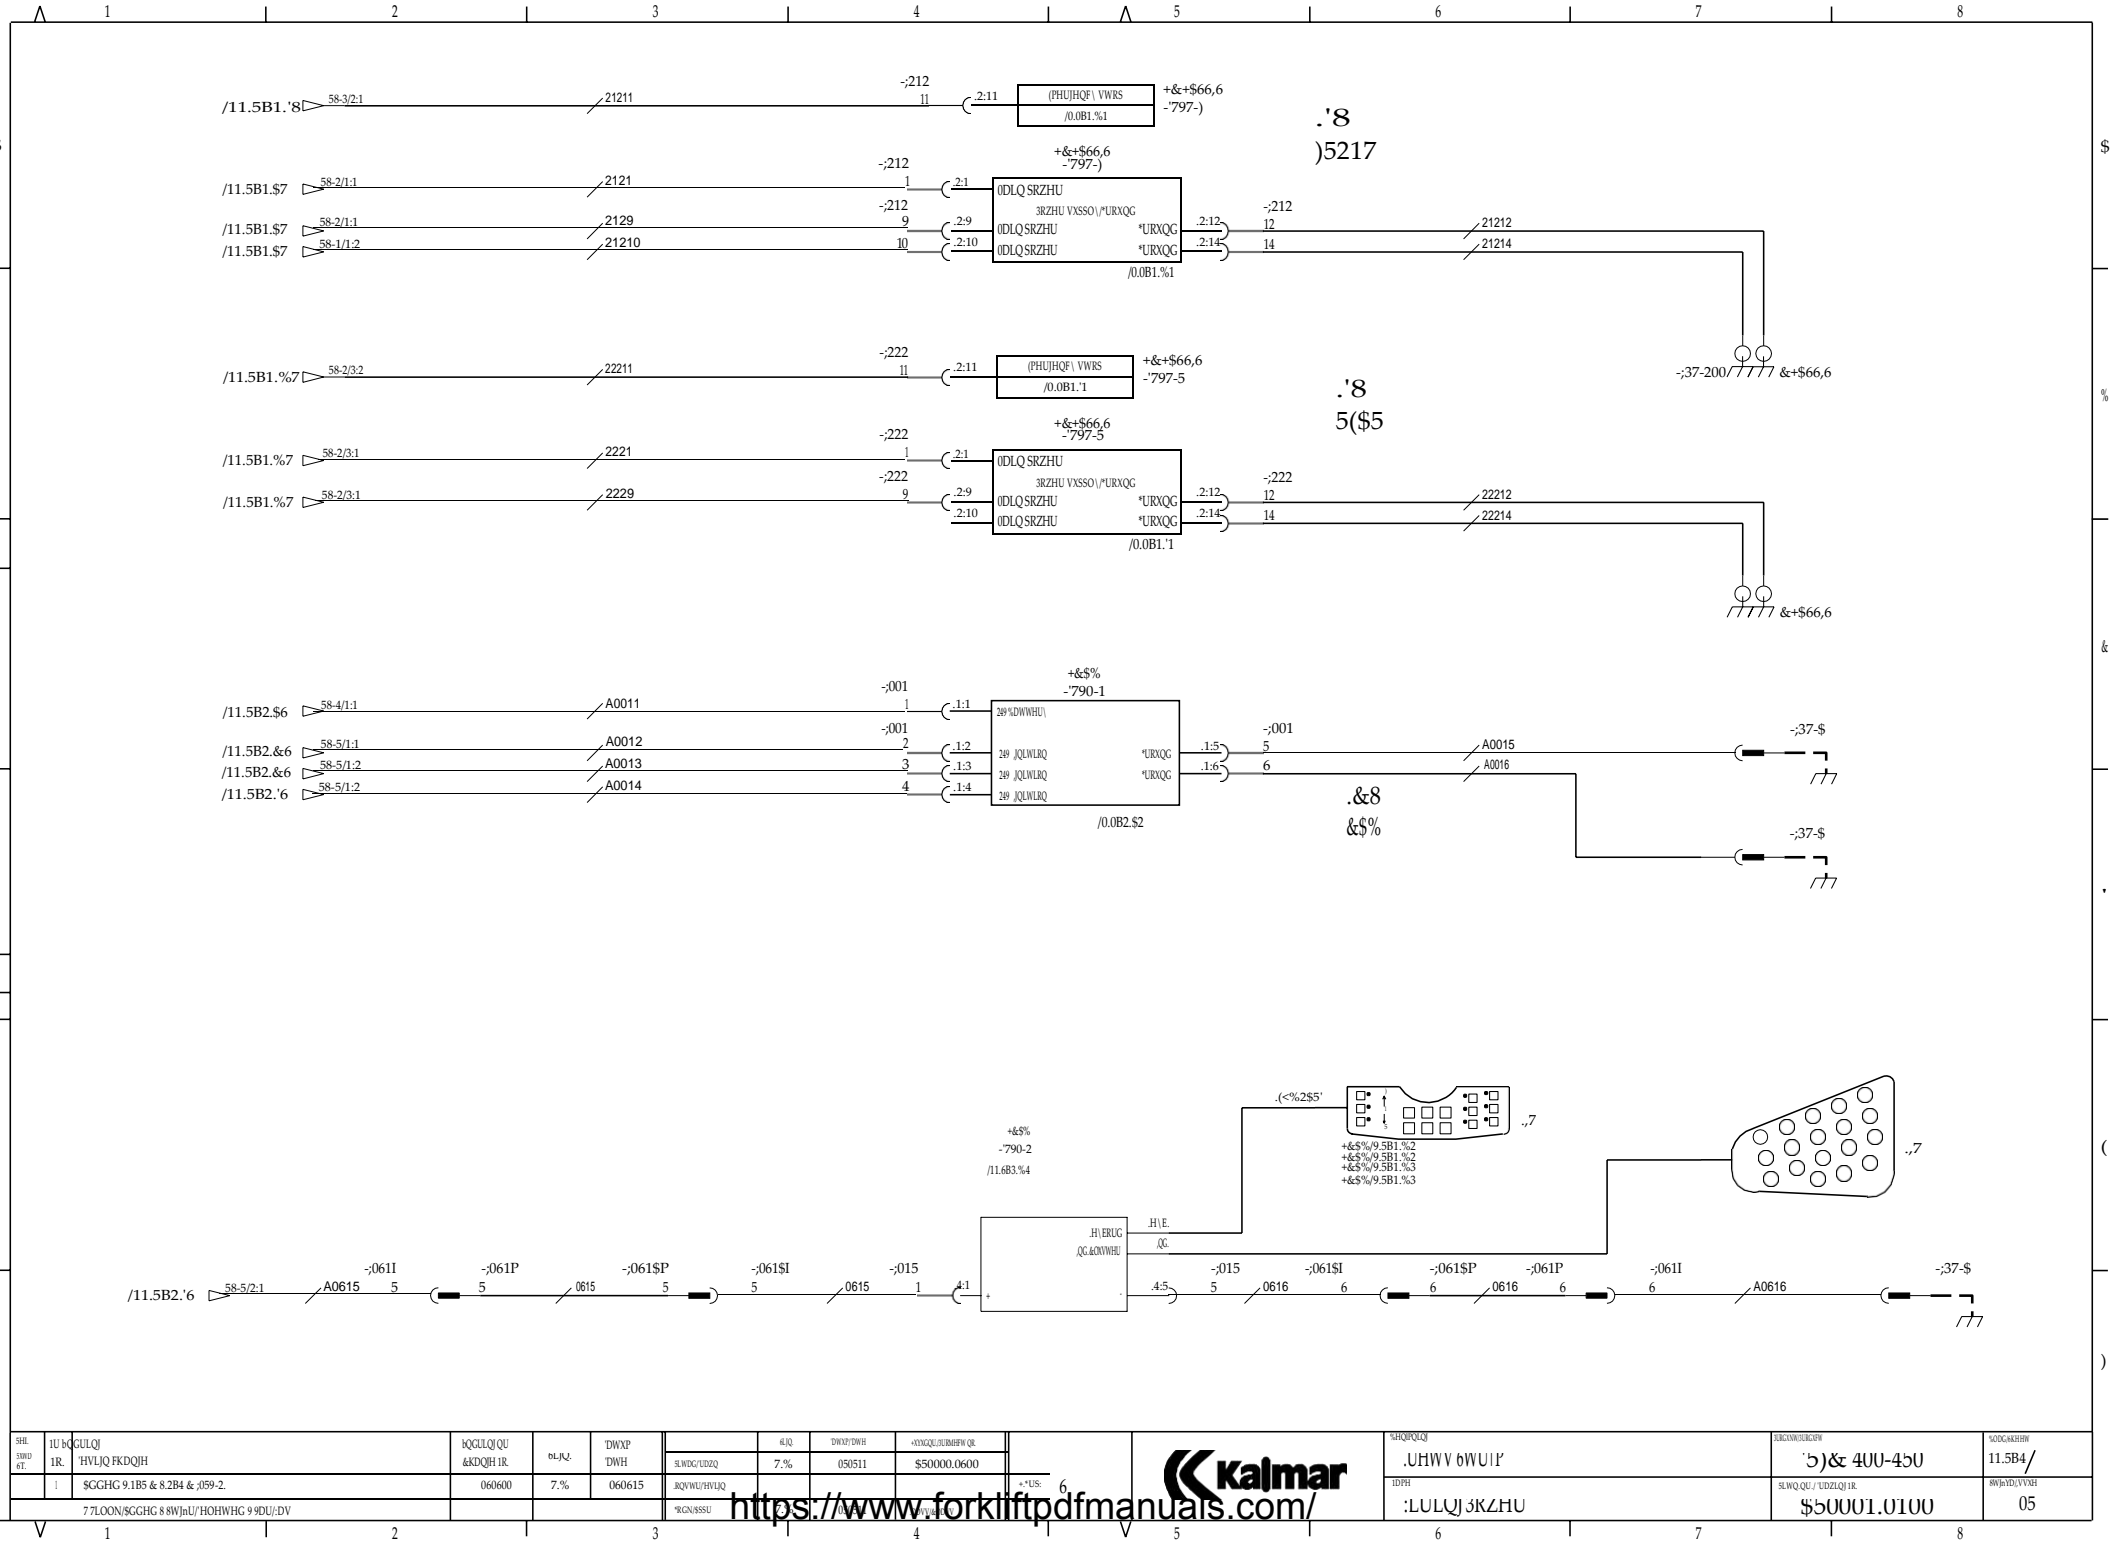

| | | | | | | | | | | | | |
|----------------|----------------|-----------------------------------------------------------------------------------------------|--------------------------------|--------------|-----------------------|-------------|-------------------|---------------------------------|---------|---------------------------------------|------------------------------------------|----------------------------|
| SHT
1R
1 | ULC
1R
1 | GULQJ
HVLJQ FKDJH
SCGHC 9.1B5 & 8.2B4 & .059-2
77L00N/SCGHC 8.8WJNU/HOHWHG 9.9DUJ/DV | RGLQJ QU
&KDJH IR
060600 | DLJL
7.0% | DWXP
DWH
060615 | 4LQ
7.0% | DWX/DWH
050511 | -XVQJLJURHFW QR
\$50000.0600 | +*US: 6 | SHTQJQJ
.UHWV 6WUIP
:LULQJJKZHU | SKCNWURSKP
)& 400-450
\$50001.0100 | %DCCASRHH
11.5B4/
05 |
|----------------|----------------|-----------------------------------------------------------------------------------------------|--------------------------------|--------------|-----------------------|-------------|-------------------|---------------------------------|---------|---------------------------------------|------------------------------------------|----------------------------|



<https://www.forkliftpdfmanuals.com/>

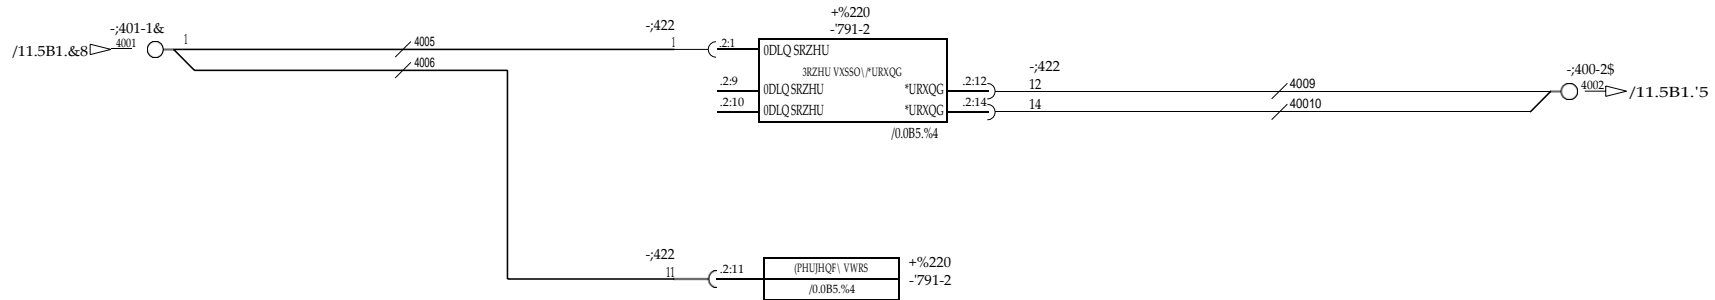

1. 2. 3. 4. 5. 6. 7. 8.

1. 2. 3. 4. 5. 6. 7. 8.

| | | | | | | | | | | |
|----|-------------------------------------|-----------|--------|------|----------|-----------------|---------|-------------------|----------------|------------|
| SH | 1U K CULQJ | KQULQI QU | DWXP | 6LQ | DWXP/DWH | -XDCQI,UBHPP QI | | *HQPQLQI | RECNUM/RECEN | *SODGKIBHW |
| IR | HVLUQ FKDQJH | &KDQJH IR | DWH | 7.% | 050511 | \$50000.0600 | | .UHWV 6WU P \$JJ | '5)& 400-450 | 11.5B9/ |
| 1 | SGGHC 9.1B5 & 8.2B4 & .059-2. | 060600 | 060615 | 7.0% | | | +*US. 6 | IDPH | SW/QCQ/UDZQ IR | SWBYD.VVXH |
| | 77LOON/SGGHC 88VJmU/HOHWHG 99DUJ/DV | | | | | | | :LULQJ 3RZHU \$WW | \$50001.0100 | 05 |



<https://www.forkliftpdfmanuals.com/>


\$

%

&

(

)

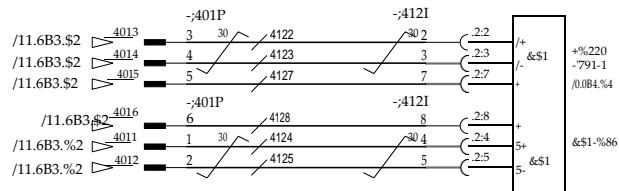



THE INFORMATION CONTAINED HEREIN IS THE PROPERTY OF KALMAR AND IS NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM.

THIS DOCUMENT IS THE PROPERTY OF KALMAR AND IS NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM.

| | | | | | | | | | | | |
|----|-----------------------------------|------------|-----|--------|-----|----------|-----------------|---------|----------------------|--------------|----------|
| SH | 1U K CULQJ | KQULQJ QU | 6LQ | DWXP | 6LQ | DWXP/DWH | -XDCQJLUBHPP QJ | | SHQPCQJ | SHCNWJDCJW | SDCGRJHW |
| ST | IR. HVLQJ FKDJH | &KDJQH IR. | 6LQ | DWH | 6LQ | DWH | \$50000.0600 | | .UHWV&\$1-%86 \$** | '5)& 400-450 | 11.6B4/ |
| 1 | SGGHC 9.1B5 & 8.2B4 & .059-2. | 060600 | 7% | 060615 | 6LQ | DWH | | +.US. 6 | | | |
| | 77LOON/SGGHC 88VJmL/HHWHG 99DU/DV | | | | 6LQ | DWH | | | :LULQJ &\$1-%86 \$WW | \$50001.0100 | 05 |



<https://www.forkliftpdfmanuals.com/>

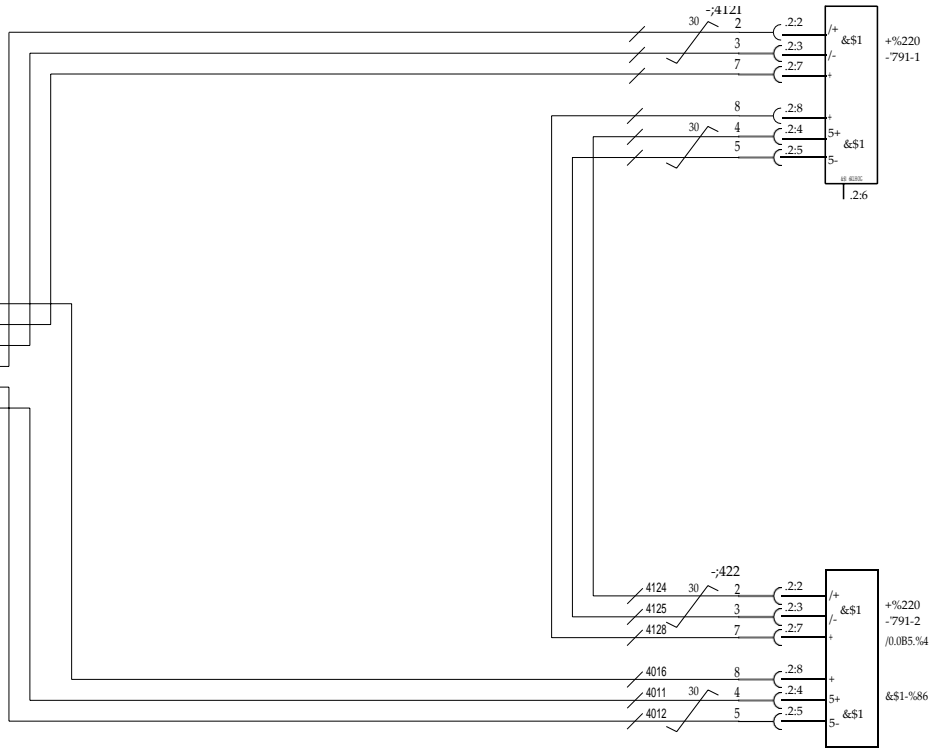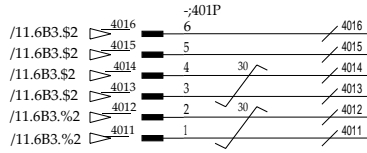

6WDQGDU8 . '8

2SWLRQ . '8


ALL OPERATIONS ON THIS EQUIPMENT MUST BE ACCORDING TO THE INSTRUCTIONS PROVIDED WITH THE EQUIPMENT. THE USER IS RESPONSIBLE FOR THE PROPER USE OF THE EQUIPMENT.

THIS EQUIPMENT IS DESIGNED TO BE USED IN A SAFE MANNER. THE USER IS RESPONSIBLE FOR THE PROPER USE OF THE EQUIPMENT.

| | | | | | | | | | | | | | | |
|----|------------|-------------------------------------|--------|------|--------|----------|-----------------|---------|---------|----------------------|----------------|--------------|------------|---------|
| SH | 1U K CULQJ | HQULQJ QU | 6LQ | DWXP | 6LQ | DWXP/DWH | -XDCQJLUBHPP QK | | SHQPCQJ | .UHWV &\$1-%86 \$** | RECNUM/RECEN | '5)& 400-450 | 100C#BEN | 11.6B5/ |
| ST | 1 | SCGHC 9.1B5 & 8.2B4 &.059-2 | 060600 | 7% | 060615 | 060511 | \$50000.0600 | +*US. 6 | IDPH | :LULQJ &\$1-%86 \$WW | SLWQJ/ULZQJ IR | \$50001.0100 | 8WBYD.VVXH | 05 |
| | | 77LOON/SCGHC 88WJmL/HOHWHC 99DUJ/DV | | | | | | | | | | | | |



<https://www.forkliftpdfmanuals.com/>

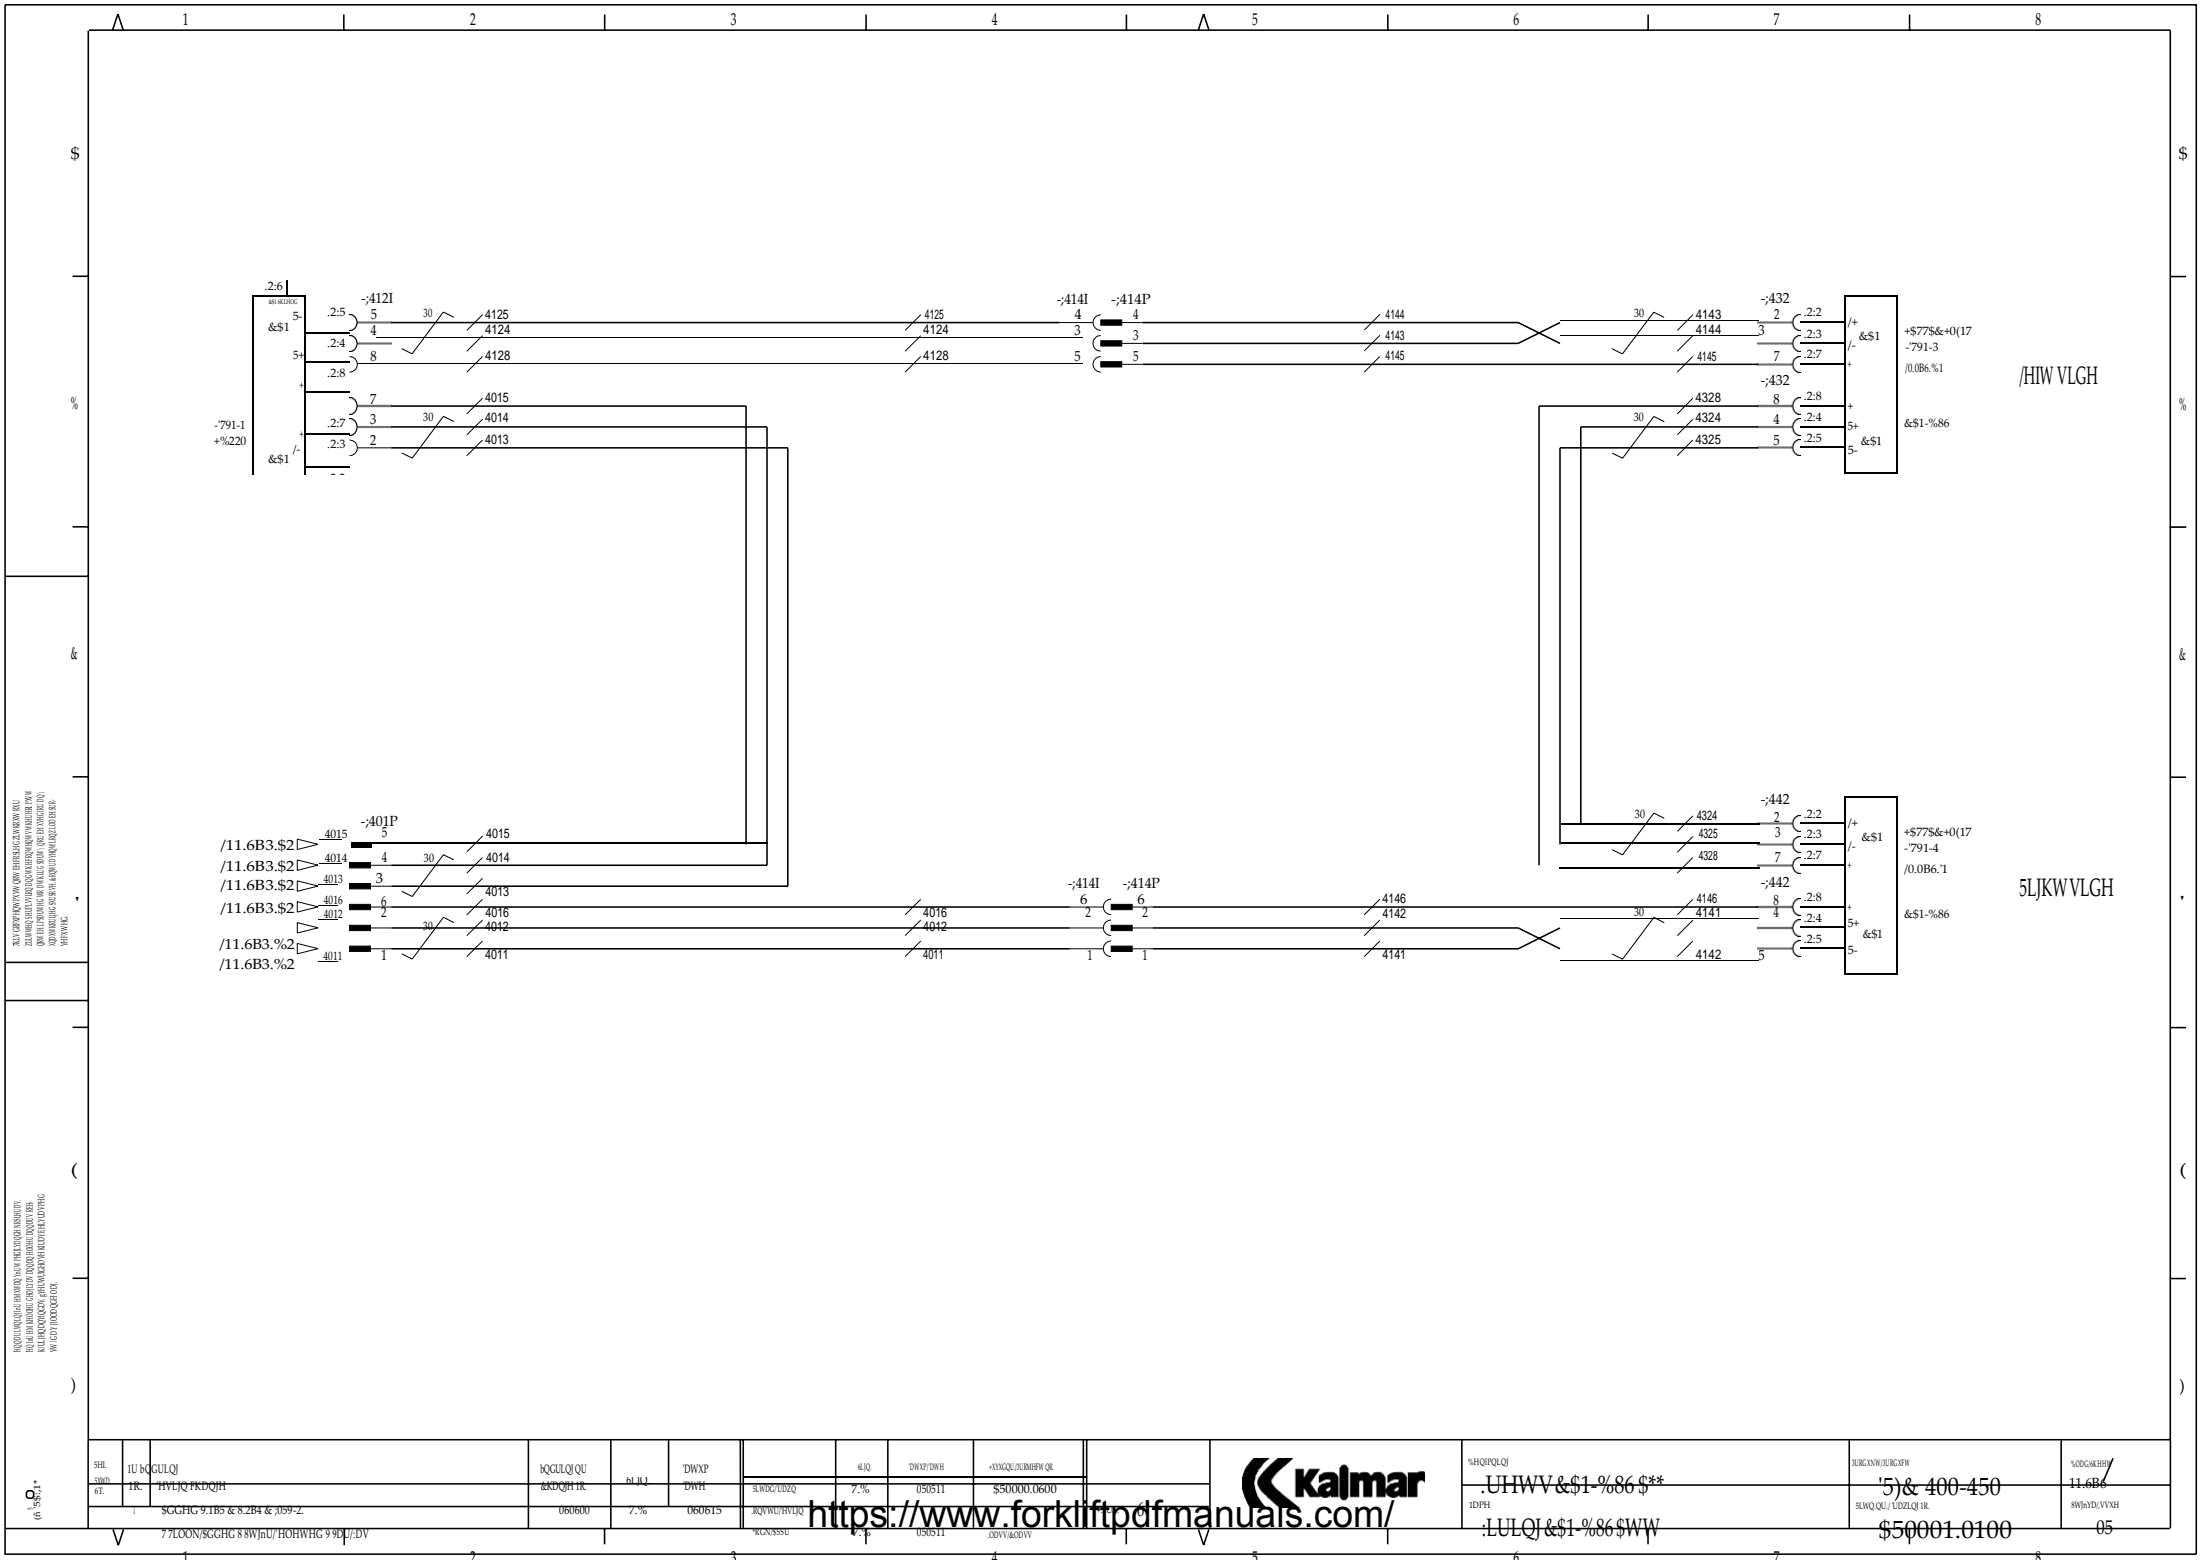

ALL OPERATIONS ON THIS WIRING DIAGRAM MUST BE PERFORMED BY A QUALIFIED ELECTRICIAN OR A PERSON TRAINED AND QUALIFIED TO PERFORM SUCH OPERATIONS. THE USER SHALL BE RESPONSIBLE FOR THE PROPER INSTALLATION AND MAINTENANCE OF THIS WIRING DIAGRAM.

THIS WIRING DIAGRAM IS A REPRESENTATION OF THE WIRING AS SHOWN IN THE ORIGINAL DRAWING. IT IS NOT A GUARANTEE OF THE ACCURACY OF THE INFORMATION CONTAINED HEREIN. THE USER SHALL BE RESPONSIBLE FOR THE PROPER INSTALLATION AND MAINTENANCE OF THIS WIRING DIAGRAM.

| | | | | | | | | | |
|-------------|---------------|-----------------------------------------------------------------|-----------|-------|-----------------|-----------------------------|-----------------------------------|-------------------------------|---------------------|
| SH | U B C U L Q J | I Q C U L Q U | D W X P | 6 J Q | D W X P / D W H | 4 X D C U L Q J R H P W Q R | SHO P Q I Q J | B U C X W V U R C W F W | 1 0 0 C A R H P H |
| 6 T | I R | H V L J Q R D O H | D W H | 7 . % | 0 5 0 5 1 1 | \$ 5 0 0 0 0 . 0 6 0 0 | . U H W V & \$ 1 - % 8 6 \$ ** | ' 5) & 4 0 0 - 4 5 0 | 1 1 . 6 B 4 |
| (6) 3 6 2 | | S G G H C 9 1 B S & 8 . 2 B 4 & 7 0 5 9 - 2 | 0 6 0 1 5 | 7 . % | 0 6 0 1 5 | | : L U L Q J & \$ 1 - % 8 6 \$ W W | S L W Q Q U / L D Z L Q J I R | 8 W J A D U V V A H |
| | | 7 7 L O O N / S G G H C 8 S W J A U / H O H W H C 9 9 0 J / D V | 0 6 0 1 5 | 7 . % | 0 6 0 1 5 | | \$ 5 0 0 0 1 . 0 1 0 0 | | 0 5 |



<https://www.forkliftpdfmanuals.com/>

Komponentförteckning / List of Components

| Number | Categ. | Svenska | English |
|--------|--------|----------------------------------|-------------------------------------|
| 30 | G | Batteri | Battery |
| 32 | A | Kretskort elcentral | Printed circuit board, Junction box |
| 37 | X | Terminal stomanslutning | Earthing terminal on chassis |
| 39 | X | Terminal minusanslutning | Terminal, negative terminal |
| 51 | F | Säkringshållare 1-polig | Fuse holder, 1-pole |
| 52 | F | Säkringshållare 2-polig | Fuse holder, 2-pole |
| 56 | F | Säkringshållare 6-polig | Fuse holder, 6-pole |
| 58 | F | Säkringshållare 8-polig | Fuse holder, 8-pole |
| 59 | F | Säkringshållare 12-polig | Fuse holder, 12-pole |
| 62 | F | Batterihandske 2-polig | Battery connector, 2-pole |
| 64 | F | Batterihandske 4-polig | Battery connector, 4-pole |
| 72 | X | Stickuttag 2-polig | Outlet, 2-pole |
| 77 | X | Stickuttag 7-polig | Outlet, 7-pole |
| 78 | X | Stickuttag extra 7-polig | Outlet, extra, 7-pole |
| 100 | S | Strömställare ljus | Switch, light |
| 101 | S | Strömställare omk hel/halvljus | Switch, main/dipped beam |
| 102 | S | Strömställare dimljus | Switch, fog light |
| 103 | S | Strömställare fjärrljus | Switch, distance light |
| 104 | S | Strömställare lastljus | Switch, mast lights |
| 105 | S | Strömställare arbetsljus | Switch, working lights |
| 106 | S | Strömställare containerljus | Switch, container light |
| 107 | S | Strömställare park broms | Switch, parking brake |
| 108 | S | Strömställare centr smörjning | Switch, central lubricator |
| 109 | S | Strömställare varningsljus | Switch, hazard lights |
| 110 | S | Strömställare rot varningsljus | Switch, rotating hazard beacon |
| 111 | S | Strömställare fönsterhiss | Switch, window regulator |
| 112 | S | Strömställare kylanläggning (AC) | Switch, air conditioner (AC) |
| 113 | S | Strömställare styrning alt | Switch, alternative steering |
| 114 | S | Strömställare läsbelysning | Switch, reading light |
| 115 | S | Strömställare instr belysning | Switch, instrument illumination |
| 116 | S | Strömställare innerbelysning | Switch, interior lighting |
| 117 | S | Strömställare värme | Switch, heating |
| 118 | S | Strömställare fläktn värme | Switch, heater fan |
| 119 | S | Strömställare vindrutetorkare | Switch, wiper |
| 120 | S | Strömställare spolare | Switch, washer |
| 121 | S | Strömställare blackout | Switch, blackout |
| 122 | S | Strömställare nöd hydraulpump | Switch, emergency hydraulic pump |
| 123 | S | Strömställare backspegel | Switch, observation mirror |
| 124 | S | Strömställare kallstart | Switch, cold start |
| 125 | S | Strömställare avgasbroms | Switch, exhaust brake |
| 126 | S | Strömställare diff spärr/broms | Switch, diff. Block |
| 127 | S | Strömställare värmesystem diesel | Switch, heating system diesel |
| 128 | S | Strömställare kraftuttag sida | Switch, power take off side |
| 129 | S | Strömställare kraftuttag bak | Switch, power take off rear |
| 130 | S | Strömställare hög/lågväxel | Switch, high/low gear |
| 131 | S | Strömställare färdväjlare fram | Switch, gear selector forward |
| 132 | S | Strömställare färdväjlare bak | Switch, gear selector rear |
| 135 | S | Strömställare växelväjlare | Switch, gear shift |
| 136 | S | Strömställare framhjuls styrning | Switch, forward wheel steering |
| 137 | S | Strömställare 4-hjuls styrning | Switch, 4-wheel steering |
| 138 | S | Strömställare crab styrning | Switch, crab steering |

| Number | Categ. | Svenska | English |
|--------|--------|-----------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------|
| 139 | S | Strömställare defroster | Switch, defroster |
| 141 | S | Strömställare Stegbelysning | Switch, Steplight |
| 142 | S | Strömställare fot | Switch, foot |
| 143 | S | Strömställare sitsvärme | Switch, seat heater |
| 144 | Q | Batterifrånskiljare | Battery disconnecting switch |
| 145 | S | Strömställare AT-regulator | Switch, AT-regulator |
| 147 | S | Strömställare körvisare | Switch, direction indicators |
| 149 | S | Strömställare signalhorn | Switch, horn |
| 150 | S | Strömställare startlås/ellas | Switch, main key switch |
| 152 | S | Strömställare intervalltorkare | Switch, intermittent wiper |
| 156 | S | Strömställare kupevärmare | Switch, cab heating |
| 157 | S | Strömställare stoltilt | Switch, seat tilt |
| 158 | S | Strömställare dimbakljus | Switch, rear fog light |
| 159 | S | Strömställare extra fram/back väljare | Switch, extra direction selector |
| 160 | S | Strömställare komb fram/back | Switch, combi-forward/reverse |
| 161 | S | Strömställare komb signal, ljus hel/halv spol,torkare m intervall körvisare | Switch, combi-horn, light main/dipped beam, washer, wiper (intermittent), direction indicator |
| 162 | S | Strömställare komb signal ljus hel/halv, spol, torkare m 2 int, fram/back | Switch, combi horn, light main/dipped beam, washer, wiper w 2int., forward/revers |
| 163 | S | Strömställare start på 2-an | Switch, start 2nd gear |
| 165 | S | Strömställare stolvärme | Switch, seat heater |
| 166 | S | Strömställare låsning vändskiva | Switch, interlocking of turntable |
| 167 | S | Strömställare luftfjädring | Switch, pneumatic springing |
| 168 | S | Strömställare låsn stol | Switch, interlocking of seat |
| 169 | S | Strömställare stolsvändning | Switch, reversible seat |
| 170 | S | Strömställare förångare (LPG) | Switch, evaporator (LPG) |
| 171 | S | Strömställare v-skiva upp/ner | Switch, fifth wheel up/down |
| 172 | S | Strömställare v-skiva fr/back | Switch, fifth wheel forward/reverse |
| 173 | S | Strömställare v-skiva skevning | Switch, fifth wheel, levelling |
| 174 | S | Strömställare,utskjut | Switch, projecting |
| 175 | S | Strömställare hyttlyft upp | Switch, cab hoist up |
| 176 | S | Strömställare hyttlyft ner | Switch, cab hoist down |
| 177 | S | Strömställare hyttskjutning | Switch, cab movement |
| 178 | S | Strömställare nollställning | Switch, reset |
| 179 | S | Strömställare Aut/man växling | Switch Aut/man gearshifting |
| 180 | S | Strömställare fyrhjulsdrift | Switch, 4-WD |
| 190 | S | Strömställare klimatanläggning | Switch, air conditioner |
| 191 | S | Strömställare recirkulation | Switch, re-circulation |
| 192 | S | Strömställare vattenavskiljare | |
| 195 | S | Strömställare joy-stick X | Switch, joy-stick X |
| 196 | S | Strömställare joy-stick X+Y | Switch, joy-stick X+Y |
| 197 | S | Strömställare längs/tvärskörning | Switch, length/sideways driving |
| 198 | S | Strömställare flytläge skevning | Switch, equalizing fifth wheel |
| 199 | S | Strömställare option | Switch, option |
| 200 | S | Brytkontakt lampa park broms | Contact, breaking,warning lamp,parking brake |
| 201 | S | Brytkontakt lampa färdbröms | Contact, breaking, warning lamp, brake |
| 202 | S | Brytkontakt lampa oljetryck motor | Contact, breaking, warning lamp, oil pressure engine |
| 204 | S | Brytkontakt tryck ackumulator | Contact, breaking, pressureaccumulator tank |
| 205 | S | Brytkontakt innerbelysning | Contact, breaking, interior lighting |

| Number | Categ. | Svenska | English |
|--------|--------|------------------------------------------------|-------------------------------------------------------------|
| 206 | S | Brytkontakt handskfack belysning | Contact, breaking, glove |
| 207 | S | Slutkontakt diff spärr | Contact, making, diff. interlock |
| 208 | S | Slutkontakt lampa temperatur spolkrets bromsar | Contact, making, warning lamp temperature brake |
| 214 | S | Slutkontakt överväxel | Contact, making, over drive |
| 215 | S | Slutkontakt temp motor | Contact, making, temperature engine |
| 216 | S | Slutkontakt bromsljus | Contact, making, brake lights |
| 217 | S | Slutkontakt backljus | Contact, making, reversing light |
| 218 | S | Slutkontakt AT-regulator | Contact, making, AT-control |
| 219 | S | Slutkontakt lampa luftfilter | Contact, making, indicating light air filter |
| 220 | S | Brytkontakt drivning | Contact, breaking, drive cut off |
| 221 | S | Slutkontakt temp växellåda | Contact, making, temperature gear box |
| 222 | S | Slutkontakt lampa temp moment - förstärkare | Contact, making, warning lamp temperature torque amplifier. |
| 223 | S | Släpkontakt signal | Contact, brush, horn |
| 224 | S | Slutkontakt insprutningspump | Contact, making, injection pump |
| 225 | S | Brytkontakt säkerhetsbälte | Contact, breaking, seat belt |
| 228 | S | Slutkontakt hyttlåsning | Contact, making, cab locking |
| 229 | S | Slutkontakt stolslåsning | Contact, making, seat locking |
| 230 | S | Brytkontakt stol | Contact, breaking, seat |
| 231 | S | Slutkontakt fotkontroll stolvändning | Contact, making, seat rotation, foot switch |
| 232 | S | Brytkontakt lampa luftanslutning släp | Contact, breaking, warning lamp air connection |
| 233 | S | Slutkontakt lampa låsning vändskiva | Contact, warning, interlocking of turntable |
| 235 | S | Slutkontakt sidoskjutning stol | Contact, making, side shifting of seat |
| 236 | S | Slutkontakt vattennivå | Contact, water level |
| 239 | S | Brytkontakt termisk | Contact, breaking, thermic |
| 240 | S | Slutkontakt termisk | Contact, making, thermic |
| 241 | S | Brytkontakt lampa luftmatning släp | Contact, breaking, warning lamp air supply to trailer |
| 242 | S | Slutkontakt lampa oljetryck v-låda | Contact, making, warning lamp, oil pressure gear box |
| 243 | S | Brytkontakt tryck kylmedia AC | Contact, breaking, coolant pressure (air condition) |
| 244 | S | Slutkontakt hydraulik aktiverad | Contact, making, hydraulics |
| 245 | S | Slutkontakt hydraultryck styrning | Contact, making, hydraulic pressure control |
| 246 | S | Slutkontakt tryck kylmedia | Contact, pressure refrigerant |
| 250 | S | Manöverbrytare | Operating Switch |
| 251 | S | Slutkontakt vändbar förarstol | Contact, making, VBFS |
| 260 | S | Slutkontakt lyft steg 1 | Contact, making, hoist step 1 |
| 261 | S | Slutkontakt lyft steg 2 | Contact, making, hoist step 2 |
| 262 | S | Slutkontakt tilt | Contact, making, tilting |
| 263 | S | Slutkontakt gaffelspridning | Contact, making, fork positioning |
| 264 | S | Slutkontakt sidoföring | Contact, making, sideshift |
| 265 | S | Slutkontakt stativ in/ut | Contact, making, lifting mast in-out |
| 266 | S | Brytkontakt hytt dörr | Contact, breaking cab door |
| 267 | S | Slutkontakt bromstryck | Contact, making, brake pressure |
| 268 | S | Slutkontakt kompressor | Contact, making, Compressor |
| 269 | S | Slutkontakt sax inne | Contact, making extender in |
| 270 | S | Slutkontakt överlastskydd | Contact, making, overload protection |
| 299 | S | Slut/brytkontakt option | Contact, making/braking option |
| 300 | K | Relä hel/halvljus | Relay, main/dipped beam |

| Number | Categ. | Svenska | English |
|--------|--------|----------------------------------|--------------------------------------------------|
| 301 | K | Relä dimljus | Relay, fog light |
| 302 | K | Relä fjärrljus | Relay, distance light |
| 303 | K | Relä lastljus | Relay, mast light |
| 304 | K | Relä arbetsljus | Relay, working light |
| 305 | K | Relä backljus | Relay, reversing light |
| 306 | K | Relä helljus | Relay, main beam |
| 307 | K | Relä halvljus | Relay, dipped beam |
| 308 | K | Relä bromsljus | Relay, brake light |
| 309 | K | Relä parkeringsbroms | Relay, parking light |
| 310 | K | Relä körvisare vä | Relay, direction indicator left |
| 311 | K | Relä körvisare hö | Relay, direction indicator right |
| 312 | K | Relä startelement | Relay, element preheater |
| 313 | K | Relä vändbar förarstol | Relay, rotating driver's seat (VBFS) |
| 314 | K | Relä parkeringsbroms | Relay, parking brake |
| 315 | K | Relä tändningslås | Relay, ignition key |
| 316 | K | Relä torkare | Relay, wiper |
| 317 | K | Relä strålkastartorkare | Relay, roading lights wiper |
| 318 | K | Relä AT-regulator | Relay, AT-regulator |
| 319 | K | Relä varningsblinkers | Relay, hazard blinkers |
| 320 | K | Relä elektrisk stopp | Relay, electrical stop |
| 321 | K | Relä intervalltorkare | Relay, intermittent wiper |
| 322 | K | Relä kylvätskenivå | Relay, coolant level |
| 323 | K | Relä blinkers | Relay, blinkers |
| 324 | K | Relä ragespärr | Relay, range interlock |
| 325 | K | Relä blinkande bromsljus (back) | Relay, flashing brake lights (reversing) |
| 326 | K | Relä blinkande bromsljus (runt) | Relay, flashing hazard brake lights |
| 327 | K | Relä växel neutral | Relay, gear neutral |
| 328 | K | Relä växelskifte | Relay, gear shift |
| 329 | K | Relä växel hög/låg | Relay, high/low gear |
| 330 | K | Relä startspärr | Relay, start interlock |
| 331 | K | Relä drivning fram | Relay, forward driving |
| 332 | K | Relä drivning bak | Relay, reversing driving |
| 333 | K | Tidrelä förvärmning | Time relay, automatically preheating |
| 334 | K | Relä frikoppling/drivbrytning | Relay, free wheel/drive disconnection |
| 335 | K | Relä växelveil 1:a (diesel, gas) | Relay, gear change valve 1-gear (diesel,LPG) |
| 336 | K | Relä växelveil 2:a (diesel, gas) | Relay, gear change valve 2-gear (diesel,LPG) |
| 337 | K | Relä drivriktning motor | Relay, motor drive direction |
| 338 | K | Relä kylfläkt drivmotor | Relay, cooling fan drive motor |
| 339 | K | Relä kylfläkt elskåp | Relay, cooling fan electrical box |
| 340 | K | Tidrelä fördröjt tillslag | Time relay, start delay |
| 341 | K | Tidrelä fördröjt fråslag | Time relay, stop delay |
| 342 | K | Relä drivning 2/4 hjul | Relay, switching 2/4 WD |
| 343 | K | Relä dimbakljus | Relay, fog light rear |
| 344 | K | Relä momentförstärkare | Relay, torque amplifier |
| 345 | K | Relä låsning vändskiva | Relay, interlocking of turntable |
| 346 | K | Relä frikoppling stollåsning | Relay, releasing of seat interlocking |
| 347 | K | Relä stolvändning/ljussignal | Relay, multifunction, seat rotation/light signal |
| 348 | K | Relä fläktmotor värmare | Relay, fan heating |
| 349 | K | Relä fartreglage | Relay, speed control |
| 350 | K | Relä pumpkontakt/pumpkontroll | Relay, pump contactor/pump control |
| 351 | K | Relä hyttlyft upp | Relay, cab hoist up |

| Number | Categ. | Svenska | English |
|--------|--------|---------------------------------------------------|------------------------------------------------------------|
| 352 | K | Relä hyttlyft ner | Relay, cab hoist down |
| 353 | K | Relä säkerhets slinga | Relay, safety loop |
| 354 | K | Relä styrsystem | Relay, signal control system |
| 355 | K | Relä sensorstyrning | Relay, sensor control |
| 356 | K | Skiftrelä längskörning/tvärskörning | Shift relay, length/sideways driving |
| 357 | K | Relä roterande varningsljus | Relay, hazard beacon |
| 358 | K | Relä kompressor luft | Relay, compressor air |
| 359 | K | Relä Hydrauloljekylare | Relay hydraulic oil cooler |
| 360 | K | Relä startsolenoid | Relay, starting solenoid |
| 361 | K | Relä kompressor AC | Relay, compressor air conditione |
| 362 | K | Relä vattenventil AC | Relay, water valve air conditioner |
| 363 | K | Relä kondensator AC | Relay, condenser air conditione |
| 364 | K | Relä stolsbrytare | Relay seat switch |
| 365 | K | Relä fönsterhiss upp | Relay, electrical screen elevator up |
| 366 | K | Relä fönsterhiss ner | Relay, electrical screen elevator down |
| 367 | K | Relä styrning | Relay, steerin |
| 368 | K | Relä lågt bromstryck | Relay, low brake pressure |
| 369 | K | Relä centralsmörjning | Relay, central lubrication |
| 370 | K | Relä centralsmörjning, aggregat | Relay, central lubrication, attachment |
| 371 | K | Relä lyfthöjd | Relay, liftheight |
| 372 | K | Relä blinkande varn.ljus, höjdbegränsn. | Relay, flashing beacon, lifting height limiter |
| 373 | K | Relä bakljus | Relay light |
| 375 | K | Huvudkontaktor reglersystem | Main contactor, operating control |
| 376 | K | Kontaktor fram reglersystem | Contactor, forward operating control |
| 377 | K | Kontaktor bak reglersystem | Contactor, reversing operating control |
| 378 | K | Kontaktor by-pass
reglersystem/Fältförsvagning | Contactor, „by-pass“ operating control/
Field weakening |
| 379 | K | Kontaktor pumpmotor | Contactor, pump motor |
| 380 | K | Kontaktor | Contactor |
| 381 | K | Kontaktor återladdning | Contactor, recharging |
| 382 | K | Relä, förbikoppling säkerhetssystem | Relay, by-pass safety system |
| 383 | K | Relä, Stolsvärme | Relay, heated seat |
| 384 | K | Relä vattenseparator | Relay, waterseparator |
| 385 | K | Relä bränslepump insprutning | Relay, fuel injection pump |
| 386 | K | Relä, hög motortemperatur. | Relay, high motor temperature |
| 387 | K | Relä alternativ gaspedal | Relay alternative throttle pedal |
| 388 | K | Relä, Extra färdriktningväljare | Relay, Extra direction selector |
| 389 | K | Relä, Pausvärme | Relay, Paus heat |
| 399 | K | Relä option | Relay, option |
| 400 | E | G-lampa vä fram | Light bulb, roading light left hand front |
| 400 | E | G-lampa hö fram | Light bulb, roading light right hand rear |
| 401 | E | G-lampa vä bak | Light bulb, roading light left hand front |
| 401 | E | G-lampa hö bak | Light bulb, roading light right hand rear |
| 402 | E | G-lampa fjärrljus | Light bulb, distance light |
| 403 | E | G-lampa lastljus | Light bulb, mast light |
| 404 | E | G-lampa arbetsljus | Light bulb, working light |
| 405 | E | G-lampa backljus | Light bulb, rear light |
| 406 | E | G-lampa cont belysning vänster | Container light left-hand |
| 406 | E | G-lampa cont belysning höger | Container light right-hand |
| 408 | E | G-lampa park ljus vä fram | Light bulb, parking light, left-hand forward |
| 408 | E | G-lampa park ljus hö fram | Light bulb, parking light, right-hand forward |
| 410 | H | G-lampa broms ljus vä fram | Light bulb, brake light, left-hand forward |

| Number | Categ. | Svenska | English |
|--------|--------|----------------------------------------|-----------------------------------------------------|
| 410 | H | G-lampa broms ljus hö fram | Light bulb, brake light, right-hand forward |
| 411 | H | G-lampa broms ljus vä bak | Light bulb, brake light, left-hand rear |
| 411 | H | G-lampa broms ljus hö bak | Light bulb, brake light, right-hand rear |
| 412 | H | G-lampa bak ljus vä bak | Light bulb, rear light, left-hand rear |
| 412 | H | G-lampa bak ljus hö bak | Light bulb, rear light right-hand rear |
| 413 | H | G-lampa bak ljus vä fram (VBFS) | Light bulb, rear light, left-hand forward (VBFS) |
| 413 | H | G-lampa bak ljus hö fram (VBFS) | Light bulb, rear light, right-hand forward (VBFS) |
| 416 | H | G-lampa sidomarkering vä fram | Light bulb, side position light, left-hand forward |
| 416 | H | G-lampa sidomarkering vä bak | Light bulb, side position light, left-hand rear |
| 417 | H | G-lampa sidomarkering hö fram | Light bulb, side position light, right-hand forward |
| 417 | H | G-lampa sidomarkering hö bak | Light bulb, side position light, right-hand rear |
| 420 | H | G-lampa positionsljus vänster | Light bulb, position light, left-hand |
| 421 | H | G-lampa positionsljus höger | Light bulb, position light, right-hand |
| 422 | H | G-lampa körvisare vä fram | Light bulb, direction indicator left-hand forward |
| 423 | H | G-lampa körvisare hö fram | Light bulb, direction indicator right-hand forward |
| 426 | H | G-lampa körvisare vä bak | Light bulb, direction indicator left-hand rear |
| 427 | H | G-lampa körvisare hö bak | Light bulb, direction indicator right-hand rear |
| 428 | H | G-lampa roterande varningsljus | Light bulb, flashing beacon lamp |
| 429 | E | G-lampa cigarettändare belysning | Light bulb, cigarette lighter illumination |
| 431 | E | G-lampa instrument belysning | Light bulb, instrument illumination |
| 432 | E | G-lampa handsfack belysning | Light bulb, glove pocket light |
| 433 | E | G-lampa instegs belysning | Light bulb, step-in lighting |
| 434 | E | G-lampa innerbelysning | Light bulb, interior lighting |
| 435 | E | G-lampa låsbelysning | Light bulb, reading lighting |
| 436 | E | G-lampa identifikationsljus | Light bulb, identification light |
| 437 | E | G-lampa identifikationsljus/takskylt | Light bulb, identification light/roof sign |
| 438 | E | G-lampa motorrumsbelysning | Light bulb, engine compartment light |
| 439 | E | Nummerskyltsbelysning | Light license plate |
| 440 | E | G-lampa värmereglage belysning | Light bulb, heating control light |
| 445 | H | G-lampa körvisare vä (extra) | Light bulb, extra direction indicator left |
| 446 | H | G-lampa körvisare hö (extra) | Light bulb, extra direction indicator right |
| 451 | H | G-lampa dimbakljus vänster | Light bulb, fog light rear left |
| 452 | H | G-lampa dimbakljus höger | Light bulb, fog light rear right |
| 453 | H | G-lampa bromsljus/körvisare vänster | Light bulb, brake light/dir. indicator left-hand |
| 453 | H | G-lampa bromsljus/körvisare höger | Light bulb, brake light/dir. indicator right-hand |
| 454 | H | G-lampa bromsljus blackout vänster | Light bulb, brake light blackout left-hand |
| 454 | H | G-lampa bromsljus blackout höger | Light bulb, brake light blackout right-hand |
| 456 | E | G-lampa backljus blackout IR vänster | Light bulb, rear light blackout IR left-hand |
| 456 | E | G-lampa backljus blackout IR höger | Light bulb, rear light blackout IR right-hand |
| 457 | H | G-lampa positionsljus blackout vänster | Light bulb, position light blackout left-hand |

| Number | Categ. | Svenska | English |
|--------|--------|-------------------------------------------|--------------------------------------------------|
| 457 | H | G-lampa positionsljus blackout höger | Light bulb, position light blackout right-hand |
| 458 | E | G-lampa fram blackout vänster | Light bulb, roading light blackout left-hand |
| 458 | E | G-lampa fram blackout höger | Light bulb, roading light blackout right-hand |
| 459 | E | G-lampa fram blackout IR vänster | Light bulb, roading light blackout IR left-hand |
| 459 | E | G-lampa fram blackout IR höger | Light bulb, roading light blackout IR right-hand |
| 460 | E | G-lampa arb.belysning hytt blackout IR vä | Light bulb, working light cab blackout IR left |
| 460 | E | G-lampa arb.belysning hytt blackout IR hö | Light bulb, working light cab blackout IR right |
| 461 | E | G-lampa arb.bel. bom 20' blackout IR vä | Light bulb, working light boom20' b.out IR left |
| 461 | E | G-lampa arb.bel. bom 20' blackout IR hö | Light bulb, working light boom20' b.out IR right |
| 462 | E | G-lampa arb.bel. bom 40' blackout IR vä | Light bulb, working light boom40' b.out IR left |
| 462 | E | G-lampa arb.bel. bom 40' blackout IR hö | Light bulb, working light boom40' b.out IR right |
| 463 | H | G-lampa bak ljus vänster bak, blackout | Light bulb, rear light left-hand rear, blackout |
| 463 | H | G-lampa bak ljus höger bak, blackout | Light bulb, rear light right-hand rear, blackout |
| 464 | E | G-lampa cont belysning IR vänster | Light bulb, Container light IR left-hand |
| 464 | E | G-lampa cont belysning IR höger | Light bulb, Container light IR right-hand |
| 465 | H | G-lampa röd saxagregat ute | Light-bulb, red extender extended |
| 466 | H | G-lampa orange vertikalhållning på | Light bulb, orange vertical hold on |
| 467 | H | G-lampa grön klämtryck OK | Light bulb, green clamp pressure OK |
| 468 | | G-Lampa Röd Maxlast | Light bulb, Red Overload |
| 500 | H | Kont lampa körvisare | Indicating lamp, direction indicator |
| 501 | H | Kont lampa körvisare (extra) | Indicating lamp, direction indicator extra |
| 503 | H | Varn lampa oljetryck motor | Warning lamp, oil pressure engine |
| 504 | H | Kont lampa helljus | Indicating lamp, main beam |
| 505 | H | Varn lampa laddning | Warning lamp, loading |
| 506 | H | Varn lampa laddning (extra) | Warning lamp, loading extra |
| 507 | H | Varn lampa färbroms | Warning lamp, brake |
| 508 | H | Varn lampa parkerings broms | Warning lamp, parking brake |
| 509 | H | Varn lampa nivå kylvatten | Warning lamp, coolant level |
| 510 | H | Kont lampa diff spärr | Indicating lamp, diff. interlock |
| 512 | H | Varn lampa temp momentförst | Warning lamp, temperature converter |
| 514 | H | Kont lampa överväxel | Indicating lamp, overdrive clutch |
| 519 | H | Kont lampa halvljus | Indicating lamp, dipped lights |
| 524 | H | Kont lampa luftfilter | Indicating lamp, air filter |
| 525 | H | Kont lampa UNIKAT | Indicating lamp, UNIKAT |
| 528 | H | Kont lampa förvärmning | Indicating lamp, preheating |
| 530 | H | Kont lampa framhjuls styrning | Indicating lamp, forward wheel steering |
| 531 | H | Kont lampa 4-hjuls styrning | Indicating lamp, 4-wheel steering |
| 532 | H | Kont lampa crab styrning | Indicating lamp, crab steering |
| 533 | H | Kont lampa hyd.pump | Indicating lamp, emergency hyd. pump |
| 547 | H | Varn lampa centralvarning | Warning lamp, central warning |
| 549 | H | Varn lampa oljetryck v-låda | Warning lamp, oil pressure gear box |
| 550 | H | Varn lampa hyttlåsning | Warning lamp, cab lock |

| Number | Categ. | Svenska | English |
|--------|--------|-----------------------------------------|-------------------------------------------------|
| 551 | H | Varn lampa temp v-låda | Warning lamp, temperature gear box |
| 552 | H | Varn lampa bromstryck | Warning lamp, brake pressure |
| 554 | H | Varn lampa temp spolkreets bromsar | Warning lamp, temp. cooling system brakes |
| 555 | H | Varn lampa temp kylvatten mot | Warning lamp, temperature coolant engine |
| 556 | H | Varn lampa låsning vändskiva | Warning lamp, interlocking of turntable |
| 560 | H | Varn lampa temp drivmotor el | Warning lamp, temperature, drive motor |
| 561 | H | Varn lampa temp pumpmotor el | Warning lamp, temperature, pump motor |
| 562 | H | Varn lampa öppen twistlock | Warning lamp, unlocked twist lock |
| 563 | H | Varn lampa låst twistlock | Warning lamp, locked twist lock |
| 564 | H | Varn lampa anliggning | Warning lamp, alignment |
| 565 | H | Varn lampa temp motor el | Warning lamp, temperature motor |
| 569 | H | Kont lampa elvärme | Indicating lamp, electric heater |
| 569 | H | Kont lampa elvärme | Indicating lamp, electric heater |
| 570 | H | Varn lampa överkoppling säkerhetssystem | Warning lamp, by-pass safety system |
| 571 | H | Kont lampa bränslenivå | Indicating lamp, fuel level |
| 572 | H | Varningslampa lyfthöjd | Warning lamp lifting height |
| 573 | H | Kontroll lampa motor information | Indicator lamp engine information |
| 574 | H | Kontroll lampa stödben nere | Indicator lamp support jacks down |
| 575 | H | Kontroll lampa stödben ur arb.läge | Indicator lamp support jacks out of working pos |
| 576 | H | Kontroll lampa anliggning främre ben | Indicator lamp, alignment front legs |
| 577 | H | Kontroll lampa anliggning bakre ben | Indicator lamp, alignment rear legs |
| 578 | H | Kontroll lampa klämläge främre ben | Indicator lamp, clamp position front legs |
| 579 | H | Kontroll lampa klämläge bakre ben | Indicator lamp, clamp position rear legs |
| 580 | H | Kontroll lampa främre ben uppe | Indicator lamp, front legs upper position |
| 581 | H | Kontroll lampa främre ben nere | Indicator lamp, front legs lower position |
| 582 | H | Varningslampa överlast | Warning lamp overload |
| 583 | H | Kontroll lampa anliggning ett ben | Indicator lamp, alignment one leg |
| 584 | H | Kontroll lampa anliggning alla ben | Indicator lamp, alignment all legs |
| 599 | H | Kont lampa option | Indicating lamp, option |
| 600 | Y | M-ventil avgasbroms | Solenoid valve, exhaust brake |
| 601 | Y | M-ventil diff spärr | Solenoid valve, diff. interlock |
| 602 | Y | M-ventil broms | Solenoid valve, brake |
| 603 | Y | M-ventil värme | Solenoid valve, heater |
| 604 | Y | M-ventil kraftuttag sida | Solenoid valve, power take off, side |
| 605 | Y | M-ventil kraftuttag bak | Solenoid valve, power take off, rear |
| 606 | Y | M-ventil 2/4 hjuldrift | Solenoid valve, 2/4WD |
| 607 | Y | M-ventil hög/låg växel | Solenoid valve, high/low gear |
| 608 | M | Pumpaggregat hyttlyft | Pump unit, cab hoist |
| 609 | M | Ställmotor gaspådrag | Regulating motor, throttle |
| 610 | Y | M-ventil hydraulsystem allm | Solenoid valve, hydraulics, general |
| 611 | Y | M-ventil flödesbegränsning | Solenoid valve, flow restriction |
| 612 | M | Ställmotor recirkulation | Regulating motor, re-circulation |
| 613 | Y | M-ventil momentförstärkare | Solenoid valve, torque amplifier |
| 614 | Y | M-ventil rangespärr | Solenoid valve, ranging interlock |
| 615 | Y | M-ventil hjulvridning | Solenoid valve, wheel turning |
| 616 | Y | M-ventil kallstart | Solenoid valve, cold start aid |
| 617 | Y | M-ventil AT-regulator by-pass | Solenoid valve, AT-regulator & by-pass & |
| 618 | Y | M-ventil vatten klimatanläggning | Solenoid valve, water air conditioner |
| 620 | Y | M-ventil vändskiva upp | Solenoid valve, fifth wheel up |
| 621 | Y | M-ventil vändskiva ner | Solenoid valve, fifth wheel down |

| Number | Categ. | Svenska | English |
|--------|--------|--------------------------------|----------------------------------------|
| 622 | Y | M-ventil vändskiva fram | Solenoid valve, fifth wheel forward |
| 623 | Y | M-ventil vändskiva bak | Solenoid valve, fifth wheel rear |
| 624 | Y | M-ventil skevning hö | Solenoid valve, levelling right hand |
| 625 | Y | M-ventil skevning vä | Solenoid valve, levelling left hand |
| 626 | Y | M-ventil AT-regulator | Solenoid valve, AT-regulator |
| 627 | Y | M-ventil vakuum | Solenoid valve vacuum |
| 628 | Y | M-ventil bränsleblandning | Solenoid valve fuelmixture |
| 630 | Y | M-ventil v-låda fram | Solenoid valve, gear box, forward gear |
| 631 | Y | M-ventil v-låda back | Solenoid valve, gear box, rear gear |
| 632 | Y | M-ventil v-låda spole 1 | Solenoid valve, gear box, 1 gear |
| 633 | Y | M-ventil v-låda spole 2 | Solenoid valve, gear box, 2 gear |
| 634 | Y | M-ventil v-låda spole 3 | Solenoid valve, gear box, 3 gear |
| 635 | Y | M-ventil klämtryck | Solenoid valve, clamping pressure |
| 636 | Y | M-ventil styrning | Solenoid valve, steering |
| 637 | Y | M-ventil flytläge skevning | Solenoid valve, equalizing fifth wheel |
| 638 | Y | M-ventil stopp insprut pump | Solenoid valve, stop injection pump |
| 639 | Y | M-ventil låsning orbitrol ls | Solenoid valve, locking LS orbitrol |
| 640 | Y | M-ventil gasol | Solenoid valve, LPG |
| 641 | Y | M-ventil förångare (LPG) | Solenoid valve, evaporator (LPG) |
| 642 | Y | M-ventil park broms | Solenoid valve, parking brake |
| 643 | Y | M-ventil låsning stol (VBFS) | Solenoid valve, seat locking (VBFS) |
| 644 | Y | M-ventil låsning vändskiva | Solenoid valve, fifth wheel locking |
| 645 | Y | Magnetkoppling komp AC | Magnetic clutch, compressor AC |
| 646 | Y | M-ventil stolsvändning | Solenoid valve, seat rotation |
| 647 | Y | M-ventil stolstilt | Solenoid valve, seat tilt |
| 648 | Y | M-ventil luftfjädring | Solenoid valve, pneumatic springing |
| 649 | B | Termostat klimatanslagning | Thermostat, air condition |
| 650 | M | Torkarmotor fram | |
| 650 | M | Torkarmotor fram | |
| 650 | M | Torkarmotor fram | |
| 650 | M | Torkarmotor fram | |
| 651 | M | Vindrutespolarmotor | Washer motor |
| 652 | M | Strålkastarmotor | Light motor |
| 653 | M | Strålkastarspolarmotor | Light washer motor |
| 654 | M | Startmotor | Starter motor |
| 655 | M | Kylfläkt drivmotor (EC) | Cooling fan, main motor (EC) |
| 656 | M | Kylfläkt elskåp (EC) | Cooling fan, electrical box (EC) |
| 657 | M | Fläktmotor värme | Heating fan |
| 658 | G | Generator (extra) | Alternator extra |
| 659 | G | Generator utan laddregulator | Alternator without loading regulator |
| 660 | G | Generator med laddregulator | Alternator with loading regulator |
| 661 | M | Fönsterhissmotor | Screenelevator motor |
| 662 | G | Laddregulator | Loading regulator |
| 663 | M | Doseringspump klimatanläggning | Dosage pump, air condition |
| 664 | M | Cirk pump klimatanläggning | Circulating pump, air condition |
| 665 | V | Diod | Diode |
| 666 | M | Fläktmotor cirkulation | Circulation fan |
| 667 | M | Cirkulationspump värmesystem | Circulation pump heating system |
| 668 | M | Kylfläkt hydraulolja | Cooling fan, hydraulic oil |
| 669 | E | Värmare kupe/ motor diesel | Heater compartment/engine diesel |
| 670 | M | Kompressor | Compressor |
| 671 | M | Doseringspump diesel | Dosage pump diesel |
| 672 | M | Spjäll motor, ECC | Draught valve motor, ECC |
| 673 | Y | Vatten ventil motor, ECC | Water valve motor, ECC |

| Number | Categ. | Svenska | English |
|--------|--------|-----------------------------------|-------------------------------------------------------------------------------------------|
| 674 | M | Kylfläkt bromsolja | Cooling fan, brake fluid |
| 675 | M | Motor, Stolsvändning | Motor, Seat rotation |
| 676 | Y | Solenoid Broms stolsvändning | Solenoid brake , seat rotation |
| 685 | A | Reglerenhet termostat AC | Control unit, termostat AC |
| 690 | B | Fartreglage (EC) | Speed control (EC) |
| 693 | M | Pump centralsmörjning | Pump, central lubrication |
| 694 | M | Styrmotor | Steering motor |
| 695 | M | Drivmotor (EC) | Drive motor (EC) |
| 696 | M | Pumpaggregat nödstyrning | Pump, emergency steering |
| 697 | B | Elbroms | Electric brake |
| 698 | M | Pumpmotor (EC) | Pump motor (EC) |
| 699 | Y | M-ventil option | Solenoid valve, option |
| 700 | P | Hastighetsmätare | Speedometer |
| 701 | P | Mätare oljetemp v-låda | Gear box oil temperature gauge |
| 702 | P | Klocka | Clock |
| 703 | P | Varvtalsmätare | Engine rev meter |
| 704 | P | Tryckluftsmätare | Air pressure gauge |
| 705 | P | Mätare oljetryck v-låda | Gear box oil pressure gauge |
| 706 | P | Termometer temp kylvätska motor | Temperature gauge, engine coolant |
| 707 | P | Bränslemätare | Fuel gauge |
| 708 | P | Timräknare | Hour meter |
| 709 | P | Kapacitetsmätare batteri | Capacity gauge, battery |
| 710 | P | Tidur motor/kupevärmare | Timer, engine- and cab heater |
| 711 | P | Räknare, impuls | Counter, impulse |
| 712 | P | Mätare oljetryck motor | Motor oil pressure gauge |
| 714 | P | Mätare, temp. Hydraulolja | Hydraulic fluidtemperature, guage |
| 715 | P | Extra instrument allm | Extra instrument, general |
| 720 | S | Givare vändbar förarstol | Transmitter, revolving driver's seat (VBFS) |
| 740 | D | FleetManager kontrollenhet | FleetManager control unit |
| 741 | U | FleetManager batterifilter | FleetManager battery filter |
| 742 | D | FleetManager kortläsare | FleetManager card device |
| 743 | D | FleetManager accelerations givare | FleetManager acceleration sensor |
| 751 | B | Givare varvtal turbin | Transmitter, speed turbin |
| 752 | B | Givare varvtal inre växellåda | Transmitter, speed internal gear chain |
| 753 | B | Varvtalsgivare motor | Transmitter, engine revolution |
| 754 | B | Givare lufttryck | Transmitter, air pressure |
| 755 | B | Givare hydraulfilter indikering | Transmitter, hydraulics filter indication |
| 756 | B | Temperatur kylvätska motor | Transmitter, engine coolant temperature |
| 757 | B | Bränslenivågivare | Transmitter, fuel level |
| 758 | B | Varvtalsgivare v-låda | Transmitter, gear box revolution |
| 759 | B | Nivåindikator kylvätska | Transmitter, coolant level |
| 760 | B | Givare rev-spärr/aut-vxl trans | Transmitter, reversing interlock / automatic gear change system (on gearbox output shaft) |
| 761 | B | Givare rev-spärr/aut-vxl motor | Transmitter, reversing interlock / automatic gear changing system (engine speed) |
| 762 | B | Givare temp, spolrets bromsar | Transmitter, brake flushing circuit |
| 763 | B | Givare nivå hydraulolja | Transmitter, hydraulic fluid level |
| 764 | B | Givare servotryck växellåda | Transmitter, gear box servo pressure |
| 765 | B | Givare oljetryck v-låda | Transmitter, oil pressure gear box |
| 766 | B | Givare oljetemp. v-låda | Transmitter, oil temperature gear box |
| 767 | B | Givare oljetryck motor | Transmitter, oil pressure engine |
| 768 | B | Givare oljetryck hydraulik | Transmitter, hydraulic pressure |

| Number | Categ. | Svenska | English |
|--------|--------|------------------------------------------|-------------------------------------------|
| 769 | B | Givare ändläge | Transmitter, end position |
| 770 | B | Givare rattutslag | Transmitter, steering wheel angle |
| 771 | B | Givare vinkel | Transmitter, angle |
| 772 | B | Givare temp bromsolja | Transmitter, temperature brake fluid |
| 773 | B | Givare närvaro | Transmitter, presence |
| 774 | B | Givare utomhustemp | Transmitter, ambient temperature |
| 775 | B | Givare temp klimatanläggning | Transmitter, temperature air condition |
| 776 | B | Givare temp hydraulolja | Transmitter, hydraulic temperature |
| 777 | B | Givare läge | Transmitter, position |
| 778 | B | Givare drivbrytning | Transmitter, drive break |
| 779 | A | Reglersystem återladdning (EC) | Control system, recharging (EC) |
| 780 | A | Reglersystem åkmotor (EC) | Control system main motor (EC) |
| 781 | A | Reglersystem pumpmotor (EC) | Control system pump motor (EC) |
| 782 | A | Logik interface 2 drivmotorer | Logic (interface) two main motors (EC) |
| 783 | A | Logik interface gaspådrag | Logic (interface) throttle |
| 784 | A | Logik interface bromsregl | Logic (interface) brake control |
| 785 | A | Logik interface styrsystem | Logic (interface) control system |
| 786 | A | Servoförstärkare styrsystem | Servo amplifier steering system |
| 789 | B | Givare allmän | Transmitter, common |
| 790 | D | Elektronisk kontrollenhet ECU, hytt | Electronic Control Unit ECU, cab |
| 791 | D | Elektronisk kontrollenhet aggregat | Electronic Control Unit, attachment |
| 792 | D | Elektronisk kontrollenhet styrning | Electronic Control Unit, steering system |
| 793 | D | Elektronisk kontrollenhet växellåda | Electronic Control Unit, gearbox |
| 794 | D | Elektronisk kontrollenhet motor | Electronic Control Unit, engine |
| 795 | P | Display | Display |
| 796 | D | Elektronisk kontrollenhet, lasthantering | Electronic Control Unit, Loadhandling |
| 797 | D | Elektronisk kontrollenhet, ram | Electronic Control Unit, frame |
| 798 | D | Elektronisk kontrollenhet, stolvändning | Electronic Control Unit, seat rotation |
| 799 | A | Logik allm (option) | Logic, general (option) |
| 800 | S | Startelement | Start element |
| 802 | E | Eluppvärmd backspegel | Electrical heated observation mirror |
| 803 | E | Eluppvärmd stol | Electrical heated seat |
| 804 | E | Cigarettändare | Cigarette lighter |
| 805 | E | Elvärme hytt | Electrical heating cab |
| 806 | A | Aggregat klimatanläggning | Aggregate, air conditioner |
| 807 | R | Potentiometer | Potentiometer |
| 808 | E | Eluppvärmd lufttorkare | Electrical heater air dryer |
| 810 | A | Kondensator AC, fläkt | Condenser AC, fan |
| 815 | S | Manöverspak | Control lever |
| 820 | R | Motstånd | Resistor |
| 821 | C | KONDENSATOR | CAPACITOR |
| 822 | Z | Signalfilter | Signal filter |
| 823 | U | Signalomvandlare höger | Signal amplifier, right |
| 824 | U | Signalomvandlare vänster | Signal amplifier, left |
| 825 | R | Reglage spakstyrning | Controls, (steering with control levers). |
| 826 | Y | Ventil spakstyrning | Valve, (steering with control levers). |
| 827 | A | Växellåda | Gearbox |
| 828 | R | Shuntmotstånd | Shunt-resistor |
| 830 | L | Tändspole | Ignition coil |
| 835 | E | Tändstift | Ignition plug |
| 840 | S | Strömfördelare | Distributor |
| 850 | H | Signalhorn | Horn |
| 853 | H | Summer | Buzzer |
| 888 | E | Lufttork, kompressor | Air Dryer, Compressor |

| Number | Categ. | Svenska | English |
|--------|--------|-------------------------------------------------|---------------------------------------------------------|
| 900 | A | Radio/bandspelare | Radio/tape recorder |
| 901 | U | Spänningsomvandlare | Voltage converter |
| 902 | B | Högtalare | Loud speaker |
| 903 | W | Antenn radio | Aerial, radio |
| 905 | A | Kommunikationsradio | Communication radio |
| 906 | W | Antenn kommunikationsradio | Aerial, communication radio |
| 907 | A | Monitor | Monitor |
| 908 | A | Kamera | Camera |
| 909 | A | Skrivare | Printer |
| 910 | U | Spänningsomvandlare 80V/24V | Voltage converter 80 V / 24 V |
| 911 | A | Dataterminal | Dataterminal |
| 940 | A | Logik batterivakt | Logic switch , battery watch |
| 941 | U | Laddningsutjämnare | Even charger |
| 950 | A | Logik transistortändning | Logic transistor ignition |
| 955 | A | Logik övervarningssskydd (LPG) | Logic overspeed protection (LPG) |
| 960 | A | Logik rev-spärr/aut-vxl | Logic unit, reversing interlock/automatic gear changing |
| 961 | A | Motor/kupevärmare | Engine- and cab heater |
| 962 | E | Logik slitageind kol elmotor | Logic indication of wear, brush electrical motor |
| 965 | H | Backvarnare | Reversing alarm |
| 1001 | S | Strömställare, TW | Switch, TW |
| 1002 | S | Strömställare, lossa TW | Switch, unlocking of TW |
| 1003 | S | Strömställare, låsa TW | Switch, locking of TW |
| 1004 | S | Strömställare, stopp vid 30'-35' | Switch, stop at 30 -35' |
| 1005 | S | Strömställare, förbikoppling av säkerhetssystem | Switch, overriding of the safety system |
| 1006 | S | Strömställare, fällning främre ben | Switch, front legs down |
| 1007 | S | Strömställare, fällning bakre ben | Switch, rear legs down |
| 1008 | S | Strömställare, klämma/lossa ben | Switch, clamping/-releasing legs |
| 1009 | S | Strömställare, Motor information | Switch, Engine information |
| 1010 | S | Strömställare, tilt av hytt | Switch, tilt of cab |
| 1011 | S | Strömställare IR ljus | Switch IR light |
| 1012 | S | Strömställare utskjut 20'-40' | Switch, Extension 20'-40' |
| 1013 | S | Strömställare stödben | Switch, Support jacks |
| 1014 | S | Strömställare förbikoppling rotationstopp | Switch, over ride rotation stop |
| 1015 | S | Strömställare förbikoppling höjdbeg/tp-beg | Switch, over ride height limit/tp-limit |
| 1016 | | | |
| 1017 | S | Strömställare diagnostik öka/minska | Switch, diagnostics increase/decrease |
| 1018 | S | Strömställare diagnostik on/off | Switch, diagnostics on/off |
| 1019 | S | Strömställare rastvärme | Switch, paus heat |
| 1020 | S | Strömställare automatisk släpp/kläm funktion | Switch automatic release/clamp funktion |
| 1021 | S | Strömställare sax | Switch extender |
| 1022 | S | Strömställare vertikalhållning | Switch, vertical position |
| 1023 | S | Strömställare låsning övre arm | Switch, lock upper arm |
| 1024 | S | Strömställare Korta Armen av/på | Switch, Short Arm on/off |
| 1025 | S | Strömställare pappersfunktioner av/på | Switch, paper functions on/off |
| 1026 | S | Strömställare omkoppling pappers/klämmagregat | Switch, switch papper/bale clamp |
| 1027 | S | Strömställare lyfthöjdsförval | Switch, lift height selection |
| 1028 | S | Strömställare lyfthöjdsförval öka | Switch, lift height selection increase |
| 1029 | S | Strömställare lyfthöjdsförval minska | Switch, lift height selection decrease |

| Number | Categ. | Svenska | English |
|--------|--------|-----------------------------------------------|----------------------------------------------------------|
| 1030 | S | Strömställare läraringång givare ultraljud | Switch, teaching ultrasonic sensor |
| 1031 | S | Strömställare, Over Height Upp/Ned | Switch, Over Height Up/Down |
| 1032 | S | Brytare backljus | Switch reverse light. |
| 1033 | S | Flytta korta armen | Move short arm |
| 1034 | S | Strömställare förbikoppling startspärr | Switch Override Start interlock |
| 1035 | S | Strömställare Val av klämtryck | Switch, Clamp pressure selection |
| 1036 | S | Strömställare Korta Armen av/på | Switch , Short Arm on/off |
| 1037 | S | Strömställare låsning skevning | Switch, lock levelling |
| 1038 | S | Strömställare Övre armpar/Sidoföring | Switch Upper arms/Sideshift |
| 1039 | S | Strömställare Inching | Switch, Inching |
| 1040 | S | Switch stopp motor | Switch, Stop engine |
| 1041 | S | Strömställare motorrumsbelysning | Switch, light engine compartment |
| 1042 | S | Strömställare höjjustering stol | Switch, Seat height level |
| 1043 | S | Strömställare längdjustering stol | Switch, Seat for/aft adjustment |
| 1044 | S | Strömställare Tankväljare | Switch, Tankselector |
| 1045 | S | Strömställare Avstängning backalarm | Switch, Rev. Alarm on/off |
| 2000 | D | Elektronisk kontrollenhet, proportionalventil | Electronic control unit, propotional valve |
| 3001 | K | Relä rotation | Relay, rotation |
| 3002 | K | Relä tilt | Relay, tilt |
| 3003 | K | Relä sidoföring | Relay, side shifting |
| 3004 | K | Relä längdinställning | Relay, length adjustment |
| 3005 | K | Relä twist lock | Relay, twist lock |
| 3006 | K | Relä spridning | Relay, spreading |
| 3007 | K | Relä lyft/sänk | Relay, lifting/lowering |
| 3008 | K | Relä hydraulfunktion extra | Relay, extra hydraulic function |
| 3009 | K | Relä manöverbrytare hydr | Relay, operating switch |
| 3010 | K | Relä bromsljus vxl std/blackout | Relay, brake light shift std/blackout |
| 3011 | K | Relä backljus vxl std/blackout | Relay, reversing light shift std/blackout |
| 3012 | K | Relä arb.bel hytt vxl std/blackout | Relay, working light cab, shift std/blackout |
| 3013 | K | Relä arb.bel. bom 20' vxl std/blackout | Relay,working light boom20' shift std/b.out |
| 3014 | K | Relä arb.bel. bom 40' vxl std/blackout | Relay,working light boom40' shift std/b.out |
| 3015 | K | Relä vxl bromsljus/blinkers vä | Relay, shift brake light/direction indicator left |
| 3015 | K | Relä vxl bromsljus/blinkers hö | Relay, shift brake light/direction indicator right |
| 3016 | K | Relä signalhorn | relay, horn |
| 3017 | K | Relä containerbelysning | Relay, Container light |
| 3018 | K | Relä containerbelysning IR | Relay, Container light IR |
| 3305 | K | Relä VBFS, backljus | Relay, rotating driver's seat, reversing light |
| 3306 | K | Relä VBFS, helljus | Relay, rotating driver's seat, main beam |
| 3307 | K | Relä VBFS, halvljus | Relay, rotating driver's seat, dipped beam |
| 3308 | K | Relä VBFS, bromsljus | Relay, rotating driver's seat, brake light |
| 3310 | K | Relä VBFS, körvisare vä | Relay, rotating driver's seat, direction indicator left |
| 3311 | K | Relä VBFS, körvisare hö | Relay, rotating driver's seat, direction indicator right |
| 3330 | K | Relä, säkerhetsbälte | Relay, seat belt |
| 3331 | K | Relä VBFS, drivning fram | Relay, rotating driver's seat, forward driving |

| Number | Categ. | Svenska | English |
|--------|--------|------------------------------------------------|---------------------------------------------------|
| 3332 | K | Relä VBFS, drivning bak | Relay, rotating driver's seat, reversing driving |
| 3349 | K | Relä VBFS, fartreglage | Relay, rotating driver's seat, speed control |
| 3404 | K | Relä VBFS, mastljus | Relay, rotating driver's seat, mast light |
| 3412 | K | Relä bak ljus | Relay, rotating driver's seat, rear light |
| 3768 | K | Relä oljetryck hydraulik | Relay, hydraulic pressure |
| 3769 | K | Relä, blockering av hyttilt | Relay, blocking of cab tilt |
| 3770 | K | Relä anliggning | Relay, alignment |
| 3771 | K | Relä Krok | Relay, Hook |
| 3772 | K | Relä laddsignal (D+) | Relay, charge signal (D+) |
| 3773 | K | Relä 12V för minne radio | Relay 12V for radio memory |
| 3774 | | Relä kylfläkt olja | Relay, cooling fan oil |
| 3775 | | | |
| 5000 | H | Kont lampa tryck lyfttång | Indicating lamp, pressure lift tong |
| 5001 | H | Varn lampa, Over Height ben uppe | Warn. Lamp, Over Height leg upper pos |
| 6001 | Y | M-ventil blockering höger | Solenoid valve, blocking right |
| 6002 | Y | M-ventil blockering vänster | Solenoid valve, blocking left |
| 6003 | Y | M-ventil inkoppling av hydraulik till topplyft | Solenoid valve, activation of toplift hydraulics |
| 6004 | Y | M-ventil sänk | Solenoid valve, lower |
| 6005 | Y | M-ventil lyft | Solenoid valve, lift |
| 6006 | Y | M-ventil bom ut | Solenoid valve, boom out |
| 6007 | Y | M-ventil bom in | Solenoid valve, boom in |
| 6008 | Y | M-ventil vridning medsols | Solenoid valve, rotation clockwise |
| 6009 | Y | M-ventil vridning motsols | Solenoid valve, rotation counter-clockwise |
| 6010 | Y | M-ventil tilt ut | Solenoid valve, tilt out |
| 6011 | Y | M-ventil tilt in | Solenoid valve, tilt in |
| 6012 | Y | M-ventil tilt | Solenoid valve, tilt |
| 6013 | Y | M-ventil fällning främre ben | Solenoid valve, lowering front legs |
| 6014 | Y | M-ventil fällning bakre ben | Solenoid valve, lowering rear legs |
| 6015 | Y | M-ventil klämma/lossa ben | Solenoid valve, clamping/releasing legs |
| 6016 | Y | M-ventil Hyttskjutning fram | Solenoid valve, cab movement forward |
| 6017 | Y | M-ventil Hyttskjutning bak | Solenoid valve, cab movement reverse |
| 6018 | Y | M-ventil spridning ut | Solenoid valve, spreading out |
| 6019 | Y | M-ventil spridning in | Solenoid valve, spreading in |
| 6020 | Y | M-ventil sidoföring vänster | Solenoid valve, side shift left |
| 6021 | Y | M-ventil sidoföring höger | Solenoid valve, side shift right |
| 6022 | Y | M-ventil extra hydraulfunktion ut | Solenoid valve, extra hydraulic function out |
| 6023 | Y | M-ventil extra hydraulfunktion in | Solenoid valve, extra hydraulic function in |
| 6024 | Y | M-ventil stativ ut | Solenoid valve, mast out |
| 6025 | Y | M-ventil stativ in | Solenoid valve, mast in |
| 6026 | Y | M-ventil höger framhjul styrning vänster | Solenoid valve, right front wheel, steering left |
| 6027 | Y | M-ventil höger framhjul styrning höger | Solenoid valve, right front wheel, steering right |
| 6028 | Y | M-ventil vänster framhjul styrning vänster | Solenoid valve, left front wheel, steering left |
| 6029 | Y | M-ventil vänster framhjul styrning höger | Solenoid valve, left front wheel, steering right |
| 6030 | Y | M-ventil höger bakhjul styrning vänster | Solenoid valve, right rear wheel, steering left |

| Number | Categ. | Svenska | English |
|--------|--------|---------------------------------------------------|------------------------------------------------------|
| 6031 | Y | M-ventil höger bakhjul styrning höger | Solenoid valve, right rear wheel, steering right |
| 6032 | Y | M-ventil vänster bakhjul styrning vänster | Solenoid valve, left rear wheel, steering left |
| 6033 | Y | M-ventil vänster bakhjul styrning höger | Solenoid valve, left rear wheel, steering right |
| 6034 | Y | M-ventil skevning | Solenoid valve, levelling |
| 6035 | Y | M-ventil skevning höger | Solenoid valve, levelling right |
| 6036 | Y | M-ventil skevning vänster | Solenoid valve, levelling left |
| 6037 | Y | M-ventil kylfläkt | Solenoid valve, Cooling fan |
| 6038 | Y | M-ventil frikoppling koppling | Solenoid valve, lockup clutch |
| 6039 | Y | M-ventil öppna twistlock | Solenoid valve, unlocked twist lock |
| 6040 | Y | M-ventil låsa twistlock | Solenoid valve, locked twist lock |
| 6041 | Y | M-ventil nöd, twistlock | Solenoid valve, emergency, twistlock |
| 6042 | Y | M-ventil mellan bom | Solenoid valve, middle boom |
| 6043 | Y | Magnetventil, fällning torn (RTCH) | Solenoid valve, boom lowering (RTCH) |
| 6044 | Y | M-ventil blockering twistlock | Solenoid valve, blocking twistlock |
| 6045 | Y | M-ventil blockering lyft | Solenoid valve, blocking lift |
| 6046 | Y | M-ventil utskjut | Solenoid valve, projecting |
| 6047 | Y | M-ventil, hyttilt upp | Solenoid valve, cab tilt up |
| 6048 | Y | M-ventil, hyttilt ner | Solenoid valve, cab tilt down |
| 6049 | Y | M-ventil, kylkrets broms | Solenoid valve, cooling circuit brake |
| 6050 | Y | M-ventil blockering utskjut | Solenoid valve, blocking projecting |
| 6051 | Y | M-ventil, regenerering höger | Solenoid valve, regeneration right |
| 6052 | Y | M-ventil, regenerering vänster | Solenoid valve, regeneration left |
| 6053 | Y | M-ventil, körläge | Solenoid valve, driving position |
| 6054 | Y | M-ventil, klämma ihop | Solenoid valve, clamping in |
| 6055 | Y | M-ventil, klämma isär | Solenoid valve, clamping out |
| 6056 | Y | M-ventil, främre knä ut | Solenoid valve, front knee out |
| 6057 | Y | M-ventil, främre knä in | Solenoid valve, front knee in |
| 6058 | Y | M-ventil, bakre knä ut | Solenoid valve, rear knee out |
| 6059 | Y | M-ventil, bakre knä in | Solenoid valve, rear knee in |
| 6060 | Y | M-ventil, främre ben upp | Solenoid valve, front legs up |
| 6061 | Y | M-ventil, bakre ben upp | Solenoid valve, rear legs up |
| 6062 | Y | M-ventil, urkoppling hydraulpump | Solenoid valve interruption hydraulic pump |
| 6063 | Y | M-ventil, stödben upp | Solenoid valve, brace up |
| 6064 | Y | M-ventil, stödben ner | Solenoid valve, brace down |
| 6065 | Y | M-ventil, frikoppling vridbroms | Solenoid valve, lockup rotation brake |
| 6066 | Y | M-ventil, v-låda, drivning | Solenoid valve, gearbox, drive |
| 6067 | Y | M-ventil, v-låda, oljetryck till 1:a/3:e växeln | Solenoid valve, gearbox, oilpressure to 1st/3rd gear |
| 6068 | Y | M-ventil sax/rotation | Solenoid valve extender/rotation |
| 6069 | Y | M-ventil, v-låda, oljetryck till 2:a/4:e växeln | Solenoid valve, gearbox, oilpressure to 2nd/4th gear |
| 6070 | Y | M-ventil Over Height upp | Solenoid valve, Over Height up |
| 6071 | Y | M-ventil Over Height ner | Solenoid valve, Over Height down |
| 6072 | Y | M-ventil klämtryck | Solenoid valve clamp pressure |
| 6073 | Y | Proportional ventil, Opti speed | Proportional valve, Opti speed |
| 6074 | Y | M-ventil, v-låda, växelväljare för 2:a/4:e växeln | Solenoid valve, gearbox, gearswitch for 2nd/4th gear |
| 6075 | Y | M-ventil, v-låda, växelväljare för 1:a/3:e växeln | Solenoid valve, gearbox, gearswitch for 1st/3rd gear |
| 6076 | Y | M-ventil blockering sänk | Solenoid valve, blocking lower |
| 6077 | Y | M-ventil Inching | Solenoid valve, Inching |

| Number | Categ. | Svenska | English |
|--------|--------|-----------------------------------|-----------------------------------------|
| 6078 | Y | M-ventil,Avstängning Övre klämarm | Solenoid valve, upper arm off |
| 6079 | Y | M-Ventil, Sidoföring/Övre armar | Solenoid valve, Sideshift/Upper arms |
| 6080 | Y | M-ventil, aktivering hyttkörning | Solenoid valve, activate sliding cab |
| 7200 | S | Givare, axeltryck höger | Sensor, axle pressure right |
| 7201 | S | Givare, axeltryck vänster | Sensor, axle pressure left |
| 7202 | S | Givare, anliggning vänster fram | Sensor, alignment left front |
| 7202 | S | Givare, anliggning höger fram | Sensor, alignment right front |
| 7203 | S | Givare, anliggning vänster bak | Sensor, alignment left rear |
| 7203 | S | Givare, anliggning höger bak | Sensor, alignment right rear |
| 7204 | S | Givare, öppen vänster twistlock | Sensor, unlocked twistlock left |
| 7204 | S | Givare, öppen höger twistlock | Sensor, unlocked twistlock right |
| 7205 | S | Givare, låst vänster twistlock | Sensor, locked twistlock left |
| 7205 | S | Givare, låst höger twistlock | Sensor, locked twistlock right |
| 7206 | S | Givare, gaffel aggregat | Sensor, fork attachment |
| 7207 | S | Givare, 2WD/4WD | Sensor, 2WD/4WD |
| 7208 | S | Givare, hytt i körläge | Sensor, Cab in drive position |
| 7209 | S | Givare, oljefilter indikering | Sensor, Oil filter indication |
| 7210 | S | Givare, hytt i transportläge | Sensor, Cab in transportation position |
| 7211 | S | Givare, lyfthöjd | Sensor, lifting height |
| 7212 | S | Givare, körläge | Sensor, driving position |
| 7213 | S | Givare, Anliggning främre ben | Sensor, Alignment front legs |
| 7214 | S | Givare, Anliggning bakre ben | Sensor, Alignment rear legs |
| 7215 | S | Givare, kläm främre ben | Sensor, Clamp front legs |
| 7216 | S | Givare, kläm bakre ben | Sensor, Clamp rear legs |
| 7217 | S | Givare, främre knä | Sensor, front knee |
| 7218 | S | Givare, bakre knä | Sensor, rear knee |
| 7219 | S | Givare, främre ben | Sensor, front legs |
| 7220 | S | Givare, bakre ben | Sensor, rear legs |
| 7221 | S | Givare, styraxel | Sensor, steering axle |
| 7222 | S | Givare, stödben uppe | Sensor, brace up |
| 7223 | S | Givare, stödben nere | Sensor, brace down |
| 7224 | B | Givare, mätläge våg | Sensor, measurepoint scale |
| 7225 | B | Givare, rotationsstopp | Sensor, rotation stop |
| 7226 | B | Givare, tryck lyftcylinder | Sensor, pressure lift cylinder |
| 7227 | B | Givare, tryck klämma | Sensor, pressure clamp |
| 7228 | B | Givare lyfthöjd analog | Sensor lift height analogue |
| 7229 | B | Givare tiltvinkel analog | Sensor tilt angle analogue |
| 7230 | B | Givare ultraljud last position | Sensor, ultrasonic load position |
| 7231 | B | Givare, Over Height, Ben uppe | Sensor, Over Height, Leg upper position |
| 7232 | B | Givare,IR Last position | Givare,IR Load position |
| 7233 | B | Givare lambda sond | Sensor lambda sond |
| 7234 | B | Givare vatten i bränsle | Transmitter water in fuel |
| 8071 | R | Potentiometer lyft/sänk | Potentiometer lift/lower |
| 8072 | R | Potentiometer tilt | Potentiometer tilt |
| 8073 | R | Potentiometer sidoföring | Potentiometer side shifting |
| 8074 | R | Potentiometer spridning | Potentiometer spreading |
| 8075 | R | Potentiometer extra | Potentiometer extra |
| 8076 | R | Potentiometer mast in/ut | Potentiometer reach in/out |
| 8077 | R | Potentiometer höger framhjul | Potentiometer right front wheel |
| 8078 | R | Potentiometer vänster framhjul | Potentiometer left front wheel |
| 8079 | R | Potentiometer höger bakhjul | Potentiometer right rear wheel |
| 8080 | R | Potentiometer vänster bakhjul | Potentiometer left rear wheel |
| 8081 | R | Potentiometer tiltvinkel | Potentiometer tilt angle |
| 8082 | R | Potentiometer fläkthastighet, ECC | Potentiometer fan speed, ECC |

| Number | Categ. | Svenska | English |
|--------|--------|-------------------------------|----------------------------------|
| 8083 | R | Potentiometer temperatur, ECC | Potentiometer temperature, ECC |
| 8084 | R | Potentiometer spjäll, ECC | Potentiometer draught valve, ECC |
| 8085 | R | Potentiometer rotation | Potentiometer rotation |
| 8086 | R | Potentiometer sax | Potentiometer extender |
| 8087 | R | Potentiometer klämma | Potentiometer clamp |
| 8088 | R | Potentiometer skevning | Potentiometer levelling |
| 8089 | R | Potentiometer krokåsning | Potentiometer flaps |
| 8090 | V | Laser, pappersaggretgat | Lase, Pulp an Paper |
| 8091 | | | |
| 9000 | M | Motor höj/sänkbar stolspelare | Motor rise/lower seat column |
| 9001 | D | Åkerströms fjärrkontroll | Åkerströms Remote Control |
| 9002 | | | |
| 9003 | H | Varningssignal aut. rörelse | Warning alarm aut. movement |
| 9888 | A | test | |
| 93774 | K | Relä hållkrets | Relay, Holdcircuit |

Table of Contents F Technical data

| | |
|-------------------------------------------|----------|
| Technical data | 3 |
| Data and volume..... | 3 |
| Lift capacity and dimensions..... | 6 |
| Oils and lubricants, recommendation | 9 |
| Tightening torques, recommendations | 10 |
| Tightening torque, ORFS connections..... | 12 |
| Unit explanations | 13 |
| Conversion table, SI-units..... | 14 |
| Conversion table, length | 15 |
| Conversion table, area..... | 15 |
| Conversion table, volume | 15 |
| Conversion table, weight | 16 |
| Conversion table, pressure..... | 16 |

Technical data

Data and volume

Data

| | | | |
|------------------------------------|--------------------------|---------------------|--------------------------|
| 1 Engine | Volvo TWD1240VE | Volvo TAD1250VE | Cummins QSM11 |
| Power acc. to ISO 3046 (net power) | 256 kW at 2000 rpm | 247 kW at 1900 rpm | 261 kW at 2000 rpm |
| Torque ISO 3046 | 1751 Nm at 1200 rpm | 1760 Nm at 1400 rpm | 1830 Nm at 1100-1400 rpm |
| Alternator | 2240 W (28 V / 80 A) | | 2400 W (24 V / 100 A) |
| System voltage | 24 V (2 x 12 V / 140 Ah) | | |


| | |
|--------------------------------|--------------|
| 2 Transmission | Dana TE32000 |
| No. of gears forward – reverse | 4 – 4 |

| | | |
|-----------------------------|-----------------|--------------|
| 3 Power transmission | Meritor PRC7534 | Kessler D102 |
|-----------------------------|-----------------|--------------|

| | |
|-----------------|--------------------------------|
| 4 Brakes | Wet Disc Brakes - Drive wheels |
| Parking brake | Spring brake - Drive wheels |

| | |
|-------------------|-----------------|
| 5 Steering | Hydraulic servo |
|-------------------|-----------------|

| | | | |
|-----------------------------------------|-------------|-------------|-------------|
| 6 Wheel suspension | DRF420 | DRF400/450 | DRF450, X |
| Dimensions front - rear | 18.00x25/36 | 18.00x25/40 | 18.00x33/36 |
| Tyre pressure (also see pressure plate) | 1.0 MPa | | |

| 9.6 Frame, body, cab and accessories, lighting system | | |
|-----------------------------------------------------------------------------------------------------|-------------------|-------------------------------------------------------|
| Light | Rating (W) | Socket |
| Control lights | 1.2 | W2x4.6d |
| Interior lighting | 10 | S8.5 |
| Rear lights | 5 | BA15s |
| Brake lights | 21 | BA15s |
| Direction indicators | 21 | BA15s |
| Running lights | 5 | W2.1x9.5d |
| Headlights (high and low beams) | 75/70 | P43t-38 |
| Back-up lights | 70 | PK22s |
| Work lights | 70 | PK22s |
| Work lights Xenon  | 35 | D1S Xenon tube. Insert and ballast replaced complete. |
| Rotating beacon | 70 | PK22s |

Volumes

For oil types see tab *F Technical data*.

| 1 Engine | Volvo TWD1240VE | Volvo TAD1250VE | Cummins QSM11 |
|-----------------|---------------------------|-----------------|---------------|
| Fuel tank | 550 l | | |
| Fuel quality | Diesel according to EN590 | | |
| Cooling system | 68 l | 40 l | 40 l |
| Engine oil | 35 l | 35 l | 34 l |

| 2 Transmission | Dana TE32000 |
|-----------------------|---------------------------------|
| Transmission oil | 60 l when changing (80 l total) |

| 3 Power transmission | Meritor PRC7534 | Kessler D102 |
|-----------------------------|-----------------|--------------|
| Differential | 50 l | 65 l |
| Hub reduction | 2x10 l | 2x12 l |

| 4 Brakes | |
|-----------------|-------|
| Brake system | 140 l |


| | |
|-------------------------------------------|-------|
| 7 Load handling | |
| Planetary gear hydraulic motor attachment | 1.6 l |
| Brake hydraulic motor attachment | 0.6 l |

| | | | |
|-------------------------------------------|---------------------------------|-----------------|-------------------------|
| 9 Frame, body, cab and accessories | Volvo TWD1240VE | Volvo TAD1250VE | Cummins QSM11 |
| Air conditioning, refrigerant | 2000 g, R134a | | |
| Air conditioning, lubricant | Pre-filled with correct volume. | | 1.7 dl ZXL100 (PAG oil) |
| Washer fluid | 5 l | | |

| | |
|-----------------------------|--------------------------|
| 10 Common hydraulics | |
| Hydraulic oil tank | 600 l |
| Hydraulic system | 940 l (total incl. tank) |

Lift capacity and dimensions

Capacity (tons)

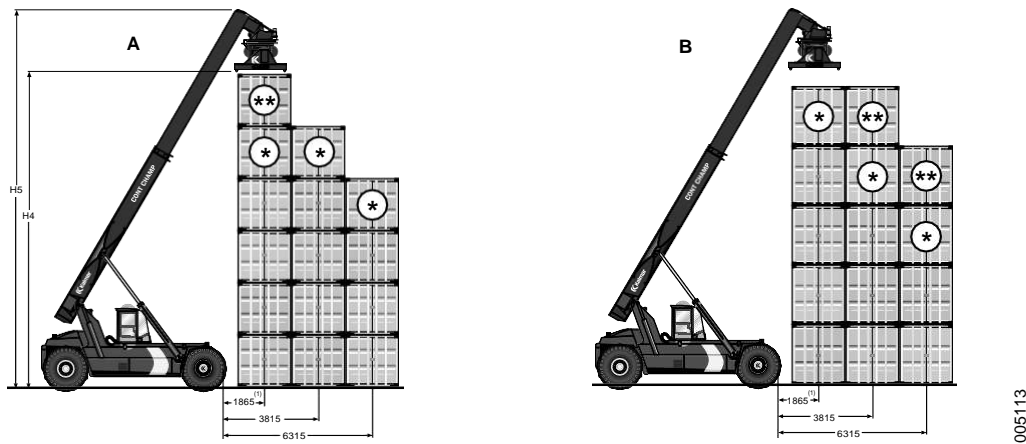

A. Container 86


B. Container 96

005113

| Model | Container 86 | | | Container 96 | | | Lift height top lift | |
|---------------|--------------|-------------|-------------|--------------|-------------|-----------|----------------------|---------|
| | Row 1 | Row 2 | Row 3 | Row 1 | Row 2 | Row 3 | H4 (mm) | H5 (mm) |
| DRF400-60C5 | 38*/40 | 25** | 10** | 37**/40* | 25* | 10* | 14900 | 18100 |
| DRF420-60S5 | 41*/42 | 25* | 11* | 40*/42 | 25* | 11* | 15100 | 18100 |
| DRF450-60S5 | 43*/45 | 27* | 13* | 42*/45 | 27* | 13* | 15100 | 18100 |
| DRF450-60S5X | 43*/45 | 35* | 18* | 42*/45 | 35* | 18* | 15200 | 18200 |
| DRF450-60C5X | 42*/45 | 32** | 14** | 41**/44*/45 | 32* | 14* | 15000 | 18200 |
| DRF420-65S5 | 41*/42 | 28* | 13* | 40*/42 | 28* | 13* | 15100 | 18100 |
| DRF420-65S6 | 39**/41*/42 | 28* | 13* | 40*/42 | 28** | 13** | 16200 | 19250 |
| DRF450-65S5 | 43*/45 | 30* | 15* | 42*/45 | 30* | 15* | 15100 | 18100 |
| DRF450-65S6 | 42**/44*/45 | 30* | 15* | 43*/45 | 30** | 15** | 16200 | 19250 |
| DRF450-65S5X | 45* | 36*/38* | 21* | 43*/45 | 37*/38 | 21* | 15200 | 18200 |
| DRF450-65C5X | 42*/45 | 33**/34* | 16** | 41**/44*/45 | 34* | 16* | 15000 | 18200 |
| DRF450-65S6X | 42**/45* | 35*/38 | 21* | 43*/45 | 34**/36*/38 | 21** | 16300 | 19350 |
| DRF420-70S5 | 41*/42 | 30* | 15* | 40*/42 | 30* | 15* | 15100 | 18100 |
| DRF450-70S5X | 45* | 39*/41 | 23* | 45* | 40*/41 | 23* | 15100 | 18200 |
| DRF450-70S5XS | 45* | 39*/41 | 23*/(31*) | 45* | 40*/41 | 23*/(31*) | 15100 | 18200 |
| DRF450-70C5XS | 45* | 36**/38* | 20**/(27**) | 43**/45* | 37*/38 | 20*/(27*) | 14900 | 18200 |
| DRF450-75S5XS | 45* | 43*/45 | 26*/(34*) | 45 | 45* | 26*/(34*) | 15200 | 18400 |
| DRF450-75C5XS | 45* | 40**/42*/43 | 24**/(32**) | 45** | 41*/43 | 24/(32*) | 15000 | 18400 |

() = Support jacks down

Dimensions (mm)

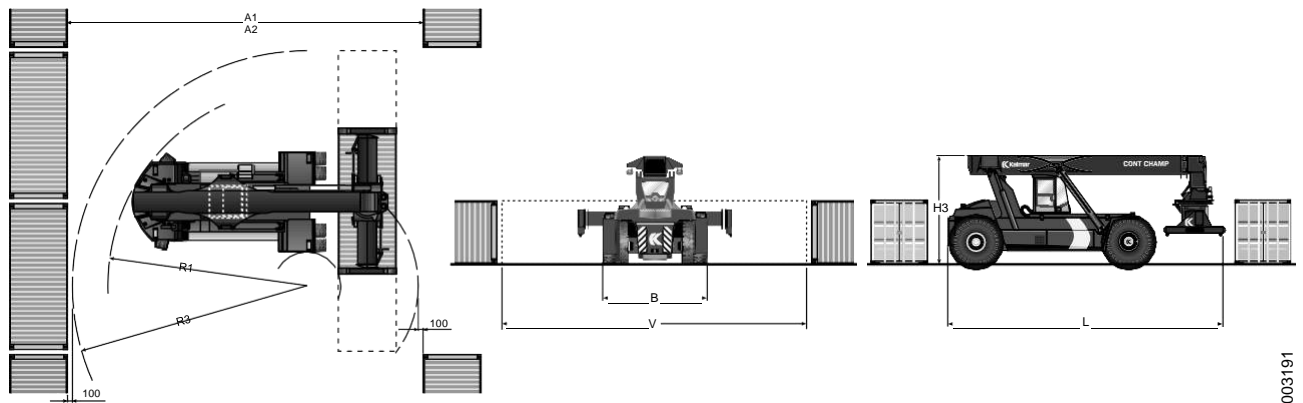

003191

| Model | Operating width | | Turning radius | | Main dimensions | | | | | | Operating weight (kg) |
|--------------|-----------------|--------|----------------|--------|-----------------|------------|-------|------|------------------|-------------|-----------------------|
| | A1-20' | A2-40' | R1-20' | R3-40' | B | V | L | H3 | Ground clearance | Tyres | |
| DRF400-60C5 | 11200 | 13600 | 8100 | 9400 | 4150 | 6055-12185 | 11200 | 4500 | 250 | 18.00x25/40 | 72700 |
| DRF420-60S5 | 11200 | 13600 | 8100 | 9400 | 4150 | 6055-12185 | 11200 | 4500 | 250 | 18.00x25/36 | 64500 |
| DRF450-60S5 | 11200 | 13600 | 8100 | 9400 | 4150 | 6055-12185 | 11200 | 4500 | 250 | 18.00x25/40 | 66400 |
| DRF450-60S5X | 11200 | 13600 | 8100 | 9400 | 4150 | 6055-12185 | 11200 | 4600 | 300 | 18.00x33/36 | 76500 |
| DRF450-60C5X | 11200 | 13600 | 8100 | 9400 | 4150 | 6055-12185 | 11200 | 4600 | 300 | 18.00x33/36 | 81100 |
| DRF420-65S5 | 11600 | 13600 | 8500 | 9400 | 4150 | 6055-12185 | 11700 | 4500 | 250 | 18.00x25/36 | 65000 |
| DRF420-65S6 | 11900 | 13900 | 8500 | 9450 | 4150 | 6055-12185 | 12000 | 4500 | 250 | 18.00x25/36 | 66200 |
| DRF450-65S5 | 11600 | 13600 | 8500 | 9400 | 4150 | 6055-12185 | 11700 | 4500 | 250 | 18.00x25/40 | 66800 |
| DRF450-65S6 | 11900 | 13900 | 8500 | 9450 | 4150 | 6055-12185 | 12000 | 4500 | 250 | 18.00x25/40 | 67800 |
| DRF450-65S5X | 11600 | 13600 | 8500 | 9400 | 4150 | 6055-12185 | 11700 | 4600 | 300 | 18.00x33/36 | 76300 |
| DRF450-65C5X | 11600 | 13600 | 8500 | 9400 | 4150 | 6055-1258 | 11700 | 4600 | 300 | 18.00x33/36 | 80500 |
| DRF450-65S6X | 11900 | 13900 | 8500 | 9450 | 4150 | 6055-12185 | 12000 | 4600 | 300 | 18.00x33/36 | 77200 |
| DRF420-70S5 | 12100 | 13600 | 9000 | 9400 | 4150 | 6055-12185 | 12200 | 4500 | 250 | 18.00x25/36 | 65800 |

| Model | Operating width | | Turning radius | | Main dimensions | | | | | | Operating weight (kg) |
|---------------|-----------------|--------|----------------|--------|-----------------|------------|-------|------|------------------|-------------|-----------------------|
| | A1-20' | A2-40' | R1-20' | R3-40' | B | V | L | H3 | Ground clearance | Tyres | |
| DRF450-70S5X | 12100 | 13600 | 9000 | 9400 | 4150 | 6055-12185 | 12200 | 4700 | 300 | 18.00x33/36 | 77800 |
| DRF450-70S5XS | 12100 | 13600 | 9000 | 9400 | 4150 | 6055-12185 | 12200 | 4700 | 300 | 18.00x33/36 | 79300 |
| DRF450-70C5XS | 12100 | 13600 | 9000 | 9400 | 4150 | 6055-12185 | 12200 | 4700 | 300 | 18.00x33/36 | 84200 |
| DRF450-75S5XS | 12500 | 13600 | 9400 | 9400 | 4150 | 6055-12185 | 12700 | 4750 | 300 | 18.00x33/36 | 82100 |
| DRF450-75C5XS | 12500 | 13600 | 9400 | 9400 | 4150 | 6055-12185 | 12700 | 4750 | 300 | 18.00x33/36 | 88100 |

Oils and lubricants, recommendation

The service intervals indicated by Kalmar Industries in the maintenance manual only apply if oils are selected according to the table below. The table indicates recommended viscosity for different oil types and qualities depending on the ambient temperature.

Any deviation from this table must be approved in writing by Kalmar Industries, and may mean changed service intervals.

| Oil type, quality | °C | -40 | -30 | -20 | -10 | 0 | +10 | +20 | +30 | +40 |
|---------------------------------------------------------------------------------------------------------------------------------------------------|----|-----|-----|-----|-----|-----|-----|-----|-----|------|
| | °F | -40 | -22 | -4 | +14 | +32 | +50 | +68 | +86 | +104 |
| 1.8 Engine, lubrication system
Volvo TWD1240VE: VDS-2 AND ACEA E5*
Volvo TAD1250VE: VDS-3**
Cummins QSM11: API CH-4 or ACEA E5 | | | | | | | | | | |
| | | | | | | | | | | |
| 2.6 Transmission, lubrication system
ATF DEXRON III | | | | | | | | | | |
| | | | | | | | | | | |
| 3.3 Power transmission, drive axle
API GL-5 | | | | | | | | | | |
| | | | | | | | | | | |
| 4 Brakes (UTTO-oil) ***)
GM Allison C-4
John Deere J20 C, D
Caterpillar TO-4 | | | | | | | | | | |
| | | | | | | | | | | |
| 7 Load handling
Planetary gear hydraulic motor, hypoid oil
API GL-5
Disc brake hydraulic motor, see "10 Common hydraulics" below. | | | | | | | | | | |
| | | | | | | | | | | |
| 10 Common hydraulics
DIN 51524 Part 3 HVLP | | | | | | | | | | |
| | | | | | | | | | | |

NOTE

The change interval for engine oils is conditional on the sulphur content in the fuel does not exceed 0.5 %.

Oil filters shall always be changed in connection with oil change.

*) The lubrication oil must meet both standards. **NOTE!** API: CH-4 or CH-4 are approved for markets outside of Europe (Instead of ACEA E5).

**) Same oil as for Volvo TWD1240VE may be used on the condition that the change interval is reduced to 400 hours.

***) The oil in the brake system must meet one of the quality standards as well as be a UTTO-oil (Universal Tractor Transmission Oil).

ACEA = Association des Constructeurs Européenne d'Automobiles

API = American Petroleum Institute

VDS = Volvo Drain Specification

Grease

Use a universal grease type EP acc. to NLGI Grade 2 with 3-5 % molybdenum sulfide content for all grease points except for slide plates and pins/axles with bearings not requiring greasing.

For slide plates, use lubrication paste Gleitmo 805 or its equivalent.

For pins/axles with bearings not requiring greasing, use aluminium paste Loctite 8150 or its equivalent.

For electrical contacts, Electrical connector grease 923836.0552 shall be used.

Sealant silicone

Use Loctite 5972 or Loctite 598 (or equivalent). If uncertain, contact Kalmar Industries.

Tightening torques, recommendations

The tightening torques in the following table are recommendations when tightening bolts and nuts.

When torquing using a machine, for example, bolt runner, the tightening torque should be reduced by approx. 5%.

For mild surfaces (hardness below 200 HB), washer shall be used under both bolt head and nut. Alternatively, use flange bolt or flange nut.

Tighten to the prescribed torque without stopping.

Recommended tightening torque may vary depending on surface treatment. Certain combinations of nut and bolt require lubrication according to the table below.

| State | Bolt | Nut | Lubrication |
|-------|-------------------|--------------------------------|-------------|
| 1 | untreated | untreated | oil |
| 2 | bright-galvanized | untreated or bright-galvanized | dry or oil |
| 3 | hot-galvanized | untreated | dry or oil |

| Quality | 8.8 | | | 10.9 | 12.9 |
|----------------------|---------|---------|---------|---------|---------|
| State | 1 | 2 | 3 | 1 | 1 |
| Fine M-thread | | | | | |
| M81 | 27 Nm | 24 Nm | 30 Nm | 39 Nm | 46 Nm |
| M101,25 | 54 Nm | 48 Nm | 61 Nm | 78 Nm | 91 Nm |
| M121,25 | 96 Nm | 85 Nm | 108 Nm | 135 Nm | 162 Nm |
| M161.5 | 230 Nm | 205 Nm | 260 Nm | 323 Nm | 388 Nm |
| M181.5 | 330 Nm | 294 Nm | 373 Nm | 466 Nm | 559 Nm |
| M-thread | | | | | |
| M4 | 3.2 Nm | 2.9 Nm | 3.6 Nm | 4.6 Nm | 5.5 Nm |
| M5 | 6.4 Nm | 5.7 Nm | 7.2 Nm | 9.1 Nm | 11 Nm |
| M6 | 11 Nm | 9.8 Nm | 12.5 Nm | 16 Nm | 19 Nm |
| M8 | 26 Nm | 24 Nm | 30 Nm | 38 Nm | 45 Nm |
| M10 | 52 Nm | 47 Nm | 59 Nm | 74 Nm | 89 Nm |
| M12 | 91 Nm | 81 Nm | 103 Nm | 128 Nm | 154 Nm |
| M16 | 220 Nm | 198 Nm | 250 Nm | 313 Nm | 375 Nm |
| M20 | 430 Nm | 386 Nm | 490 Nm | 620 Nm | 732 Nm |
| M24 | 750 Nm | 668 Nm | 848 Nm | 1050 Nm | 1270 Nm |
| M30 | 1480 Nm | 1317 Nm | 1672 Nm | 2080 Nm | 2500 Nm |
| UNC-thread | | | | | |
| 1/4 | 12.5 Nm | 11.1 Nm | 14.1 Nm | 17.6 Nm | 20 Nm |
| 5/16 | 25 Nm | 22.3 Nm | 28.3 Nm | 35 Nm | 42 Nm |
| 3/8 | 44 Nm | 39 Nm | 50 Nm | 62 Nm | 73 Nm |
| 7/16 | 70 Nm | 62 Nm | 79 Nm | 100 Nm | 118 Nm |
| 1/2 | 107 Nm | 95 Nm | 121 Nm | 151 Nm | 178 Nm |
| 9/16 | 153 Nm | 136 Nm | 173 Nm | 216 Nm | 255 Nm |
| 5/8 | 210 Nm | 187 Nm | 237 Nm | 298 Nm | 353 Nm |
| 3/4 | 370 Nm | 390 Nm | 418 Nm | 524 Nm | 619 Nm |
| 7/8 | 594 Nm | 528 Nm | 671 Nm | 839 Nm | 990 Nm |
| 1 | 889 Nm | 791 Nm | 1005 Nm | 1260 Nm | 1480 Nm |
| 1 1/8 | 1260 Nm | 1120 Nm | 1424 Nm | 1780 Nm | 2100 Nm |
| 1 1/4 | 1760 Nm | 1565 Nm | 1990 Nm | 2490 Nm | 2940 Nm |
| 1 3/8 | 2320 Nm | 2065 Nm | 2620 Nm | 3280 Nm | 3870 Nm |
| 1 1/2 | 3060 Nm | 2720 Nm | 3455 Nm | 4320 Nm | 5100 Nm |

Tightening torque, ORFS connections

Pipe and hose fitting

| Pipe diameter | | Tightening torque |
|---------------|-------|-------------------|
| mm | inch | Nm |
| 6 | 1/4 | 23-25 |
| 8 | 5/16 | 33-38 |
| 10 | 3/8 | |
| 12 | 1/2 | 51-57 |
| 14 | - | 80-90 |
| 15 | - | |
| 16 | 5/8 | |
| 18 | 3/4 | 120-130 |
| 20 | - | |
| 22 | 7/8 | 150-170 |
| 25 | 1" | |
| 28 | - | 180-200 |
| 30 | - | |
| 32 | 1"1/4 | |
| 35 | - | 200-240 |
| 38 | 1"1/2 | |

| Wrench size | | Tightening torque |
|-------------|-------|-------------------|
| mm | inch | Nm |
| 17 | 11/16 | 23-25 |
| 22 | 13/16 | 33-38 |
| 24 | 15/16 | 51-57 |
| 36 | 1 3/8 | 120-130 |
| 41 | 1 5/8 | 150-170 |

Goods coupling

| UNF-UN | | Metric-ISO | | BSSP | |
|---------------|------------------------|-------------------|------------------------|---------------|------------------------|
| Thread (inch) | Tightening torque (Nm) | Thread (mm) | Tightening torque (Nm) | Thread (inch) | Tightening torque (Nm) |
| 7/16-20 | 21 | 10x1 | 20 | 1/8-28 | 20 |
| 1/2-20 | 27 | 12x1.5 | 35 | 1/4-19 | 35 |
| 9/16-18 | 40 | 14x1.5 | 45 | 3/8-19 | 70 |
| 3/4-16 | 78 | 16x1.5 | 55 | 1/2-14 | 100 |
| 7/8-14 | 110 | 18x1.5 | 68 | 3/4-14 | 190 |
| 1"1/16-12 | 180 | 20x1.5 | 80 | 1"-11 | 300 |
| 1"3/16-12 | 230 | 22x1.5 | 98 | 1"1/4-11 | 330 |
| 1"5/16-12 | 285 | 26x1.5 | 170 | 1"1/2-11 | 400 |
| 1"5/8-12 | 320 | 27x2 | 180 | | |
| 1"7/8-12 | 400 | 33x2 | 310 | | |
| | | 42x2 | 330 | | |
| | | 48x2 | 400 | | |

Unit explanations

| Unit | Abbreviation |
|---------------------|--------------|
| Newton metre | Nm |
| Kilo pound metre | kpm |
| Kilo pascal | kPa |
| Mega pascal | MPa |
| Kilowatt | kW |
| kilojoule | kJ |
| British termel unit | Btu |
| Calorie | ca |
| Inch | in |
| Feet | ft |
| Yard | yd |
| Mile | mile |
| Centimetre | cm |
| Metre | m |
| Kilometre | km |

Conversion table, SI-units

| SI-unit | Recalculation factor | Non-SI | Recalculation factor | SI |
|----------------------------------------|----------------------|-----------------------|----------------------|----------------------|
| Torque | | | | |
| Nm | x 10,2 | = kg·cm | x 0,8664 | = lb·in |
| Nm | x 0,74 | = lbf·ft | x 1,36 | = Nm |
| Nm | x 0,102 | = kg·m | x 7,22 | = lb·ft |
| Pressure (Pa = N/m²) | | | | |
| kPa | x 4,0 | = in.H ₂ O | x 0,249 | = kPa |
| kPa | x 0,30 | = in.Hg | x 3,38 | = kPa |
| kPa | x 0,145 | = psi | x 6,89 | = kPa |
| bar | x 14,5 | = psi | x 0,069 | = bar |
| kp/cm ² | x 14,22 | = psi | x 0,070 | = kp/cm ² |
| N/mm ² | x 145,04 | = psi | x 0,069 | = bar |
| MPa | x 145 | = psi | x 0,00689 | = MPa |
| Power (W = J/s) | | | | |
| kW | x 1,36 | = hp (cv) | x 0,736 | = kW |
| kW | x 1,34 | = bhp | x 0,746 | = kW |
| kW | x 0,948 | = Btu/s | x 1,055 | = kW |
| W | x 0,74 | = ft·lb/s | x 1,36 | = W |
| Energy (J = Nm) | | | | |
| kJ | x 0,948 | = Btu | x 1,055 | = kJ |
| J | x 0,239 | = calorie | x 4,19 | = J |
| Speed and acceleration | | | | |
| m/s ² | x 3,28 | = ft/s ² | x 0,305 | = m/s ² |
| m/s | x 3,28 | = ft/s | x 0,305 | = m/s |
| km/h | x 0,62 | = mph | x 1,61 | = km/h |
| Horsepower/torque | | | | |
| Bhp x 5252 rpm = TQ (lb·ft) | | | TQ x rpm 5252 = bhp | |
| Temperature | | | | |
| °C = (°F – 32)/1,8 | °F = (°C x 1,8) + 32 | | | |
| Flow factor | | | | |
| l/min (dm ³ /min) | x 0,264 | = US gal/min x 3,785 | | = liter/min |

Conversion table, length

| Unit | cm | m | km | in | ft | yd | mile |
|------|--------|--------|----------|---------|---------|---------|----------|
| cm | 1 | 0,01 | 0,00001 | 0,3937 | 0,03281 | 0,01094 | 0,000006 |
| m | 100 | 1 | 0,001 | 39,37 | 3,2808 | 1,0936 | 0,00062 |
| km | 100000 | 1000 | 1 | 39370,7 | 3280,8 | 1093,6 | 0,62137 |
| in | 2,54 | 0,0254 | 0,000025 | 1 | 0,08333 | 0,02777 | 0,000015 |
| ft | 30,48 | 0,3048 | 0,000304 | 12 | 1 | 0,3333 | 0,000189 |
| yd | 91,44 | 0,9144 | 0,000914 | 36 | 3 | 1 | 0,000568 |
| mile | 160930 | 1609,3 | 1,6093 | 63360 | 5280 | 1760 | 1 |

1 mm = 0,1 cm - 1 mm = 0,001 mm

Conversion table, area

| Unit | cm ² | m ² | km ² | a | ft ² | yd ² | in ² |
|-----------------|-----------------|----------------|-----------------|----------|-----------------|-----------------|-----------------|
| cm ² | 1 | 0,0001 | - | 0,000001 | 0,001076 | 0,000012 | 0,155000 |
| m ² | 10000 | 1 | 0,000001 | 0,01 | 10,764 | 1,1958 | 1550,000 |
| km ² | - | 1000000 | 1 | 10000 | 1076400 | 1195800 | - |
| a | 0,01 | 100 | 0,0001 | 1 | 1076,4 | 119,58 | - |
| ft ² | - | 0,092903 | - | 0,000929 | 1 | 0,1111 | 144,000 |
| yd ² | - | 0,83613 | - | 0,008361 | 9 | 1 | 1296,00 |
| in ² | 6,4516 | 0,000645 | - | - | 0,006943 | 0,000771 | 1 |

1ha = 100a - 1mile² = 259 ha = 2,59km²

Conversion table, volume

| Unit | cm ³ = cc | m ³ | l | in ³ | ft ³ | yd ³ |
|----------------------|----------------------|----------------|---------|-----------------|-----------------|-----------------|
| cm ³ = ml | 1 | 0,000001 | 0,001 | 0,061024 | 0,000035 | 0,000001 |
| m ³ | 1000000 | 1 | 1000 | 61024 | 35,315 | 1,30796 |
| dm ³ (l) | 1000 | 0,001 | 1 | 61,024 | 0,035315 | 0,001308 |
| in ³ | 16,387 | 0,000016 | 0,01638 | 1 | 0,000578 | 0,000021 |
| ft ³ | 28316,8 | 0,028317 | 28,317 | 1728 | 1 | 0,03704 |
| yd ³ | 764529,8 | 0,76453 | 764,53 | 46656 | 27 | 1 |

1gal (US) = 3785,41cm³ = 231in³ = 0,83267gal (UK)

Conversion table, weight

| Unit | g | kg | t | oz | lb |
|------|---------|---------|----------|---------|---------|
| g | 1 | 0,001 | 0,000001 | 0,03527 | 0,0022 |
| kg | 1000 | 1 | 0,001 | 35,273 | 2,20459 |
| t | 1000000 | 1000 | 1 | 35273 | 2204,59 |
| oz | 28,3495 | 0,02835 | 0,000028 | 1 | 0,0625 |
| lb | 453,592 | 0,45359 | 0,000454 | 16 | 1 |

1 ton (metric) = 1,1023 ton (US) = 0,9842 ton (UK)

Conversion table, pressure

| Unit | kp/cm ² | bar | Pa = N/m ² | kPa | lbf/in ² | lbf/ft ² |
|-----------------------|--------------------|---------|-----------------------|---------|---------------------|---------------------|
| kp/cm ² | 1 | 0,98067 | 98066,5 | 98,0665 | 14,2233 | 2048,16 |
| bar | 1,01972 | 1 | 100000 | 100 | 14,5037 | 2088,6 |
| Pa = N/m ² | 0,00001 | 0,001 | 1 | 0,001 | 0,00015 | 0,02086 |
| kPa | 0,01020 | 0,01 | 1000 | 1 | 0,14504 | 20,886 |
| lbf/in ² | 0,07032 | 0,0689 | 6894,76 | 6,89476 | 1 | 144 |
| lbf/ft ² | 0,00047 | 0,00047 | 47,88028 | 0,04788 | 0,00694 | 1 |

kg/cm² = 735,56 Torr (mmHg) = 0,96784atm

Table of Contents G Terminology and index

| | |
|-----------------------------------|----------|
| Terminology and index..... | 3 |
| Terminology | 3 |
| Index | 6 |

Terminology and index

Terminology

| Term | Description |
|-------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Accumulator | Reservoir that stores (accumulates) pressure for i.e. hydraulic functions. |
| Anti-corrosion compound | Prevents oxidation, in simple terms, rustproofing. |
| Attachment | Part of the machine that grabs the load when lifting. |
| Axle distance | Distance between drive axle and steering axle. |
| Bar | Unit to express pressure. |
| Battery disconnecter | Cuts off current from battery. |
| Boom | Lift beam moveable vertically and in-out. Bracket for attachment. |
| Bottom lift attachment | “Lift legs” that can be raised/lowered for handling loads. Grabs load from below. |
| Buzzer | Acoustic alarm to catch the operator’s attention. |
| Control valve | Valves that can be used to control something, for example, to release pressure and thus lower a boom or a fork. See also control valve. |
| Daily inspection | The actions that should be performed daily to ensure the machine’s functionality. |
| Decitonne | Tenth of a tonne, measure of the machine’s lift capacity. |
| Display | “Window” showing digital information on steering wheel panel in cab. |
| Drive axle | Driving axle that receives the torque from the drivetrain. |
| Drivetrain | Parts in machine involved in power transmission; engine, torque converter, transmission, propeller shaft and drive axle with differential and hub reduction. |
| Dust reservoir | The air filter collects the coarsest particles in a dust reservoir, emptied automatically during operation. |
| ECC | Electric Climate Control. Climate unit with thermostat-controlled cooling, dehumidification and heating. |
| EHC | Electric Heat Control. Heater unit with automatic heat control. |
| Electrolyte level | Fluid level in battery cells. |
| Environmental waste | Used oils, filters, etc., must be handled according to governing national laws and regulations. |
| Expansion tank | Tank for coolant. |
| Fixed displacement | Pump with fixed pump volume. |
| Hanging load | Lifted load. |
| Hub reduction | Type of final drive (often next to drive wheel) that reduces rpm and increases torque from the drivetrain. |
| Hydraulic oil | Oil for hydraulic system. See specifications in section <i>F Technical data</i> . |
| Hydraulic oil pump | Pump in hydraulic system. |

| Term | Description |
|--------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Hydraulic system | System that uses oil pressure to transfer power to different functions. |
| Indicator | Manual “sensor”, for example, shows that a filter is clogged and needs to be changed. |
| LC | Load centre. |
| Levelling | Attachment is tilted, for example, if load stands on uneven ground. |
| Lift capacity | Indicates machine’s maximal lift capacity. |
| Lifting point | Attaching point for lift device when lifting an object. |
| Low-emission engine | Engine with low emissions of hazardous substances. Manufactured according to regulations. |
| Machine model | Machine type. Indicated, for example: DRF 400-450. See also type designation. |
| Main fuse | Located by battery. Cuts off current all systems in machine. |
| Maintenance | Periodic maintenance actions so that machine functions safely and for long life. |
| OP | Overload Protection. Overload system to warn when machine is overloaded. |
| Operating hours | Number of hours machine has been in operation, shown on hour meter in cab. |
| Option | Optional equipment for machine. |
| Overload system | See OP (Overload Protection). |
| Pilot oil pressure | A low control pressure to, for example, a valve. |
| Planetary gear | Type of transmission with gears in constant engagement. |
| Product alternative | One of several alternatives is selected for a machine, i.e. engine alternative. |
| Proportional valve | An electro-magnetically controlled valve. If a current is applied, the valve is activated in proportion to the current’s amplitude. In simple terms, infinitely variable valve, as opposed to on/off valve. For example, on transmission’s valve housing. |
| Reachstacker | Machine with special top lift attachment for containers. |
| Refrigerant | Fluid/gas in air conditioning. May only be handled by authorized trained person. |
| Rotation yoke | Rotating unit on attachment, rotates attachment in relation to lift boom. |
| Securing machine for transport | Actions before transporting machine. |
| Serial number | Unique machine designation. On machine plate. |
| Service position | How machine should be safely positioned before service may be started. |
| Servo | A small user movement results in a big machine movement, i.e. power steering. |
| Servo pressure | A low control pressure to control a higher pressure, for example, to a valve. |
| Sideshift | Parallel sideways movement of attachment. |
| Solenoid valve | An electro-magnetically controlled valve. See also proportional valve. |
| Spirit Delta | Enclosed type of cab. |
| Spreading | Widening of attachment. |
| Start up | Start procedure for control and monitoring system (from powerless to supplied with voltage). |

| Term | Description |
|-----------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------|
| Steering axle | Wheel axle with steering. |
| Tilting | Load is leaned forward or backward. |
| Torque converter | Hydraulic, variable clutch. |
| Transmission oil | Oil for transmission and torque converter. See specifications in section <i>F Technical data</i> . |
| Twistlocks | Four lock pins, one in each corner of the attachment, pushed down in corresponding holes in container and twisted to lock the container when lifting. |
| Type designation | Indicates machine type and capacity. See also machine model. |
| Valve slide | Moveable part in valve. Determines oil's path. |
| Variable displacement | Adjustable volume (capacity) of a pump. |
| Variable pump | Pump with adjustable flow rate. |
| Wet brakes | Brake discs in oil-bath. |
| Working hydraulics | All load handling functions, i.e. lift and lower, tilt, sideshift, spreader and levelling. |

Index

| Designation | Tab | Group |
|----------------------------------------------|------------------------------------|--------------|
| A near-accident is a warning signal! | B Safety | - |
| About the documentation | A Foreword | - |
| About the machine version | A Foreword | - |
| About the Workshop Manual | A Foreword | - |
| Accelerator | 1 Engine | 1.1.2 |
| AC-compressor | 9 Frame, body, cab and accessories | 9.4.7 |
| Accumulator | 4 Brakes | 4.3.4 |
| Accumulator charging valve | 4 Brakes | 4.3.3 |
| Accumulator charging valve | 4 Brakes | 4.8.4 |
| Accumulator drain valve | 10 Common hydraulics | 10.2.1 |
| Accumulator servo circuit | 7 Load handling | 7.2.4 |
| Accumulator servo circuit | 7 Load handling | 7.3.4 |
| Additional functions | 7 Load handling | 7.10 |
| Air cleaning system | 1 Engine | 1.6.1 |
| Air distributor | 9 Frame, body, cab and accessories | 9.4.14 |
| Air intake and exhaust outlet | 1 Engine | 1.6 |
| Air pollution | B Safety | - |
| Air suspension | 9 Frame, body, cab and accessories | 9.3.5 |
| Air vents | 9 Frame, body, cab and accessories | 9.4.15 |
| Alternator | 11 Common electric | 11.4.1 |
| Alternator (generation) | 11 Common electric | 11.4 |
| Armrest | 9 Frame, body, cab and accessories | 9.3.8 |
| ATTACH | 8 Control system | 8.4.9 |
| Axial piston pump with variable displacement | 10 Common hydraulics | 10.4.2 |
| Back cushion | 9 Frame, body, cab and accessories | 9.3.2 |
| Back window | 9 Frame, body, cab and accessories | 9.9.4 |
| Back-up alarm | 9 Frame, body, cab and accessories | 9.7.5 |
| Back-up camera | 9 Frame, body, cab and accessories | 9.9.6 |
| Back-up lights | 9 Frame, body, cab and accessories | 9.6.5 |
| Batteries (storage) | 11 Common electric | 11.3 |
| Battery disconnecter | 11 Common electric | 11.2.1 |
| Body structure | 9 Frame, body, cab and accessories | 9.13 |

| Designation | Tab | Group |
|------------------------------------|------------------------------------|--------------|
| BOOM | 8 Control system | 8.4.8 |
| Brake lights | 9 Frame, body, cab and accessories | 9.6.4 |
| Brake oil filter | 4 Brakes | 4.3.2 |
| Brake oil filter | 4 Brakes | 4.5.2 |
| Brake oil filter | 4 Brakes | 4.8.12 |
| Brake oil pump | 4 Brakes | 4.3.1 |
| Brake oil pump | 4 Brakes | 4.5.1 |
| Brake oil pump | 4 Brakes | 4.8.3 |
| Brake oil tank | 4 Brakes | 4.8.1 |
| Brake pedal | 4 Brakes | 4.1.1 |
| Brake valve | 4 Brakes | 4.3.5 |
| Brakes | 4 Brakes | 4 |
| Breaking contact brake pressure | 4 Brakes | 4.3.7 |
| Breaking contact declutch | 2 Transmission | 2.8.2 |
| Breaking contact parking brake | 4 Brakes | 4.5.5 |
| Breather filter | 4 Brakes | 4.8.11 |
| Breather filter hydraulic oil tank | 10 Common hydraulics | 10.6.6 |
| Buzzer | 9 Frame, body, cab and accessories | 9.2.4 |
| By-pass valve cooler | 10 Common hydraulics | 10.6.5 |
| By-passing | 8 Control system | 8.2.2 |
| CAB | 8 Control system | 8.4.3 |
| Cab fan | 9 Frame, body, cab and accessories | 9.4.3 |
| Cab interia | 9 Frame, body, cab and accessories | 9.11 |
| Cab mounting | 9 Frame, body, cab and accessories | 9.10.3 |
| Cab structure and suspension | 9 Frame, body, cab and accessories | 9.10 |
| Cable harness | 11 Common electric | 11.5.5 |
| Cable harness transmission | 2 Transmission | 2.8.3 |
| Calibration | 8 Control system | 8.5.2 |
| CAN/POWER | 8 Control system | 8.4.1 |
| CAN-bus | 11 Common electric | 11.6.1 |
| CAN-bus driveline | 11 Common electric | 11.6.3 |
| Central lubrication | 9 Frame, body, cab and accessories | 9.14 |
| Circuit diagrams, compilation | E Schematics | 11 |
| CLIMATE | 8 Control system | 8.4.4 |

| Designation | Tab | Group |
|--------------------------------------|------------------------------------|--------------|
| Clothing etc. | B Safety | - |
| Collection block filtered return | 10 Common hydraulics | 10.5.4 |
| Collection block unfiltered return | 10 Common hydraulics | 10.5.5 |
| Common electric | 11 Common electric | 11 |
| Common electric | E Schematics | 11 |
| Common hydraulics | 10 Common hydraulics | 10 |
| Common hydraulics | E Schematics | 10 |
| Communication | 11 Common electric | 11.6 |
| Communication between PC and machine | 11 Common electric | 11.6.4 |
| Communication system | 9 Frame, body, cab and accessories | 9.7 |
| Complete machine | 0 Complete machine | - |
| Complete machine, description | 0 Complete machine | - |
| Component designations | E Schematics | 11 |
| Condenser | 9 Frame, body, cab and accessories | 9.4.8 |
| Conditions | A Foreword | - |
| Container counter | 7 Load handling | 7.10.3 |
| Control and monitoring system | D Error codes | 8 |
| Control lever | 7 Load handling | 7.1.1 |
| Control system | 8 Control system | 8 |
| Control system engine | 1 Engine | 1.9 |
| Control system transmission | 2 Transmission | 2.8 |
| Control unit engine | 1 Engine | 1.9.1 |
| Control unit transmission | 2 Transmission | 2.8.1 |
| Control units | 11 Common electric | 11.5.3 |
| Control valve attachment | 7 Load handling | 7.4.3 |
| Control valve attachment | 7 Load handling | 7.5.3 |
| Control valve attachment | 7 Load handling | 7.6.3 |
| Control valve attachment | 7 Load handling | 7.7.5 |
| Control valve attachment | 7 Load handling | 7.8.3 |
| Controls and instrumentation | 1 Engine | 1.1 |
| Controls and instrumentation | 2 Transmission | 2.1 |
| Controls and instrumentation | 4 Brakes | 4.1 |
| Controls and instrumentation | 5 Steering | 5.1 |
| Controls and instrumentation | 7 Load handling | 7.1 |

| Designation | Tab | Group |
|------------------------------|------------------------------------|--------------|
| Controls and instrumentation | 8 Control system | 8.1 |
| Controls and instrumentation | 9 Frame, body, cab and accessories | 9.1 |
| Conversion table, area | F Technical data | - |
| Conversion table, length | F Technical data | - |
| Conversion table, pressure | F Technical data | - |
| Conversion table, SI-units | F Technical data | - |
| Conversion table, weight | F Technical data | - |
| Conversion table, volume | F Technical data | - |
| Coolant | 1 Engine | 1.7.7 |
| Coolant | B Safety | - |
| Cooling | 2 Transmission | 2.7 |
| Cooling fan | 1 Engine | 1.7.5 |
| Cooling fan | 10 Common hydraulics | 10.6.3 |
| Cooling fan | 4 Brakes | 4.8.8 |
| Cooling system | 1 Engine | 1.7 |
| Copyright | A Foreword | - |
| Counterweights | 9 Frame, body, cab and accessories | 9.13.4 |
| Damping block tilt | 7 Load handling | 7.7.3 |
| Data and volume | F Technical data | - |
| Diagnostics | 8 Control system | 8.4 |
| Distribution block | 9 Frame, body, cab and accessories | 9.14.2 |
| Distribution of electricity | 11 Common electric | 11.5 |
| Documentation sections | A Foreword | - |
| Doors | 9 Frame, body, cab and accessories | 9.10.2 |
| Drive axle | 3 Driveline/axle | 3.3 |
| Drive axle block | 4 Brakes | 4.3.6 |
| Drive axle block | 4 Brakes | 4.8.5 |
| Driveline/axle | 3 Driveline/axle | 3 |
| Electric motors | B Safety | - |
| Electric protection | 11 Common electric | 11.2 |
| Electrical distribution box | 11 Common electric | 11.5.2 |
| Engine | 1 Engine | 1 |
| Engine | D Error codes | 1 |
| ENGINE | 8 Control system | 8.4.6 |

| Designation | Tab | Group |
|-------------------------------------------------------------|------------------------------------|--------------|
| Entertainment and communication | 9 Frame, body, cab and accessories | 9.8 |
| Environment | B Safety | - |
| Error code menu | 8 Control system | 8.1.10 |
| Error code menu, description | D Error codes | - |
| Error codes | D Error codes | - |
| Error codes engine (engine alternative Cummins QSM11) | D Error codes | 1 |
| Error codes engine (engine alternative Volvo) | D Error codes | 1 |
| Error codes engine, general | D Error codes | 1 |
| Error codes machine | D Error codes | 8 |
| Error codes transmission (transmission alternative TE32000) | D Error codes | 2 |
| Error codes, explanation | D Error codes | - |
| Exhaust system | 1 Engine | 1.6.3 |
| Expansion valve | 9 Frame, body, cab and accessories | 9.4.11 |
| Extension cylinder | 7 Load handling | 7.3.8 |
| EXTRA | 8 Control system | 8.4.11 |
| Feedback | A Foreword | - |
| Fenders | 9 Frame, body, cab and accessories | 9.13.1 |
| Fire and explosion risks | B Safety | - |
| Fire extinguisher | 9 Frame, body, cab and accessories | 9.2.3 |
| Flex plates | 2 Transmission | 2.2.1 |
| Flooring material | 9 Frame, body, cab and accessories | 9.11.4 |
| Fluid or gas under pressure | B Safety | - |
| Footstep and rail | 9 Frame, body, cab and accessories | 9.13.3 |
| Foreword | A Foreword | - |
| Form for copying | A Foreword | - |
| Frame | 9 Frame, body, cab and accessories | 9.12 |
| Frame, body, cab and accessories | 9 Frame, body, cab and accessories | 9 |
| Framework cab | 9 Frame, body, cab and accessories | 9.10.1 |
| Fresh air damper or recirculation damper | 9 Frame, body, cab and accessories | 9.4.2 |
| Fresh air filter | 9 Frame, body, cab and accessories | 9.4.1 |
| Fuel system | 1 Engine | 1.2 |
| Fuel system | B Safety | - |
| Fuel tank | 1 Engine | 1.2.1 |
| Function descriptions | A Foreword | - |

| Designation | Tab | Group |
|-------------------------------------------------------------|------------------------------------|--------------|
| Function group structure | A Foreword | - |
| Fuses | 11 Common electric | 11.2.2 |
| Gear and multi-function lever | 2 Transmission | 2.1.1 |
| Gear and multi-function lever | 9 Frame, body, cab and accessories | 9.1.1 |
| Gear pump with fixed displacement | 10 Common hydraulics | 10.4.1 |
| General | A Foreword | - |
| General | B Safety | - |
| General | B Safety | - |
| General safety information | B Safety | - |
| Glass/windows/mirrors | 9 Frame, body, cab and accessories | 9.9 |
| Headlights | 9 Frame, body, cab and accessories | 9.6.1 |
| Heat exchanger cooling | 9 Frame, body, cab and accessories | 9.4.13 |
| Heat exchanger heat | 9 Frame, body, cab and accessories | 9.4.4 |
| Heating coils | 9 Frame, body, cab and accessories | 9.3.3 |
| Height limitation | 8 Control system | 8.2.4 |
| Hood engine compartment | 9 Frame, body, cab and accessories | 9.13.2 |
| Horn | 9 Frame, body, cab and accessories | 9.7.1 |
| Hoses, pipes and valves | 10 Common hydraulics | 10.5 |
| Humidity filter | 9 Frame, body, cab and accessories | 9.4.9 |
| HVAC | 9 Frame, body, cab and accessories | 9.4 |
| HYD | 8 Control system | 8.4.5 |
| Hydraulic and brake systems, depressurizing | B Safety | - |
| Hydraulic aux. | 10 Common hydraulics | 10.7 |
| Hydraulic cylinders | 10 Common hydraulics | 10.7.1 |
| Hydraulic diagram basic machine | E Schematics | 10 |
| Hydraulic diagram cab lift and support jacks | E Schematics | 10 |
| Hydraulic diagram combi attachment (part 1 of 3) | E Schematics | 10 |
| Hydraulic diagram combi attachment (part 2 of 3) | E Schematics | 10 |
| Hydraulic diagram combi attachment (part 3 of 3) | E Schematics | 10 |
| Hydraulic diagram joystick steering | E Schematics | 10 |
| Hydraulic diagram sliding cab | E Schematics | 10 |
| Hydraulic diagram sliding cab and support jacks | E Schematics | 10 |
| Hydraulic diagram top lift | E Schematics | 10 |
| Hydraulic diagram top lift, tilt lock and controllable tilt | E Schematics | 10 |

| Designation | Tab | Group |
|----------------------------------------------------------------------------------|------------------------------------|--------------|
| Hydraulic diagram top lift, tilt lock, controllable tilt and hydraulic levelling | E Schematics | 10 |
| Hydraulic diagrams, compilation | E Schematics | 10 |
| Hydraulic oil | 10 Common hydraulics | 10.6.8 |
| Hydraulic oil cooler | 10 Common hydraulics | 10.6.2 |
| Hydraulic oil filter | 10 Common hydraulics | 10.6.7 |
| Hydraulic oil fine-filter | 10 Common hydraulics | 10.6.9 |
| Hydraulic oil pump | 5 Steering | 5.2.1 |
| Hydraulic oil pump | 7 Load handling | 7.2.1 |
| Hydraulic oil pump | 7 Load handling | 7.3.1 |
| Hydraulic oil pump | 7 Load handling | 7.4.1 |
| Hydraulic oil pump | 7 Load handling | 7.5.1 |
| Hydraulic oil pump | 7 Load handling | 7.6.1 |
| Hydraulic oil pump | 7 Load handling | 7.7.1 |
| Hydraulic oil pump | 7 Load handling | 7.8.1 |
| Ignition | 1 Engine | 1.1.1 |
| Important information | A Foreword | - |
| Initiation | 8 Control system | 8.5.1 |
| Instrument and control panels | 9 Frame, body, cab and accessories | 9.11.1 |
| Insulation | 9 Frame, body, cab and accessories | 9.11.5 |
| Intercooler | 1 Engine | 1.6.4 |
| Interior details plastic | 9 Frame, body, cab and accessories | 9.11.2 |
| Interior details textile | 9 Frame, body, cab and accessories | 9.11.3 |
| Interior lighting | 9 Frame, body, cab and accessories | 9.6.12 |
| Levelling | 7 Load handling | 7.8 |
| Levelling cylinders | 7 Load handling | 7.8.7 |
| Lift boom | 7 Load handling | 7.2.10 |
| Lift boom | 7 Load handling | 7.3.10 |
| Lift boom | 7 Load handling | 7.7.8 |
| Lift capacity and dimensions | F Technical data | - |
| Lift cylinder | 7 Load handling | 7.2.8 |
| Lift legs | 7 Load handling | 7.9.2 |
| Lifting equipment | B Safety | - |
| Lifting heavy components | B Safety | - |
| Lifting/lowering | 7 Load handling | 7.2 |

| Designation | Tab | Group |
|-------------------------------------------|------------------------------------|--------------|
| Lighting system | 9 Frame, body, cab and accessories | 9.6 |
| LIGHTS | 8 Control system | 8.4.2 |
| Link arm | 5 Steering | 5.2.6 |
| Load carrying | 7 Load handling | 7.9 |
| Load centre limitation | 8 Control system | 8.2.3 |
| Load handling | 7 Load handling | 7 |
| Lock valve tilt | 7 Load handling | 7.7.4 |
| Longitudinal displacement of cab | 9 Frame, body, cab and accessories | 9.10.4 |
| Lubrication | 2 Transmission | 2.6 |
| Machine card | A Foreword | - |
| Main beam attachment | 7 Load handling | 7.4.7 |
| Main beam attachment | 7 Load handling | 7.5.9 |
| Making contact brake light | 4 Brakes | 4.3.8 |
| Manoeuvre switch | 11 Common electric | 11.2.3 |
| Manoeuvre switch | 9 Frame, body, cab and accessories | 9.2.1 |
| Manoeuvre valve lift, lower, protrude | 7 Load handling | 7.2.5 |
| Manoeuvre valve lift, lower, protrude | 7 Load handling | 7.3.5 |
| Manoeuvre valve mini-wheel/lever steering | 5 Steering | 5.2.10 |
| Mechanical seat adjustment | 9 Frame, body, cab and accessories | 9.3.6 |
| Mini-wheel | 5 Steering | 5.1.2 |
| Monitor back-up camera | 9 Frame, body, cab and accessories | 9.9.7 |
| Monitoring | 8 Control system | 8.2 |
| Noise | B Safety | - |
| Nut, washer and clamp (wedge) | 6 Suspension | 6.3.3 |
| Oil brake system | 4 Brakes | 4.8.14 |
| Oil cooler | 2 Transmission | 2.6.3 |
| Oil cooler | 2 Transmission | 2.7.3 |
| Oil cooler | 4 Brakes | 4.8.7 |
| Oils | B Safety | - |
| Oils and lubricants, recommendation | F Technical data | - |
| OP | 8 Control system | 8.4.10 |
| Ordering of documentation | A Foreword | - |
| Over-centre valve levelling | 7 Load handling | 7.8.5 |
| Overloading system | 8 Control system | 8.2.1 |

| Designation | Tab | Group |
|-----------------------------|------------------------------------|--------------|
| Paint/coatings | 9 Frame, body, cab and accessories | 9.15 |
| Parking brake system | 4 Brakes | 4.5 |
| Parking brake unit | 4 Brakes | 4.5.4 |
| Passenger seat | 9 Frame, body, cab and accessories | 9.3.7 |
| Pipes | 9 Frame, body, cab and accessories | 9.14.3 |
| Pipes and hoses | 10 Common hydraulics | 10.2.3 |
| Pipes and hoses | 10 Common hydraulics | 10.3.2 |
| Pipes and hoses | 10 Common hydraulics | 10.4.3 |
| Pipes and hoses | 10 Common hydraulics | 10.5.1 |
| Pipes and hoses | 10 Common hydraulics | 10.6.10 |
| Pipes and hoses | 4 Brakes | 4.3.10 |
| Pipes and hoses | 4 Brakes | 4.5.6 |
| Pipes and hoses | 4 Brakes | 4.8.13 |
| Pipes and hoses | 5 Steering | 5.2.13 |
| Pipes and hoses | 7 Load handling | 7.2.12 |
| Pipes and hoses | 7 Load handling | 7.3.12 |
| Pipes and hoses | 7 Load handling | 7.4.9 |
| Pipes and hoses | 7 Load handling | 7.5.12 |
| Pipes and hoses | 7 Load handling | 7.6.12 |
| Pipes and hoses | 7 Load handling | 7.7.11 |
| Pipes and hoses | 7 Load handling | 7.8.10 |
| Plug-in heater | 1 Engine | 1.7.10 |
| Position lights | 9 Frame, body, cab and accessories | 9.6.2 |
| Position sensor positioning | 7 Load handling | 7.5.10 |
| Positioning | 7 Load handling | 7.5 |
| Positioning beam | 7 Load handling | 7.5.8 |
| Positioning chains | 7 Load handling | 7.5.7 |
| Positioning motor | 7 Load handling | 7.5.6 |
| Power-assisted system | 5 Steering | 5.2 |
| Pressure monitor | 9 Frame, body, cab and accessories | 9.4.10 |
| Pressure reducer | 7 Load handling | 7.2.3 |
| Pressure reducer | 7 Load handling | 7.3.3 |
| Preventive maintenance | C Preventive maintenance | - |
| Priority valve | 10 Common hydraulics | 10.5.2 |

| Designation | Tab | Group |
|------------------------------------------------|------------------------------------|--------------|
| Priority valve | 5 Steering | 5.2.2 |
| Product alternatives and optional equipment | A Foreword | - |
| Propeller shaft | 3 Driveline/axle | 3.2 |
| Protection and emergency equipment | 9 Frame, body, cab and accessories | 9.2 |
| Protruding | 7 Load handling | 7.3 |
| Pump unit | 9 Frame, body, cab and accessories | 9.14.1 |
| Pumps | 10 Common hydraulics | 10.4 |
| Radiator and expansion tank | 1 Engine | 1.7.4 |
| Read maintenance manual | A Foreword | - |
| Read operator's manual | A Foreword | - |
| Reading instructions | A Foreword | - |
| Reading out error code | D Error codes | - |
| Rear lights | 9 Frame, body, cab and accessories | 9.6.3 |
| Rear-view mirror | 9 Frame, body, cab and accessories | 9.9.5 |
| Redundant CAN-bus | 11 Common electric | 11.6.2 |
| References between different information types | A Foreword | - |
| Refrigerant | B Safety | - |
| Rims | 6 Suspension | 6.3.2 |
| Ring gear | 7 Load handling | 7.6.8 |
| RMI | 8 Control system | 8.4.13 |
| RMI (Remote Machine Interface) | 11 Common electric | 11.6.5 |
| Roof window | 9 Frame, body, cab and accessories | 9.9.3 |
| Rotating beacon | 9 Frame, body, cab and accessories | 9.6.8 |
| Rotating beacon | 9 Frame, body, cab and accessories | 9.7.3 |
| Rotating components and tools | B Safety | - |
| Rotation | 7 Load handling | 7.6 |
| Rotation motor unit | 7 Load handling | 7.6.6 |
| Rotation yoke | 7 Load handling | 7.6.7 |
| Rotation yoke | 7 Load handling | 7.7.9 |
| Safety | B Safety | - |
| Safety concerns everyone! | B Safety | - |
| Safety instructions | B Safety | - |
| Seat | 9 Frame, body, cab and accessories | 9.3 |
| Seat belt | 9 Frame, body, cab and accessories | 9.2.2 |

| Designation | Tab | Group |
|-----------------------------------------|------------------------------------|--------------|
| Seat cushion | 9 Frame, body, cab and accessories | 9.3.1 |
| Security valves | 10 Common hydraulics | 10.2 |
| Sensor boom angle | 7 Load handling | 7.2.11 |
| Sensor boom length | 7 Load handling | 7.3.11 |
| Sensor brake oil temperature | 4 Brakes | 4.8.10 |
| Sensor cab temperature | 9 Frame, body, cab and accessories | 9.4.17 |
| Sensor coolant temperature | 9 Frame, body, cab and accessories | 9.4.12 |
| Sensor driver in seat | 9 Frame, body, cab and accessories | 9.3.9 |
| Sensor engine temperature | 9 Frame, body, cab and accessories | 9.4.6 |
| Sensor fuel level | 1 Engine | 1.2.2 |
| Sensor hydraulic oil temperature | 10 Common hydraulics | 10.6.4 |
| Sensor hydraulic pressure lift cylinder | 7 Load handling | 7.2.9 |
| Sensor outer temperature | 9 Frame, body, cab and accessories | 9.4.18 |
| Sensor rotation stop | 7 Load handling | 7.6.10 |
| Sensor steering wheel angle | 5 Steering | 5.2.12 |
| Sensor temperature fan air out | 9 Frame, body, cab and accessories | 9.4.16 |
| Service brake system | 4 Brakes | 4.3 |
| Service indicator | 8 Control system | 8.2.6 |
| Service position | B Safety | - |
| Servo filter | 7 Load handling | 7.2.2 |
| Servo filter | 7 Load handling | 7.3.2 |
| Setup | 8 Control system | 8.5 |
| Several mechanics on the same machine | B Safety | - |
| Shock absorbers | 9 Frame, body, cab and accessories | 9.3.4 |
| Shuttle valve | 10 Common hydraulics | 10.5.3 |
| Shuttle valve | 5 Steering | 5.2.9 |
| Shuttle valve | 7 Load handling | 7.2.6 |
| Shuttle valve | 7 Load handling | 7.3.6 |
| Shuttle valve | 7 Load handling | 7.4.4 |
| Shuttle valve | 7 Load handling | 7.5.4 |
| Shuttle valve | 7 Load handling | 7.6.4 |
| Shuttle valve | 7 Load handling | 7.7.6 |
| Shuttle valve | 7 Load handling | 7.8.4 |
| Shuttle valve mini-wheel/lever steering | 5 Steering | 5.2.11 |

| Designation | Tab | Group |
|-------------------------------------------------------------------|------------------------------------|--------------|
| Side window | 9 Frame, body, cab and accessories | 9.9.2 |
| Side-shift | 7 Load handling | 7.4 |
| Sideshift cylinder | 7 Load handling | 7.4.5 |
| Sideshift frame | 7 Load handling | 7.4.6 |
| Sideshift frame | 7 Load handling | 7.6.9 |
| Sideshift frame | 7 Load handling | 7.8.8 |
| Solenoid valve parking brake | 4 Brakes | 4.5.3 |
| Solvents | B Safety | - |
| Speed limitation | 8 Control system | 8.2.5 |
| Start battery | 11 Common electric | 11.3.1 |
| Start motor | 1 Engine | 1.11.1 |
| Start/stopp | 1 Engine | 1.11 |
| Steering | 5 Steering | 5 |
| Steering axle cradle | 5 Steering | 5.2.5 |
| Steering axle cradle | 6 Suspension | 6.2.1 |
| Steering cylinder | 5 Steering | 5.2.4 |
| Steering lever | 5 Steering | 5.1.3 |
| Steering valve | 5 Steering | 5.2.3 |
| Stop device | 1 Engine | 1.11.2 |
| Storage | A Foreword | - |
| Summer automatic positioning 20'-40' | 7 Load handling | 7.5.13 |
| Sunshield curtains | 9 Frame, body, cab and accessories | 9.11.6 |
| Support jacks | 7 Load handling | 7.10.1 |
| Suspension | 6 Suspension | 6 |
| Suspension mounting | 6 Suspension | 6.2 |
| Switch automatic spreading | 7 Load handling | 7.1.3 |
| Switch by-passing of load centre limitation and height limitation | 8 Control system | 8.1.4 |
| Switch lock twistlocks | 7 Load handling | 7.1.2 |
| Switch stop at 30' or 35' | 7 Load handling | 7.1.5 |
| Switch travel direction indicator | 9 Frame, body, cab and accessories | 9.1.22 |
| Synchronous lift | 7 Load handling | 7.10.4 |
| Tank | 10 Common hydraulics | 10.3.1 |
| Tank heater | 10 Common hydraulics | 10.6.1 |
| Tank heater | 4 Brakes | 4.8.2 |

| Designation | Tab | Group |
|-------------------------------------------------|------------------------------------|--------------|
| Tanks and accumulators | 10 Common hydraulics | 10.3 |
| Technical data | F Technical data | - |
| Temperature control, cleaning and hydraulic oil | 10 Common hydraulics | 10.6 |
| Temperature control, filtration and brake fluid | 4 Brakes | 4.8 |
| Tensioned springs | B Safety | - |
| Terminal table | 9 Frame, body, cab and accessories | 9.11.7 |
| Thermal by-pass valve | 4 Brakes | 4.8.9 |
| Tightening torque, ORFS connections | F Technical data | - |
| Tightening torques, recommendations | F Technical data | - |
| Tilt | 7 Load handling | 7.7 |
| Tilt cylinder | 7 Load handling | 7.7.7 |
| Torque converter/clutch system | 2 Transmission | 2.2 |
| TRANSM | 8 Control system | 8.4.7 |
| Transmission | 2 Transmission | 2 |
| Transmission | D Error codes | 2 |
| Travel direction indicators | 9 Frame, body, cab and accessories | 9.6.6 |
| Troubleshooting cable harness | 0 Complete machine | - |
| Troubleshooting hydraulic hoses | 0 Complete machine | - |
| Troubleshooting with error code, example | 0 Complete machine | - |
| Troubleshooting without an error code, example | 0 Complete machine | - |
| Troubleshooting, general work instructions | 0 Complete machine | - |
| Twistlocks | 7 Load handling | 7.9.1 |
| Tyre and rim system | 6 Suspension | 6.3 |
| Tyre system | B Safety | - |
| Tyres | 6 Suspension | 6.3.1 |
| Unit explanations | F Technical data | - |
| Unloading valve attachment | 10 Common hydraulics | 10.2.2 |
| Unloading valve attachment | 7 Load handling | 7.4.8 |
| Unloading valve attachment | 7 Load handling | 7.5.11 |
| Unloading valve attachment | 7 Load handling | 7.6.11 |
| Unloading valve attachment | 7 Load handling | 7.7.10 |
| Unloading valve attachment | 7 Load handling | 7.8.9 |
| Valve block levelling cylinders | 7 Load handling | 7.8.6 |
| Valve block lift cylinder | 7 Load handling | 7.2.7 |

| Designation | Tab | Group |
|---------------------------------|------------------------------------|--------------|
| Valve block positioning motor | 7 Load handling | 7.5.5 |
| Valve block protrude cylinder | 7 Load handling | 7.3.7 |
| Valve block pump unloading | 7 Load handling | 7.3.9 |
| Valve block rotation motor | 7 Load handling | 7.6.5 |
| Valve block top lift hydraulics | 7 Load handling | 7.4.2 |
| Valve block top lift hydraulics | 7 Load handling | 7.5.2 |
| Valve block top lift hydraulics | 7 Load handling | 7.6.2 |
| Valve block top lift hydraulics | 7 Load handling | 7.7.2 |
| Valve block top lift hydraulics | 7 Load handling | 7.8.2 |
| Warning information | A Foreword | - |
| Warning light Hazard | 9 Frame, body, cab and accessories | 9.6.7 |
| Warning light Hazard | 9 Frame, body, cab and accessories | 9.7.2 |
| Warning parking brake | 9 Frame, body, cab and accessories | 9.7.4 |
| Washer motor and reservoir | 9 Frame, body, cab and accessories | 9.5.4 |
| Water valve | 9 Frame, body, cab and accessories | 9.4.5 |
| Weight indicator | 7 Load handling | 7.10.2 |
| Vertically adjustable cab | 9 Frame, body, cab and accessories | 9.10.5 |
| Wheel brake | 4 Brakes | 4.8.6 |
| Wheel brakes | 4 Brakes | 4.3.9 |
| Wheel hub | 5 Steering | 5.2.8 |
| Wheel hub | 6 Suspension | 6.2.3 |
| Wheel spindle | 5 Steering | 5.2.7 |
| Wheel spindle | 6 Suspension | 6.2.2 |
| Vibrations | B Safety | - |
| Windscreen | 9 Frame, body, cab and accessories | 9.9.1 |
| Wiper front | 9 Frame, body, cab and accessories | 9.5.1 |
| Wiper motor front | 9 Frame, body, cab and accessories | 9.5.5 |
| Wiper motor rear | 9 Frame, body, cab and accessories | 9.5.7 |
| Wiper motor roof | 9 Frame, body, cab and accessories | 9.5.6 |
| Wiper rear | 9 Frame, body, cab and accessories | 9.5.3 |
| Wiper roof | 9 Frame, body, cab and accessories | 9.5.2 |
| Wiper/washer system | 9 Frame, body, cab and accessories | 9.5 |
| Wiring diagrams, description | E Schematics | 11 |
| Voltage feed | 11 Common electric | 11.5.1 |

| Designation | Tab | Group |
|--------------------------|------------------------------------|--------------|
| Work light attachment | 9 Frame, body, cab and accessories | 9.6.11 |
| Work light boom | 9 Frame, body, cab and accessories | 9.6.10 |
| Work light cab | 9 Frame, body, cab and accessories | 9.6.9 |
| Working under machine | B Safety | - |
| Workshop manual contents | A Foreword | - |
| Writing-desk | 9 Frame, body, cab and accessories | 9.11.8 |